

E-I/O

EtherCAT[®] I/O Modules



Copyright © Berghof Automation GmbH

Reproduction and duplication of this document and utilisation and communication of its content is prohibited, unless with our express permission. All rights reserved. Damages will be payable in case of infringement.

Disclaimer

The content of this publication was checked for compliance with the hardware and software described. However, discrepancies may arise, therefore no liability is assumed regarding complete compliance. The information in this document will be checked regularly and all necessary corrections will be included in subsequent editions. Suggestions for improvements are always welcome.

Subject to technical changes.

Trademarks

- CANtrol® and CANtrol®- dialog are registered trademarks of Berghof Automation GmbH
- Microsoft®, Windows® and the Windows® Logo are registered trademarks of Microsoft Corporation in the USA and other countries.
- EtherCAT® is a registered trademark and patented technology, licensed from Beckhoff Automation GmbH, Germany.
- CiA® and CANopen® are registered community trademarks of CAN in Automation e.V.

All rights reserved by the individual copyright holders.

General Information on this Manual

This equipment manual contains product-specific information valid at the time of publication.

This equipment manual is only complete in conjunction with the product-related hardware and software user manuals required for the individual application.

- [Content](#)
- [Completeness](#)

You can reach us at:

Berghof Automation GmbH

Harretstr. 1

72800 Eningen

Germany

T +49.7121.894-0

F +49.7121.894-100

e-mail: controls@berghof.com

www.berghof.com

Berghof Automation GmbH works in accordance with DIN EN ISO 9001:2000.

Update

Version	Date	Subject
1.01	16.10.2012	First Version
1.1	09.11.2012	Update of document title and the trademarks
1.2	04.04.2013	Transition in new CD Update of chapter 'Temperature modules' with module AI8-Pt/Ni100 Update of 'Technical data' in all chapters
1.3	25.07.2013	Update of tables 'Analogue values current' and 'Analogue values voltage' Update of table 'Analogue outputs' in chapter 'Analogue outputs voltage / current AO4-U/I', section 'Function'
1.4	20.06.2017	New corporate name 'Berghof Automation GmbH' New EMC Directive Addition of section 'Installation' in chapter 'System description EtherCAT I/O Modules' Addition of chapter 'System description EtherCAT I/O Modules' with section 'Technical data (overview)' Addition of new module E-I/O DO8 Relais NO 24V Addition of new module E-I/O DO8 Relais NO 230VAC Addition of new module E-I/O BK DI16/DO16 1MS/0,5A Update of section 'Analogue outputs voltage / current AO4-U/I', 'Technical data' Update of section 'Technical data' in chapter 'Counter modules' Update of flash code of EtherCAT LED of all modules Update of 'Technical data' in all chapters Chapter 'Communication modules' is dropped Update of chapter 'Annex' UL certification
1.5	24.11.2017	New title page Updating label of various modules Updating various graphics Update of section 'Counters with analogues outputs COUNTER/POS12 5V', 'Technical data' Addition of section 'Overview E-I/O Modules' in chapter 'System description EtherCAT I/O Modules' Addition of new module E-I/O AI4-I 12BIT CoE Addition of new module E-I/O AI8-I 12BIT CoE Addition of new module E-I/O AI4/8-U 13BIT CoE Addition of new module E-I/O AI8/16-U 13BIT CoE Addition of new module E-I/O AI4-PT/NI/THERMO 16BIT CoE Addition of new module E-I/O AI8-PT/NI/THERMO 16BIT CoE Deletion of module E-I/O COUNTER2 5V

Version	Date	Subject
1.6	13.02.2018	Update of section ,Technical data' in chapter ,Digital modules with integrated bus coupler' Update of section ,Overview E-I/O Modules' in chapter ,System description EtherCAT I/O Modules' Addition of new module E-I/O AO4-U/I 16BIT CoE

Contents

1.	GENERAL INFORMATION	11
1.1.	About This Manual	11
1.2.	Hazard Categories and Terminology	12
1.3.	Conformity Declaration	12
1.4.	Qualified Personnel	13
1.5.	Due Diligence	13
1.5.1.	Working on the controller module	13
1.6.	Use as Prescribed	14
2.	INTRODUCTION ETHERCAT I/O MODULES	15
2.1.	EtherCAT - Ethernet Control Automation Technology	15
2.2.	CANtrol - the automation platform	15
2.3.	E-I/O - CANtrol EtherCAT I/O-System	16
2.4.	Electromagnetic compatibility	17
2.4.1.	Definition	17
2.4.2.	Interference emission	17
2.4.3.	General notes on installation	17
2.4.4.	Electrical immission safeguard	17
2.4.5.	Cable routing and wiring	18
2.4.6.	Location of installation	18
2.4.7.	Particular sources of interference	18
3.	SYSTEM DESCRIPTION ETHERCAT I/O MODULES	19
3.1.	Mechanical design	19
3.1.1.	Earth	20
3.1.2.	Installation	21
	Installation order within an E-I/O system	21
3.2.	System power supply	23
3.2.1.	General	23
3.2.2.	Bus coupler	23
3.2.3.	I/O Modules	23
3.3.	Status LEDs	24
3.3.1.	"EtherCAT" LED	24
3.3.2.	"In" LED, "Out" LED	24
3.3.3.	"I/O" LED	24
3.3.4.	"Power" LED	24
3.4.	Technical data (overview)	25
3.5.	E-I/O Modules (overview)	26
4.	BUS COUPLER	27
4.1.	Terminals	27
4.2.	Status LEDs	27

4.3.	Function	28
4.4.	Technical data	29
5.	DIGITAL MODULES WITH INTEGRATED BUS COUPLER	31
5.1.	Terminals	31
5.2.	Status LEDs	31
5.3.	Function	33
5.4.	Technical data	34
6.	DIGITAL MODULES	35
6.1.	Digital in- and outputs DI16 / DO16	35
6.1.1.	Terminals	35
6.1.2.	Status LEDs	35
6.1.3.	Function	37
6.1.4.	Technical data	37
6.2.	Digital inputs DI32	38
6.2.1.	Terminals	38
6.2.2.	Status LEDs	38
6.2.3.	Function	39
6.2.4.	Technical data	39
6.3.	Digital inputs DI16	40
6.3.1.	Terminals	40
6.3.2.	Status LEDs	40
6.3.3.	Function	41
6.3.4.	Technical data	41
6.4.	Digital outputs DO16	42
6.4.1.	Terminals	42
6.4.2.	Status LEDs	42
6.4.3.	Function	43
6.4.4.	Technical data	44
6.5.	Digital outputs DO8 RELAIS NO 24V	45
6.5.1.	Terminals	45
6.5.2.	Status LEDs	45
6.5.3.	Function	46
6.5.4.	Technical data	47
6.6.	Digital outputs DO8 RELAIS NO 230VAC	48
6.6.1.	Terminals	48
6.6.2.	Status LEDs	48
6.6.3.	Function	49
6.6.4.	Technical data	50
7.	ANALOGUE MODULES	51
7.1.	Analogue inputs for current measurement AI4-I	51
7.1.1.	Terminals	51
7.1.2.	Status LEDs	51
7.1.3.	Function	52
7.1.4.	Technical data	57

7.2. Analogue inputs for current measurement AI8-I	58
7.2.1. Terminals.....	58
7.2.2. Status LEDs	58
7.2.3. Function	59
7.2.4. Technical data	65
7.3. Analogue inputs for current measurement AI4-I 12BIT CoE	66
7.3.1. Terminals.....	66
7.3.2. Status LEDs	66
7.3.3. Function	67
7.3.4. Technical data	74
7.4. Analogue inputs for current measurement AI8-I 12BIT CoE	75
7.4.1. Terminals.....	75
7.4.2. Status LEDs	75
7.4.3. Function	76
7.4.4. Technical data	83
7.5. Analogue inputs for voltage measurement AI4/8-U.....	84
7.5.1. Terminals.....	84
7.5.2. Status LEDs	84
7.5.3. Function	85
7.5.4. Technical data	89
7.6. Analogue inputs for voltage measurement AI4/8-U 13BIT CoE.....	90
7.6.1. Terminals.....	90
7.6.2. Status LEDs	90
7.6.3. Function	91
7.6.4. Technical data	98
7.7. Analogue inputs for voltage measurement AI8/16-U 13BIT CoE.....	99
7.7.1. Terminals.....	99
7.7.2. Status LEDs	99
7.7.3. Function	100
7.7.4. Technical data	108
7.8. Analogue outputs voltage / current AO4-U/I	109
7.8.1. Terminals.....	109
7.8.2. Status LEDs	109
7.8.3. Function	111
7.8.4. Technical data	114
7.9. Analogue outputs voltage / current AO4-U/I 16BIT CoE	115
7.9.1. Terminals.....	115
7.9.2. Status LEDs	115
7.9.3. Function	117
7.9.4. Technical data	123
8. TEMPERATURE MODULES	125
8.1. Analogue temperature inputs AI4-PT/NI100, AI4-PT/NI1000	125
8.1.1. Terminals.....	125
8.1.2. Status LEDs	125
8.1.3. Function	126
8.1.4. Technical data AI4-PT/NI100.....	130
8.1.5. Technical data AI4-PT/NI1000.....	131

8.2.	Analogue temperature inputs AI8-PT/NI100	132
8.2.1.	Terminals	132
8.2.2.	Status LEDs	132
8.2.3.	Function	133
8.2.4.	Technical data AI8-PT/NI100	137
8.3.	Analogue temperature inputs AI4-THERMO 16BIT	138
8.3.1.	Terminals	138
8.3.2.	Status LEDs	138
8.3.3.	Function	139
8.3.4.	Technical data	142
8.4.	Analogue temperature inputs AI4-PT/NI/THERMO 16BIT CoE	143
8.4.1.	Terminals	143
8.4.2.	Status LEDs	143
8.4.3.	Function	145
8.4.4.	Technical data	152
8.5.	Analogue temperature inputs AI8-PT/NI/THERMO 16BIT CoE	154
8.5.1.	Terminals	154
8.5.2.	Status LEDs	154
8.5.3.	Function	156
8.5.4.	Technical data	166
9.	COUNTER MODULES	169
9.1.	Counters with analogues outputs COUNTER/POS12 5V	169
9.1.1.	Terminals	169
9.1.2.	Status LEDs	170
9.1.3.	Function	171
9.1.4.	Controlling and watching the entire module	172
9.1.5.	Controlling / Watching Counter 1	173
9.1.6.	Counter values of Zähler 1 (Counter 1)	176
9.1.7.	Digital I/Os	177
9.1.8.	Analogue outputs (COUNTER/POS12 5V only)	181
9.1.9.	Examples	182
9.1.10.	Technical data	186
10.	EXTENDER	189
10.1.	EXTENDER 2 PORT	189
10.1.1.	Terminals	189
10.1.2.	Status LEDs	190
10.1.3.	Function	190
10.1.4.	Technical data	191
11.	SUPPLEMENT	193
11.1.	POTENTIALVERTEILER 2x16 (Potential distributor)	193
11.1.1.	Terminals	193
11.1.2.	Status LEDs	193
11.1.3.	Function	193
11.1.4.	Technical data	194
11.2.	SCHIRMANSCHLUSSKLEMME (Shield connection terminal block)	194
11.2.1.	Terminals	194

11.2.2. Function 195

11.2.3. Technical data 195

12. ANNEX..... 197

12.1. Environmental Protection..... 197

12.1.1. Emission..... 197

12.1.2. Disposal 197

12.2. Maintenance/Upkeep..... 197

12.3. Repairs/Service 197

12.3.1. Warranty..... 197

12.4. Product identification 198

Product identification descriptions (example) 198

12.5. Addresses and Bibliography / Standards 199

12.5.1. Addresses 199

12.5.2. Bibliography / Standards 200

Blank page

1. General Information

Documentation

This equipment manual is intended for qualified personnel and contains information regarding mounting, installation, commissioning and maintenance. The information contained in this manual is subject to change without prior notice.

1.1. About This Manual

This equipment manual is an integral part of the product. Make sure the equipment manual is always available near the product's point-of-employment. The manual contains information about the following topics:

- Areas of application;
- Safety;
- Mechanical construction;
- Electrical construction;
- Connections;
- Commissioning;
- Care and maintenance;
- Decommissioning;
- Disposal.

1.2. Hazard Categories and Terminology

The indications described below are used in connection with safety instructions you will need to observe for your own personal safety and the avoidance of damage to property.

These instructions are emphasised by bordering and/or shading and a bold-printed indication, their meaning being as follows:

	<p>Immediate danger</p> <p>Failure to observe the information indicated by this warning will result in death, serious injury or extensive property damage</p>
	<p>Potential danger</p> <p>Failure to observe the information indicated by this warning may result in death, serious injury or extensive property damage</p>
	<p>Danger</p> <p>Failure to observe the information indicated by this warning may result in injury or property damage</p>
	<p>No hazard</p> <p>Information indicated in this manner provides additional notes concerning the product</p>

1.3. Conformity Declaration

The EtherCAT I/O Modules comply with and make allowance for the following directives and standards

- **EMC Directive 2014/30/EU**
- **RoHS-2 – Directive 2011/65/EU**
- **IEC 61131-2:2007** Programmable controllers
Part 2: Equipment requirements and tests
- **UL 508:2013-10** Industrial Control Equipment
17th Edition / 1999-01-28

1.4. Qualified Personnel

Only qualified personnel may install, operate and maintain the EtherCAT I/O Modules.

Within the context of this documentation and the safety information it contains, qualified personnel constitutes trained specialists who have the authority to mount, install, commission, ground and identify equipment, systems and power circuits in accordance with the standards of safety technology, and who are familiar with the safety concepts of automation technology.

1.5. Due Diligence

The operator, or the processor (OEM) must ensure that

- the EtherCAT I/O Modules are only used for the purpose for which they are intended;
- the EtherCAT I/O Modules are only operated in impeccable full working order;
- the user manual is always available in full and in a legible condition;
- only specialists with sufficient qualification and authorisation mount, install, commission and maintain the controller module;
- these specialists are regularly instructed in all relevant questions of occupational health and safety and environmental protection and that they also know the contents of the user manual and especially of the safety notes therein;
- the device markings, identifications, safety and warning notes attached to the EtherCAT I/O Modules are not removed and are always kept in a legible state;
- the national and international regulations for controlling machines and systems which apply at the relevant usage site are observed;
- the relevant information about the EtherCAT I/O Modules and their application and operation is always available to the users

1.5.1. Working on the controller module

Before carrying out work on the EtherCAT I/O Modules you must always

- first ensure that the controller and the system are in a secure state;
- only then switch off the controller and the system and
- only now disconnect the EtherCAT I/O Modules from the system.

1.6. Use as Prescribed

This is a modular automation system based on the CANbus, intended for industrial control applications within the medium to high performance range.

The automation system is designed for use within Overvoltage Category I (IEC 364-4-443) for the controlling and regulating of machinery and industrial processes in low-voltage installations in accordance with the following general parameters:

- maximum rated supply voltage of 1,000 VAC (50/60 Hz) or 1,500 VDC;
- for use in maximum category 2 pollution environment (EN 60950);
- for use up to a maximum altitude of 2,000 m above msn;
- max. ambient temperature inside and outside the control cabinet is within the technical specifications (see section “Technical data”)

Qualified project planning and design, proper transport, storage, installation, use and careful maintenance are essential to the flawless and safe operation of the automation system.

The automation system may only be used within the scope of the data and applications specified in the present documentation and associated user manuals.

The automation system is to be used only as follows

- as prescribed,
- in technically flawless condition,
- without arbitrary or unauthorized changes and
- exclusively by qualified users

The regulations of the German professional and trade associations, the German technical supervisory board (TÜV), the VDE (Association of German electricians) or other corresponding national bodies are to be observed.

Safety-oriented (fail-safe) systems

Particular measures are required in connection with the use of PLCs in safety-oriented systems. If a PLC is to be used in a safety-oriented system, the user ought to seek the full advice of the PLC manufacturer in addition to observing any standards or guidelines on safety installations which may be available.



As with any electronic control system, the failure of particular components may result in uncontrolled and/or unpredictable operation.

All types of failure and the associated fuse systems are to be taken into account at system level. The advice of the PLC manufacturer should be sought if necessary.

2. Introduction EtherCAT I/O Modules

2.1. EtherCAT - Ethernet Control Automation Technology

EtherCAT is one of the most powerful Ethernet-based fieldbus systems. EtherCAT puts up the top speed mark, and its flexible topology and simple configuration make it the perfect means of controlling extremely fast processes.

Because of its high performance, the simple wiring and its open protocol support, EtherCAT is often used as a fast motion control and I/O bus driven by an industrial PC or in conjunction with control technology on a smaller scale. EtherCAT moves beyond the limits of conventional fieldbus systems. Its interconnections between the controller at one end and both the I/O modules and drives at the other are as fast as those of a backplane bus. EtherCAT controllers thus nearly act like centralized control systems, overcoming the issue of bus transfer times that conventional fieldbus systems are burdened with.

2.2. CANtrol - the automation platform


The automation platform CANtrol EC and CANtrol Dialog has been specifically engineered with applications near to the machine in mind. CANtrol provides flexible automation solutions including hardware and software PLCs based around industrial PCs, remote I/Os, PLCs with / without display and decentralized drives. EtherCAT, PROFINET, Bacnet, PROFIBUS-DP and CANopen are supported for networking. CANtrol controllers and industrial PCs used as EtherCAT masters feature a CoDeSys PLC.

2.3. E-I/O - CANtrol EtherCAT I/O-System

CANtrol E-I/O is a system of I/O modules for connecting the process signals to an EtherCAT network.

CANtrol E-I/O consists of the E-I/O bus coupler and a range of I/O modules.

The CANtrol E-I/O bus coupler converts the physical transfer technology (twisted pair) to LVDS (E-bus) and generates the system voltages required by the LVDS modules. The standard 100 Base Tx lines used for office network communications connect to the one side, the CANtrol E-I/O Modules for the process signals connect to the other. This is how the Ethernet EtherCAT protocol is retained right through to the last I/O module. At the end of the modular device, the connection between the forward and return lines is automatically closed, the effect being that another 100 Base Tx line can be plugged in to connect the next EtherCAT unit to the second bus coupler port.

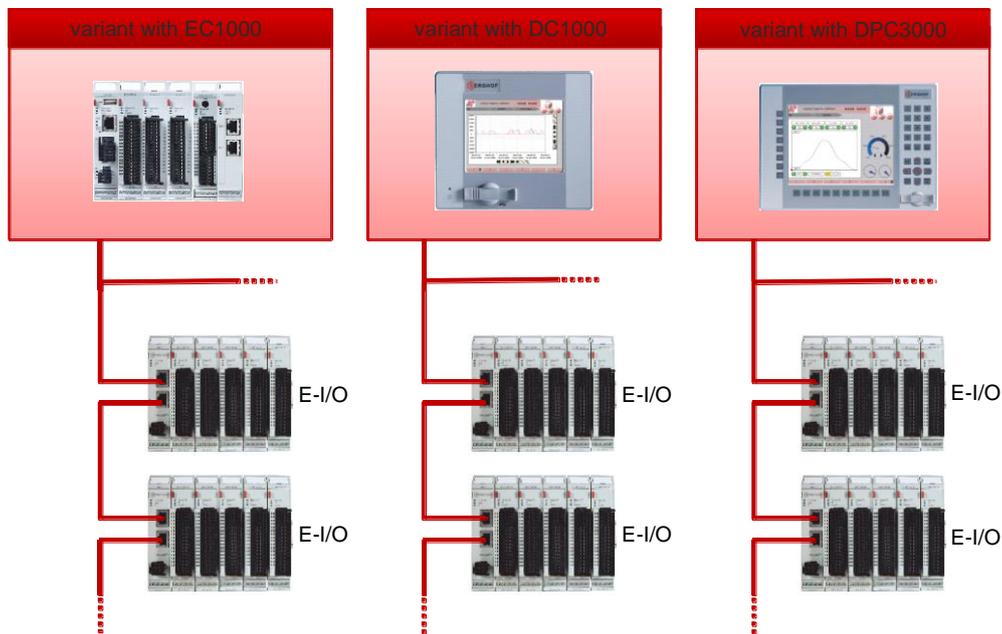

2VF100530DG00.cdr

2.4. Electromagnetic compatibility

2.4.1. Definition

Electromagnetic compatibility is the ability of a device to function satisfactorily in its electromagnetic environment without itself causing any electromagnetic interference that would be intolerable to other devices in this environment.

Of all known phenomena of electromagnetic noise, only a certain range occurs at the location of a given device. It is defined in the relevant product standards.

The design and immunity to interference of programmable logic controllers are internationally governed by Standard IEC 61131-2 which, in Europe, has been the basis for European Standard EN 61131-2.



Refer to IEC 61131-4, User's Guideline, for general installation instructions to be complied with to ensure that hardware interface factors and the ensuing noise voltages are limited to tolerable levels.

2.4.2. Interference emission

Interfering emission of electromagnetic fields, HF compliant to EN 55011, limiting value class A, Group 1



If the controller is designed for use in residential areas, high-frequency emissions must comply with limiting value class B as described in EN 55011. Fitting the controller into earthed metal cabinets and in-stalling filters in the supply lines may produce a shielding compliant to the above standard.

2.4.3. General notes on installation

As component parts of machines, facilities and systems, electronic control systems must comply with valid rules and regulations, depending on their field of application.

General requirements concerning the electrical equipment of machines and aiming at the safety of these machines are contained in Part 1 of European Standard EN 60204 (same as VDE 0113).

For safe installation of our control system please observe the information given below.

2.4.4. Electrical immission safeguard

Connect the control system to the protective earth conductor to eliminate electromagnetic interference. Practice best cable routing.

2.4.5. Cable routing and wiring

Keep power circuits separate from control circuits:

- DC voltages 60 V ... 400 V
- AC voltages 25 V ... 400 V

Joint laying of control circuits is allowed for:

- shielded data signals
- shielded analogue signals
- unshielded digital I/O lines
- unshielded DC voltages < 60 V
- unshielded AC voltages < 25 V

Wire connection specifications: Use AWG wire size 16-22 or equivalent.

2.4.6. Location of installation

Exclude any and all impediments due to temperature, dirt, impact, vibration or electromagnetic interference.

Temperature

Consider heat sources such as general heating of rooms, sunlight, heat accumulation in assembly rooms or control cabinets.

Contamination

Use suitable casings to avoid possible negative influences due to humidity, corrosive gas, liquid or conducting dust.

Impact and vibration

Consider possible influences caused by motors, compressors, transfer lines, presses, ramming machines and vehicles.

Electromagnetic interference

Consider electromagnetic interference from various local sources: motors, switching devices, switching thyristors, radio-controlled devices, welding equipment, arcing, switched-mode power supplies, converters / inverters.

2.4.7. Particular sources of interference

Inductive actuators

Switching off inductances (such as from relays, contactors, solenoids or switching magnets) produces surge voltages. It is necessary to reduce these extra voltages to a minimum. Reducing elements may be diodes, Z-diodes, varistors or RC elements. To find the best adapted elements, we recommend that you contact the manufacturer or supplier of the corresponding actuators for the relevant information.

3. System description EtherCAT I/O Modules

CANtrol E-I/O is a system of I/O modules for connecting the process signals to any EtherCAT network station.

CANtrol E-I/O consists of the CANtrol E-I/O bus coupler and a range of CANtrol E-I/O modules.

The CANtrol E-I/O bus coupler converts the physical transfer technology (twisted pair) to LVDS (E-bus) and generates the system voltages required by the LVDS modules. The standard 100 Base Tx lines used for office network communications connect to the one side, the CANtrol E-I/O modules for the process signals connect to the other. This is how the Ethernet EtherCAT protocol is retained right through to the last I/O module. At the end of the modular device, the connection between the forward and return lines is automatically closed, the effect being that another 100 Base Tx line can be plugged in to connect the next EtherCAT unit to the second bus coupler port.


If the bus coupler is the last station of the EtherCAT network, i.e. if its RJ45 "Out" socket remains unplugged, the connection between the forward and return lines is automatically closed.

3.1. Mechanical design

The figure shows the basic layout of the CANtrol E-I/O modules.

The bus coupler and the I/O modules differ in their connectors and indicators, however.

Module structure

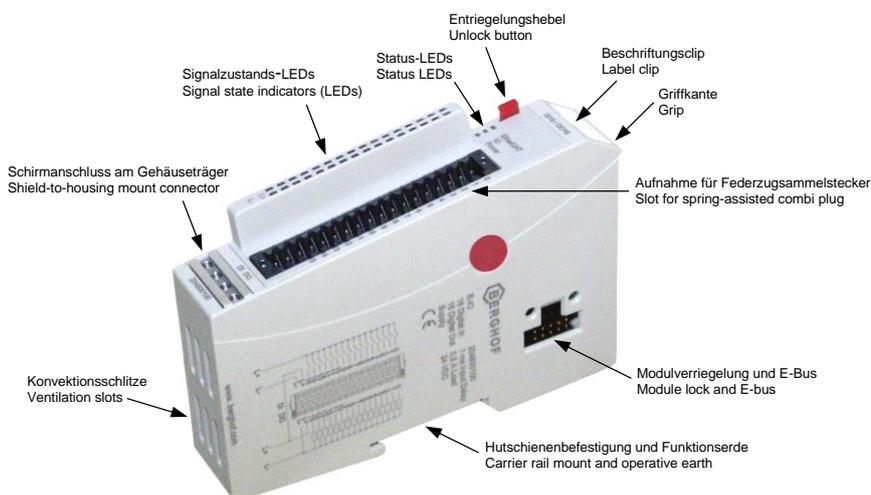

2VF100534DG00.VSD

The housing mount consists of an aluminium profile with an integral snap-on device used to snap the module to a 35mm DIN rail.

The housing trough including the optical fibres for the status indicators, the side face and the front is made of plastic and contains the module.

The optical fibres for the signal state indicators (LEDs) are located next to the spring-assisted combi plug.

They slightly protrude from the housing and allow a clear diagnosis at a glance.

3.1.1. Earth


The CANtrol E-I/O modules shall be earthed. Thereto the metal housing shall be attached to operative earth. Since the operative earth connectors dissipate HF currents, it is of utmost importance for the module's noise immunity.

HF interference is dissipated from the electronics board to the metal housing. The metal housing therefore needs to be suitably connected to an operative earth connector.

You will normally have to ensure that

- the connection between module housing and DIN rail conducts well,
- the connection between DIN rail and switching cabinet conducts well,
- the switching cabinet is safely connected to earth.

In special cases you may attach the earth wire straight to the module.

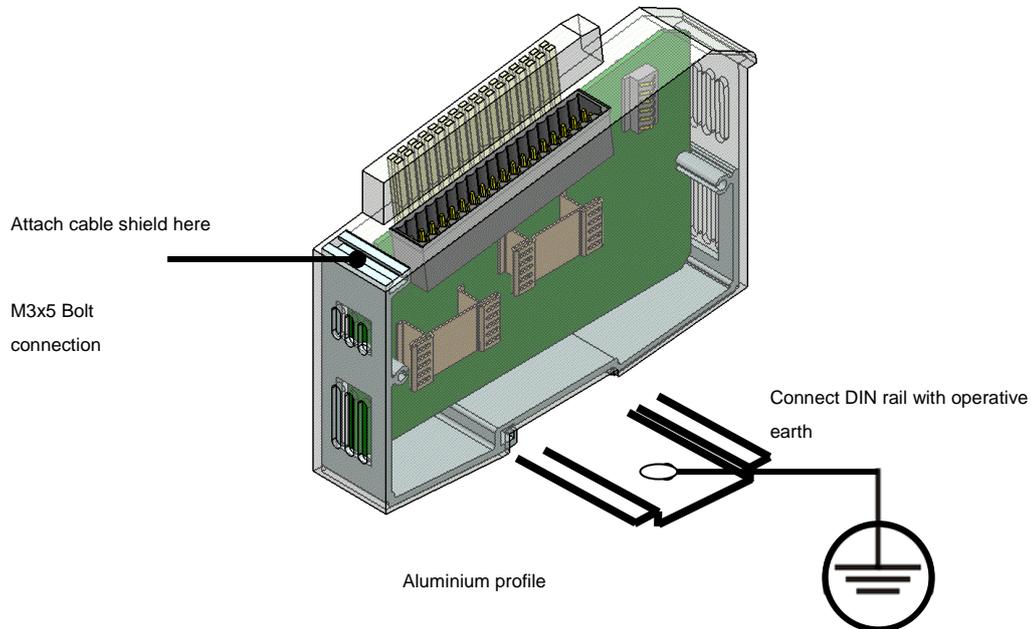


NOTICE

Earth wires should be short and have a large surface (copper mesh).
 Further details has site [http://en.wikipedia.org/wiki/Ground_\(electricity\)](http://en.wikipedia.org/wiki/Ground_(electricity))

3.1.2. Installation

The CANtrol E-I/O modules are intended for mounting rail installation (DIN EN 50022, 35 x 7.5 mm).

The mounting rail is placed horizontally and the female connector strip of the modules face forward. For a sufficient ventilation of the convection slits the minimum distance must not fall below 20 mm upward and 35 mm to adjacent equipment and control cabinets. The lateral distance to external devices and cabinet controls must not fall below 20 mm.

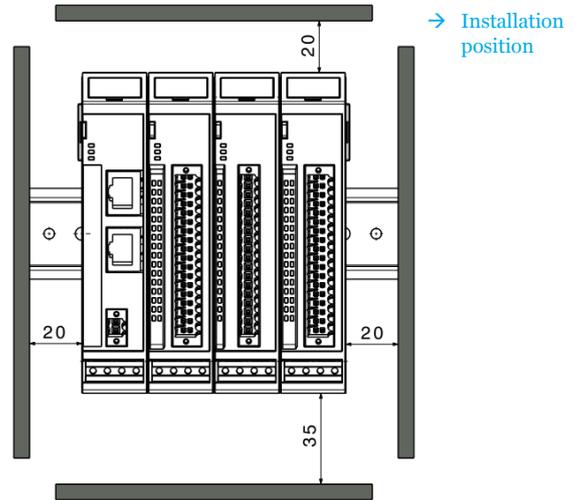

Installation position

Installation order within an E-I/O system




To ensure smooth function of the entire E-I/O system, the E-I/O modules must be arranged based on their e-bus load. The modules with the biggest e-bus load are to be arranged directly next to the head modules (bus coupler or controller). Make sure that you note the maximum bus load of the head module.

→ Installation order

→ To snap on a single module

- Push up the module against the mounting rail from below, allowing the metal spring to snap in between mounting rail and mounting area as illustrated.
- Push the module above against the mounting wall until it snaps in.

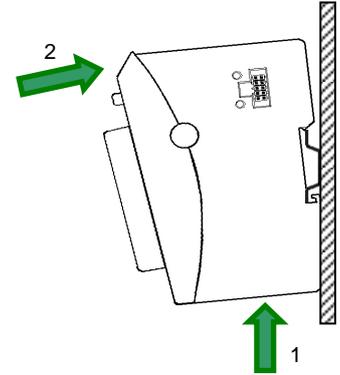

Rail mounting of module

To interconnect two modules


After snapping on the first module to the rail, snap on the second module about 1cm away towards the right of the first module. Push the second module along the rail towards the first module until you hear the locking device snap in.

To disconnect two modules

Push down the unlock button (see figure below) of the module that you wish to disconnect from the module to the left of it. Push both modules away from one another until they are about 1 cm apart.

→ To take down a single module

- Push the module up and against the metal spring located on the underside of the rail guide.
- Tip the module away from the rail as shown in the illustration.
- Pull the module down and out of the mounting rail.

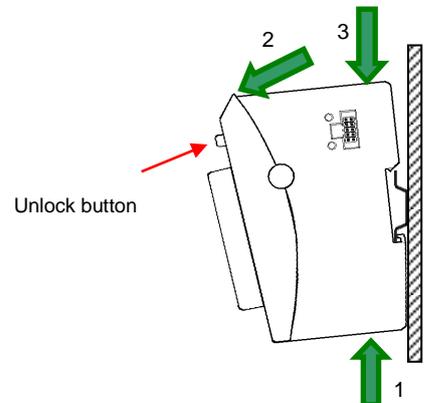

Uninstalling a module

3.2. System power supply

3.2.1. General

General Spring-assisted blocks of sockets allow fast and simple wiring. A multiple socket connector densely packs the wires on a small footprint. Use the unlock button to easily disconnect the wires where there is little space.

Tool: 0.4 x 2.5 blade screwdriver

Cores: 0.20 - 1.0 mm² (IEC) / 28 - 18 ENC (UL)

Rated current: 5 A (CSA) / 10 A (UL)



Do not connect the power supply lines through from one I/O power supply port to the next.

To ensure that there is as little interference as possible, install a central power supply point and establish a star topology of as short wires as possible between the central point and the I/O Modules.

3.2.2. Bus coupler

The system power supply connects to the bus coupler through a 2-pole plug-type terminal block. Since the bus coupler supplies power to both the E-bus and the logic circuits of the I/O modules, its power consumption depends on the number of I/O modules connected. Power to the I/O module outputs is supplied separately.



Spring-assisted connector and bus coupler unlock button
2VF100532DG00.cdr

3.2.3. I/O Modules

The I/O supply connects to the I/O module, normally together with the I/Os, using plug-type terminal blocks with different numbers of poles. Power to the I/O module logic circuits is supplied by the bus coupler.



Spring-assisted connector with I/O module unlock button
2VF100533DG00.cdr

3.3. Status LEDs

3.3.1. “EtherCAT” LED

An LED labeled “EtherCAT” is located on both the bus coupler and the I/O Modules. It indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

3.3.2. “In” LED, “Out” LED

The “In” and “Out” LEDs are located on the bus coupler. They indicate the respective physical state of the Ethernet.

Ethernet		
State	LED flash code	Explanation
Not connected	Off	No Ethernet connection
Connected	Green, on	Connected to Ethernet
Traffic	Green, flashing	Exchanging telegrams

3.3.3. “I/O” LED

Every I/O Module has an LED labeled "IO". It indicates the state of the Module's I/Os. Refer to the I/O Module sections in this manual to know which states of a module are monitored and indicated.

3.3.4. “Power” LED

An LED labeled “Power” is located on every I/O Module that has a power supply connector (e.g. for digital outputs). It indicates the state of the I/O module's I/O power supply.

I/O power supply		
State	LED flash code	Explanation
On	Green, on	24 V DC supply ok
Off	Off	24 V DC supply not ok

3.4. Technical data (overview)

System properties CANtrol E-I/O	
Fieldbus	EtherCAT 100Mbit/s
Dimensions	25 mm x 120 mm x 90 mm (W x H x D)
Housing mount	aluminium
Shield	connected straight to module housing
Installation	35 mm DIN rail (top-hat rail)
I/O connection	spring-assisted combi plug with mechanical ejector, 4 ... 36-pin
Signal indication	LED located next to the terminal
Diagnosis	LED: bus state, module state, broken wire/excessive current
Number of ports	up to 32 digital I/Os on every module, up to 8 analogue channels per module
Supply voltage	24 V DC -20% / +25%
Number of I/O modules	20 per bus coupler (total max. power consumption:3 A)
Electrical insulation	modules electrically insulated from one another and from the bus
Cable length analog signals	< 30 m
Storage temperature	-25 °C ... +70 °C
Operating temperature	0 °C ... +55 °C
Rel. humidity	5 % ... 95 %, non-condensing
Protection	IP20
Susceptibility to noise	zone B to EN 61131-2, installation on an earthed top hat rail in the earthed control

NOTICE


Exception

The dimensions of the Bus coupler DI16/DO16 amount to 42 mm x 120 mm x 90 mm (W x H x D).

3.5. E-I/O Modules (overview)

E-I/O Modules		
Label	Order number	Page
E-I/O BUSKOPPLER 3A	204800000	27
E-I/O BK DI16/DO16 1MS/0,5A	204802900	31
E-I/O DI16/DO16 1MS/0,5A	204800100	35
E-I/O DI32 1MS	204800900	38
E-I/O DI16 1MS	204800800	40
E-I/O DO16 0,5A	204801000	42
E-I/O DO8 RELAIS NO 24V	204800600	45
E-I/O DO8 RELAIS NO 230VAC	204800700	48
E-I/O AI4-I 12BIT	204801100	51
E-I/O AI8-I 12BIT	204802700	58
E-I/O AI4-I 12BIT CoE	204804000	66
E-I/O AI8-I 12BIT CoE	204804100	75
E-I/O AI4/8-U 13BIT	204800200	84
E-I/O AI4/8-U 13BIT CoE	204804200	90
E-I/O AI8/16-U 13BIT CoE	204804300	99
E-I/O AO4-U/I 12BIT	204801200	109
E-I/O AO4-U/I 16BIT CoE	204804600	115
E-I/O AI4-PT/NI100 16BIT	204801300	125
E-I/O AI4-PT/NI1000 16BIT	204802800	125
E-I/O AI8-PT/NI100 16BIT	204800500	132
E-I/O AI4-THERMO 16BIT	204801400	138
E-I/O AI4-PT/NI/THERMO 16BIT CoE	204804400	143
E-I/O AI8-PT/NI/THERMO 16BIT CoE	204804500	154
E-I/O COUNTER/POSI2 5V	204801700	169
E-I/O EXTENDER 2 PORT	204801500	189
Supplement		
POTENTIALVERTEILER 2x16	204802300	193
SCHIRMANSCHLUSSKLEMME 2x8 mm	204802400	194

4. Bus coupler

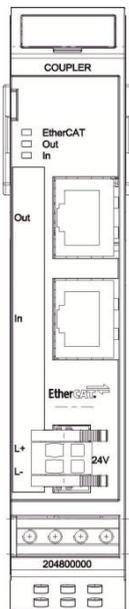

Bus coupler front view

4.1. Terminals

Module power supply

L+: 24 V DC

L-: 0 V

EtherCAT (RJ45 socket)

IN: input (from previous EtherCAT station)

OUT: output (to next EtherCAT station)

4.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“In” LED, “Out” LED

The “In” and “Out” LEDs indicate the physical state of the Ethernet’s ports they are allocated to.

Ethernet		
State	LED flash code	Explanation
Not connected	Off	No Ethernet connection
Connected	Green, on	Connected to Ethernet
Traffic	Green, flashing	Exchanging telegrams

4.3. Function

The CANtrol E-I/O bus coupler converts the physical transfer technology (twisted pair) to LVDS (E-bus) and generates the system voltages required by the LVDS modules.

The standard 100 Base Tx lines used for office network communications connect to the one side, the CANtrol E-I/O Modules for the process signals connect to the other. This is how the Ethernet EtherCAT protocol is retained right through to the last I/O module.

At the end of the modular device, the connection between the forward and return lines is automatically closed, the effect being that another 100 Base Tx line can be plugged in to connect the next EtherCAT unit to the second bus coupler port.


Module state		
Variable	Data type	Explanation
Undervoltage	BOOL	Low voltage (supplied power < 19.2 V)

4.4. Technical data

Bus coupler	
Label	E-I/O BUSKOPPLER 3A
Part no.	204800000
Plug-in connector	2-pole 204801800 (part of the package)
Function	Connects a 100Base-TX EtherCAT with the CANtrol E-I/O Modules Generates the LVDS system voltages
Controller	ASIC ET1100
Baud rate	100Mbit/s
Cable	CAT5
Length of cable	max. 100 m between 2 bus couplers
Terminal EtherCAT	2 x RJ45
Power supply	24 V DC -20% +25%
Input current	50 mA & E-bus power supply
E-bus power supply	max. 3 A (ca. 20 modules)
E-bus load	195 mA
UL approval	 <p> UL LISTED <small>59DM</small> <small>E242595</small> <small>IND.CONT.EQ.</small> </p>

Blank page

5. Digital modules with integrated bus coupler

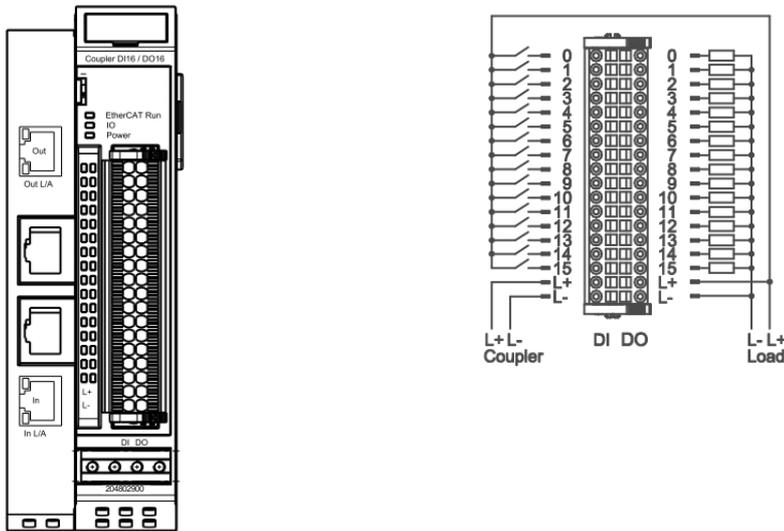

Front view of BK DI16/DO16 1MS/0.5A I/O module I/O connection

5.1. Terminals

Power supply to module I/Os

L+: 24 V DC

L-: 0 V

EtherCAT (RJ45 socket)

IN: input (from previous EtherCAT station)

OUT: output (to next EtherCAT station)

5.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “IO” indicates the state of the module's I/Os.

I/O		
State	LED	Explanation
Ok	Off	No error
SC	Red, flashing light	Short-circuited digital output



The output drivers have a thermal fuse to automatically turn off any short-circuited outputs.

In case the short circuit prevails, the outputs are allowed to cool down to be turned back on until the thermal fuse blows again.

“Power” LED

The LED labeled "Power" indicates the state of the I/O module's I/O power supply.

Power		
State	LED	Explanation
On	Green	24 V DC supply ok
Off	Off	24 V DC supply not ok



The module is monitored for low voltage states for logic and load!

“In”LED, “Out” LED

The “In” and “Out” LEDs indicate the physical state of the Ethernet’s ports they are allocated to.

Ethernet		
State	LED flash code	Explanation
Not connected	Off	No Ethernet connection
Connected	Green, on	Connected to Ethernet
Traffic	Green, flashing light	Exchanging telegrams

“Channel” LEDs

Channel		
State	LED	Explanation
On	Green, on	Input signal TRUE / output enabled
Off	Off	Input signal FALSE / output disabled

5.3. Function

The CANtrol E-I/O Bus coupler DI16/DO16 is an EtherCAT I/O module that combines the functionalities of the existing single modules CANtrol E-I/O Bus coupler and CANtrol E-I/O DI16/DO16 into one device. It is designed with a reduced E-bus supply of 2 A specifically for use in smaller module blocks.

In the bus coupler part the module converts the transmission physics from Twisted Pair to LVDS (E-Bus) and the generation of the voltage for the LVDS modules takes place. In addition, the module has 16 digital inputs and 16 digital outputs.

About the lateral E-bus connection, the Bus coupler DI16/DO16 can also be flexibly extended with EtherCAT I/O modules of the series CANtrol E-I/O.


Module state		
Variable	Data type	Explanation
U24_Load	BOOL	Undervoltage (supply < 19.2 V)
U24_Logic	BOOL	Undervoltage (supply < 19.2 V)
ShortcutOutput	BOOL	Short-circuited digital output

5.4. Technical data

BK DI16 / DO16	
Label	E-I/O BK DI16/DO16 1MS/0.5A
Part no.	204802900
Plug-in connector	36-pole 204800300 (not part of the package)
Function	Connects a 100Base-TX EtherCAT with the CANtrol E-I/O Modules Generates the LVDS system voltages
Digital inputs	16
Input delay	3 ms (typical)
Signal level	Off: -3 ... 5 V (EN 61131-3, Type1) On: 15 V ... 30 V
Digital outputs	16
Max. current	0.5 A per output
Total current	max. 8 A
Controller	ASIC ET1100
Baud rate	100 Mbit/s
Cable	CAT5
Cable length	max. 100 m between 2 bus couplers
EtherCAT connection	2 x RJ45
Power supply	24 V DC -20% +25%
Input current	40 mA & E-bus power supply
E-bus power supply	max. 2 A (ca. 11 modules)
E-bus connector	10-pin system plug in side wall
Term. module	not required
UL approval	 <p> UL LISTED <small>59DM</small> <small>E242595</small> <small>IND.CONT.EQ.</small> </p>

6. Digital modules

6.1. Digital in- and outputs DI16 / DO16

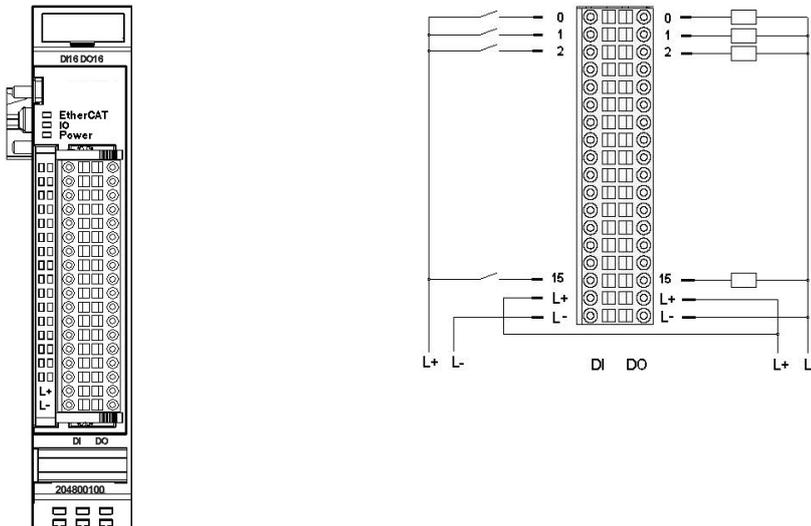

Front view of DI16/DO16 I/O module

I/O connection

6.1.1. Terminals

Power supply to module I/Os

L+: 24 V DC

L-: 0 V



Connect L+ to both L+ terminals if the total current exceeds the 6A limit.

6.1.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “IO” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Off	No error
SC	Red, on	Short-circuited digital output



The output drivers have a thermal fuse to automatically turn off any short-circuited outputs.

In case the short circuit prevails, the outputs are allowed to cool down to be turned back on until the thermal fuse blows again.

“Power” LED

The LED labeled "Power" indicates the state of the I/O module's I/O power supply.

Power		
State	LED flash code	Explanation
On	Green, on	24 V DC supply ok
Off	Off	24 V DC supply not ok



The module is not monitored for low voltage states.

“Channel” LEDs

Channel		
State	LED	Explanation
On	Green, on	Input signal TRUE / output enabled
Off	Off	Input signal FALSE / output disabled

6.1.3. Function


The DI16/DO16 module features 16 digital inputs and 16 digital outputs.

Function		
Variable	Data type	Explanation
DigitallInputn	BOOL	Digital input (n=0...15)
DigitalOutputn	BOOL	Digital output (n=0...15)


6.1.4. Technical data

DI16 / DO16	
Label	E-I/O DI16/DO16 1MS/0.5A
Part no.	204800100
Plug-in connector	36-pole 204800300 (not part of the module)
Digital inputs	16
Input delay	1 ms / 5 ms (typically)
Signal level	Off: -3 ... 5 V (EN 61131-3, Type1) On: 15 V ... 30 V
Digital outputs	16
Max. current	0.5 A per output
Total current	max. 8 A
Controller	ASIC ET1200
Baud rate	100 Mbit/s
Connector	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20% +25%
E-bus load	135 mA
UL approval	 LISTED 59DM E242595 IND.CONT.EQ.

6.2. Digital inputs DI32

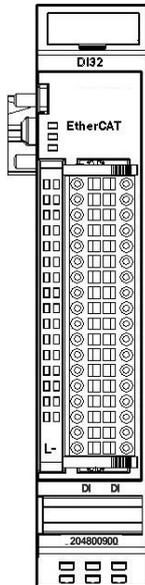

Front view of DI32 I/O module

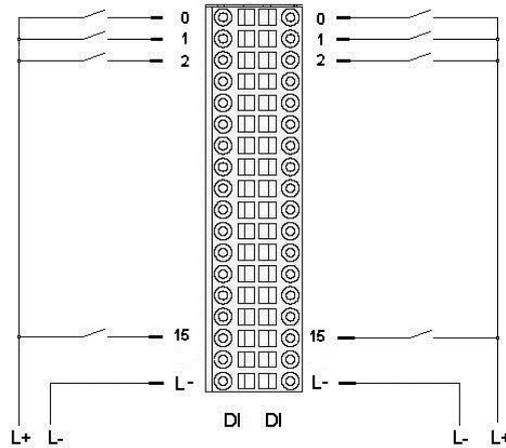

I/O connection

6.2.1. Terminals

Power supply to module I/Os

L-: 0 V

6.2.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

There is no LED labeled “I/O”.

“Power” LED

There is no LED labeled “Power” because a separate power feed is not required.

“Channel” LEDs

Channel		
State	LED	Explanation
On	Green, on	Input signal TRUE
Off	Off	Input signal FALSE

6.2.3. Function


The DI32 module has 32 digital inputs.

Function		
Variable	Data type	Explanation
DigitallInputn	BOOL	Digital input (n=0...31)


6.2.4. Technical data

DI32	
Label	E-I/O DI32 1MS
Part no.	204800900
Plug-in connector	36-pole 204800300 (not part of the module)
Digital inputs	32
Input delay	1 ms / 5 ms (typically)
Signal level	Off: -3 ... 5 V (EN 61131-3, Type1) On: 15 V ... 30 V
Controller	ASIC ET1100
Baud rate	100 Mbit/s
Connector	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20 % +25 %
E-bus load	85 mA
UL approval	 LISTED 59DM E242595 IND.CONT.EQ.

6.3. Digital inputs DI16

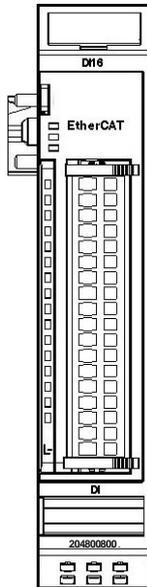

Front view of DI16 I/O module

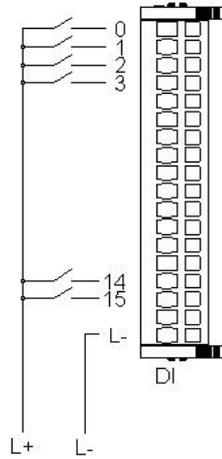

I/O connection

6.3.1. Terminals

Power supply to module I/Os

L-: 0 V

6.3.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

There is no LED labeled “I/O”.

“Power” LED

There is no LED labeled “Power” because a separate power feed is not required.

“Channel” LEDs

Channel		
State	LED	Explanation
On	Green, on	Input signal TRUE
Off	Off	Input signal FALSE

6.3.3. Function


The DI16 module has 16 digital inputs.

Function		
Variable	Data type	Explanation
DigitallInputn	BOOL	Digital input (n=0...15)


6.3.4. Technical data

DI16	
Label	E-I/O DI16 1MS
Part no.	204800800
Plug-in connector	18-pole 204800400 (not part of the module)
Digital inputs	16
Input delay	1 ms / 5 ms (typically)
Signal level	Off: -3 ... 5 V (EN 61131-3, Type1) On: 15 V ... 30 V
Controller	ASIC ET1200
Baud rate	100 Mbit/s
Connector	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20% +25%
E-bus load	100 mA
UL approval	 LISTED 59DM E242595 IND.CONT.EQ.

6.4. Digital outputs DO16

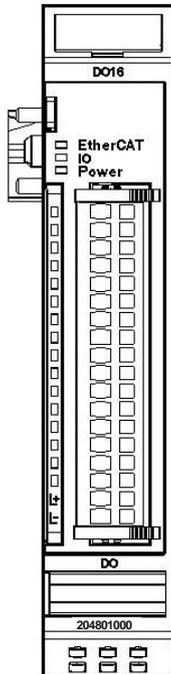

Front view of DO16 I/O module

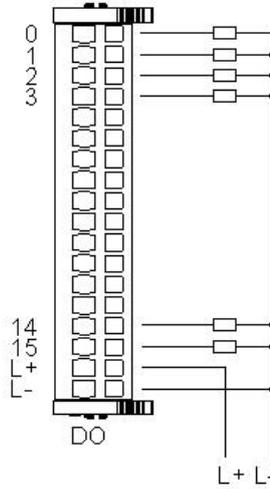

I/O connection

6.4.1. Terminals

Power supply to module I/Os

L+: 24 V DC

L-: 0 V

6.4.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module’s I/Os.

I/O		
State	LED flash code	Explanation
Ok	Off	No error
SC	Red, on	Short-circuited digital output



The output drivers have a thermal fuse to automatically turn off any short-circuited outputs.
 In case the short circuit prevails, the outputs are allowed to cool down to be turned back on until the thermal fuse blows again.

“Power” LED

The LED labeled "Power" indicates the state of the I/O module's I/O power supply.

Power		
State	LED flash code	Explanation
On	Green, on	24 V DC supply ok
Off	Off	24 V DC supply not ok



The module is not monitored for low voltage states.

“Channel” LEDs

Channel		
State	LED	Explanation
On	Green, on	Output enabled
Off	Off	Output disabled

6.4.3. Function


The DO16 module has 16 digital outputs.

Function		
Variable	Data type	Explanation
DigitalOutputn	BOOL	Digital output (n=0...15)


6.4.4. Technical data

DO16	
Label	E-I/O DO16 0,5A
Part no.	204801000
Plug-in connector	18-pole 204800400 (not part of the module)
Digital outputs	16
Max. current	0,5 A per output
Total current	max. 8 A
Controller	ASIC ET1200
Baud rate	100 Mbit/s
Connector	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20% +25%
E-bus load	130 mA
UL approval	 <p> UL US LISTED 59DM E242595 IND.CONT.EQ. </p>

6.5. Digital outputs DO8 RELAIS NO 24V

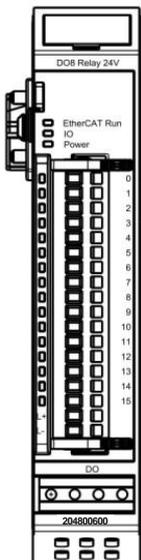

Front view of DO8 RELAIS NO 24V I/O module

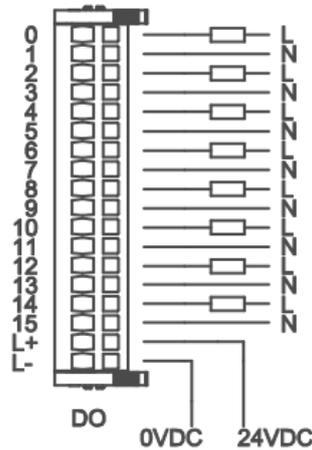

I/O connection

OUT	Pin
0-a	0
0-b	1
1-a	2
1-b	3
2-a	4
2-b	5
3-a	6
3-b	7
4-a	8
4-b	9
5-a	10
5-b	11
6-a	12
6-b	13
7-a	14
7-b	15
24 V	16
0 V	17

6.5.1. Terminals

Power supply to module I/Os

L+: 24 V DC

L-: 0 V

6.5.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

There is no LED labeled “I/O”.

“Power” LED

The LED labeled "Power" indicates the state of the I/O module's I/O power supply.

Power		
State	LED	Explanation
On	Green	24 V DC supply ok
Off	Off	24 V DC supply not ok

“Channel” LEDs

Channel		
State	LED	Explanation
On	Green, on	Output enabled
Off	Off	Output disabled

6.5.3. Function

The DO8 RELAIS NO 24V module has 8 relay outputs.

Function		
Variable	Data type	Explanation
DigitalOutputn	BOOL	Digital output (n=0...7)
Reserved	BOOL	Unused output addresses


6.5.4. Technical data

DO8 RELAIS NO 24V	
Label	E-I/O DO8 RELAIS NO 24V
Part no.	204800600
Plug-in connector	18-pole 204800400 (not part of the module)
Digital outputs	8 closing relays
Max. switching current (ohmic)	5.0 A per output
Max. switching current (inductive)	2.0 A per output
Min. permitted load	10 mA @ 5 VDC
Operating cycles mech. (min.)	2×10^7
Operating cycles electr. (min.)	3×10^5 (2 A / 30 VDC)
Switching voltage	max. 24 VDC / VAC
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus connector	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20% +25%
E-bus load	130 mA




The UL approval for this module is in process of planning.

6.6. Digital outputs DO8 RELAIS NO 230VAC

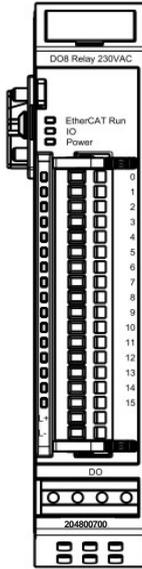

Front view of DO8 RELAIS NO 230VAC I/O module

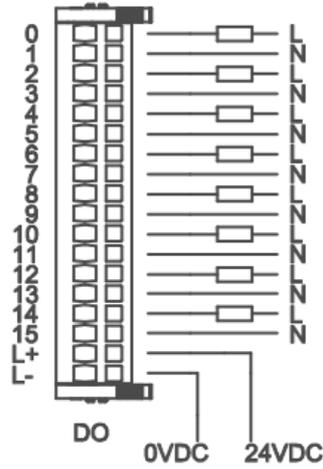

I/O connection

OUT	Pin
0-a	0
0-b	1
1-a	2
1-b	3
2-a	4
2-b	5
3-a	6
3-b	7
4-a	8
4-b	9
5-a	10
5-b	11
6-a	12
6-b	13
7-a	14
7-b	15
24 V	16
0 V	17

6.6.1. Terminals

Power supply to module I/Os

L+: 24 V DC

L-: 0 V

6.6.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

There is no LED labeled “I/O”.

“Power” LED

The LED labeled "Power" indicates the state of the I/O module's I/O power supply.

Power		
State	LED	Explanation
On	Green	24 V DC supply ok
Off	Off	24 V DC supply not ok

“Channel” LEDs

Channel		
State	LED	Explanation
On	Green, on	Output enabled
Off	Off	Output disabled

6.6.3. Function

The DO8 RELAIS NO 230VAC module has 8 relay outputs.

Function		
Variable	Data type	Explanation
DigitalOutputn	BOOL	Digital output (n=0...7)
Reserved	BOOL	Unused output addresses

6.6.4. Technical data


DO8 RELAIS NO 230VAC	
Label	E-I/O DO8 RELAIS NO 230VAC
Part no.	204800700
Plug-in connector	18-pole 204800400 (not part of the module)
Digital outputs	8 closing relays
Max. switching current (ohmic)	5.0 A je Ausgang
Max. switching current (inductive)	2.0 A je Ausgang
Min. permitted load	10 mA @ 5 VDC
Operating cycles mech. (min.)	2×10^7
Operating cycles electr. (min.)	3×10^5 (2 A / 30 VDC)
Switching voltage	max. 24 VDC / 230 VAC
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus connector	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20% +25%
E-bus load	130 mA



The UL approval for this module is in process of planning.

7. Analogue modules

7.1. Analogue inputs for current measurement AI4-I

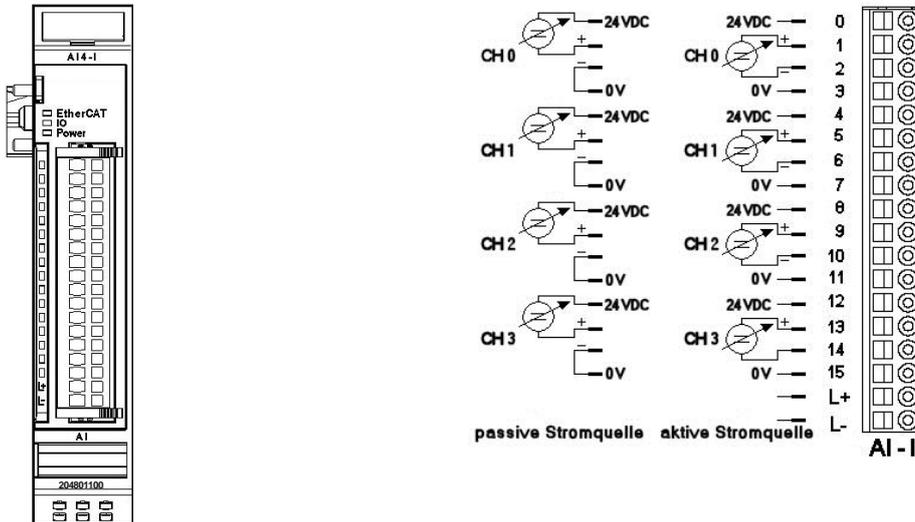

Front view of AI4-I I/O module

I/O connection passive/active power source



The AI4-I module is no longer recommended for new projects. Please use the successive AI4-I 12BIT CoE module.

7.1.1. Terminals

Module supply

L+: 24 V DC

L-: 0 V

Operative earth / shielding of analog wires → section 3.1.1 Earth

7.1.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On
		Inoperative if E-bus LED = Off
	Red, 2x	Undervoltage (not implemented)
	Red, 3x	Watchdog
	Red, 4x	EtherCAT watchdog control
	Red, 6x	Module-specific fault
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

The LED labeled "Power" indicates the state of the I/O module's I/O power supply.

Power		
State	LED flash code	Explanation
On	Green, on	24 V DC supply ok
Off	Off	24 V DC supply not ok

“Channel” LEDs

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red	Open, overcurrent

7.1.3. Function

The AI4-I module has 4 analogue current signal inputs. Their measuring range can be set separately for every channel, i.e. either to 0..20 mA or to 4..20 mA.

Analogue inputs

Check the following variable for the digitized input values:

Inputs		
Variable	Data type	Explanation
Channel_n	INT	Value measured on channel n (n= 0...3)

Measured value

The maximal measuring value (0xFFFF) of the current input module is $0.5 \text{ V} / 23.4 \Omega = 21.3675 \text{ mA}$.
The status is shown by the channel LED.

Measuring values, variable values and status

Measuring range *



* The measurement range is provided by the module, i.e the maximal output value is HEX FB80.

Mode 0 .. 20 mA



Mode 4 .. 20 mA



Conversion Output value -> Current [mA]: $\text{Current [mA]} = \text{Output value} / 3066,336$

Conversion Current [mA] -> Output value: $\text{Output value} = \text{Roundoff} (\text{Current [mA]} * 191,646) * 16$

Analogue values current

Measuring	Variable value			
	mA	decimal	CODESYS (INT)	hexadecimal
0	0	0	0	0
1	3056	3056	3056	16#0BF0
2	6128	6128	6128	16#17F0
3	9184	9184	9184	16#23E0
4	12256	12256	12256	16#2FE0
5	15328	15328	15328	16#3BE0
6	18384	18384	18384	16#47D0
7	21456	21456	21456	16#53D0
8	24528	24528	24528	16#5FD0
9	27584	27584	27584	16#6BC0
10	30656	30656	30656	16#77C0
11	33728	-31808	-31808	16#83C0
12	36784	-28752	-28752	16#8FB0
13	39856	-25680	-25680	16#9BB0
14	42928	-22608	-22608	16#A7B0
15	45984	-19552	-19552	16#B3A0
16	49056	-16480	-16480	16#BFA0
17	52112	-13424	-13424	16#CB90
18	55184	-10352	-10352	16#D790
19	58256	-7280	-7280	16#E390
20	61312	-4224	-4224	16#EF80
20.5	62848	-2688	-2688	16#F580
...				
≥ 21.37	65520	-16	-16	16#FFF0

Module control

The module provides you with various operational options.

To set up the module choose the options as appropriate and accept by setting control bit “SetOptions” to a rising edge. The module will confirm by returning “OptionsSet”.

There are various “module error” bits that the module uses to indicate errors. The states of the error bits are retained and also used for error indication by the “I/O” LED. To reset the error bits set control bit “ResetError” to a rising edge.

Error bits		
Variable	Data type	Explanation
SetOptions	BOOL	Rising edge → accepts module options
ResetError	BOOL	Rising edge → acknowledges error

Module options

The following options are available for module AI4-I:

Module options			
Variable	Data type		Explanation
Channel_n_0_20mA	BOOL	TRUE	Channel n to 0...20 mA
		FALSE	Channel n to 4...20 mA
Channel_n_On	BOOL		Enables channel n
Channel_n_Filter	USINT	0..255	Filter on channel n New values avail. in k/3 ms (k=0..255)
n		0 ... 3	Channel number

To set and accept options, see Module control

Module state

The following states are indicated:

Module state		
Variable	Data type	Explanation
Shortcut	BOOL	Short circuit
Undervoltage	BOOL	Low voltage (supplied power < 19.2 V)
Watchdog	BOOL	Internal watchdog of module
EtherCAT_Error	BOOL	Configuration error or watchdog control
Specific_Error	BOOL	Module-specific fault
OptionsSet	BOOL	Sent by module to acknowledge SetOptions

To reset the messages, see Module control

Module-specific messages

Apart from the module error messages, there is a set of messages containing details about the current state of the module:

Messages		
Variable	Data type	Explanation
Channel_n_Open	BOOL	4..20 mA mode: input current < 3.5 mA → Specific_Error = TRUE
Channel_n_Overcurrent	BOOL	Input current > 20.5 mA → Specific_Error = TRUE

These messages are automatically reset when the state concerned has returned to normal.

Conversion time

The analogue signals are converted one by one down every channel. Disabling one or several channels will shorten the entire A/D conversion cycle.

“Filter” in this case means to compute an average when the set filter time is over.

Analogue value conversion runs cyclically and is not synchronized with the receipt of EtherCAT telegrams.

The cycle consists of the analogue value conversion plus transmitting the values into the EtherCAT data area.

Channel	
Number of channels	Cycle time in ms (all filters=0)
1	0.27
2	0.41
3	0.55
4	0.69

i NOTICE	If you are aiming for a high sampling frequency, the EtherCAT master should do the filtering (averaging) because it will normally have much more processing power.
-----------------	--

i NOTICE	Take the EtherCAT cycle into account to assess how much the values stored by the EtherCAT master are up-to-date. The module described in this section will accept the above times as the ideal EtherCAT cycle setup.
-----------------	--

Quality of analogue values

The inputs connect to both active or passive current sensors.

The module provides terminals for the 24 V DC- supply to the transmitter of every channel.


Passive current sensors:

Interconnect the “-” and “0 V” terminals.

Active current sensors:

Use the power supplied by the module if at all possible.

If power to the current sensors is supplied by an external source, connect the 0 V terminal of that power source to the 0 V terminal of the module.

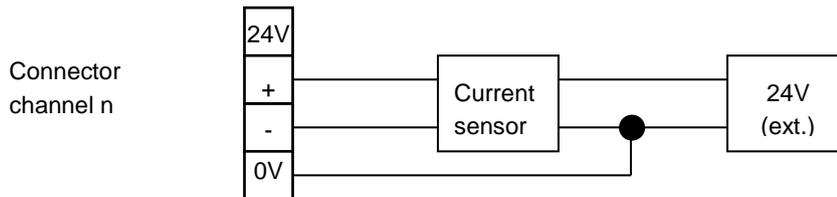


Best results are obtained by connected the shield of the signal cables to operative earth.

7.1.4. Technical data

AI4-I	
Label	E-I/O AI4-I 12BIT
Part no.	204801100
Plug-in connector	18-pole 204800400 (not part of the module)
Analogue inputs	4 single ended
Resolution	12 Bit (5.2 µA)
Measuring range	0 ... 20 mA, 4..20 mA (limit 21.3675 mA)
Temperature drift	< ± 25 ppm/°C regarding range limit
Critical frequency	typical 12.5 kHz
Burden	< 75 Ω
Sampling frequency	1.45 kHz (if all channels are enabled)
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	from coupler through E-bus connector
E-bus load	140 mA
UL approval	

7.2. Analogue inputs for current measurement AI8-I

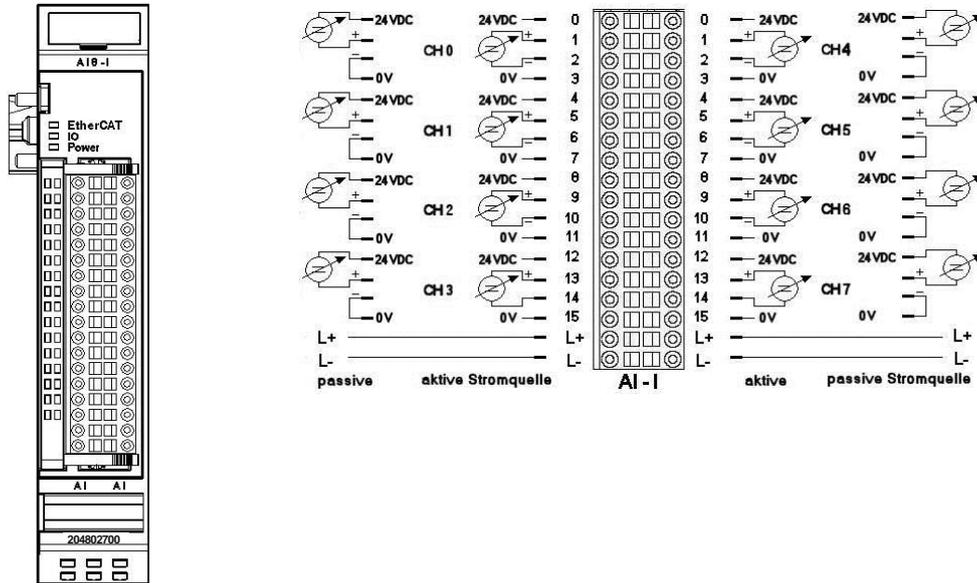

Front view of AI8-I I/O module I/O connection passive/active power source

NOTICE	The AI8-I module is no longer recommended for new projects. Please use the successive AI8-I 12BIT CoE module.
---------------	--

7.2.1. Terminals

Module supply

L+: 24 V DC

L-: 0 V

Operative earth / shielding of analog wires → section 3.1.1 Earth

7.2.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On
		Inoperative if E-bus LED = Off
	Red, 2x	Undervoltage (not implemented)
	Red, 3x	Watchdog
	Red, 4x	EtherCAT watchdog control
	Red, 6x	Module-specific fault
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

The LED labeled "Power" indicates the state of the I/O module's I/O power supply.

Power		
State	LED flash code	Explanation
On	Green, on	24 V DC supply ok
Off	Off	24 V DC supply not ok

“Channel” LEDs

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red	Open, overcurrent

7.2.3. Function

The AI8-I module has 8 analogue current signal inputs. Their measuring range can be set separately for every channel, i.e. either to 0..20 mA or to 4..20 mA.

Analogue inputs

Check the following variable for the digitized input values:

Inputs		
Variable	Data type	Explanation
Channel_n	INT	Value measured on channel n (n= 0...7)

Measured value

The maximal measuring value (0xFFFF) of the current input module is $0.5 \text{ V} / 23.4 \ \Omega = 21.3675 \text{ mA}$.
The status is shown by the channel LED.

Measuring values, variable values and status

Measuring range *



* The measurement range is provided by the module, i.e the maximal output value is HEX FB80.

Mode 0 .. 20 mA



Mode 4 .. 20 mA



Conversion Output value -> Current [mA]:

$$\text{Current [mA]} = \text{Output value} / 3066,336$$

Conversion Current [mA] -> Output value:

$$\text{Output value} = \text{Roundoff} (\text{Current [mA]} * 191,646) * 16$$

Analogue values current

Measuring		Variable value	
mA	decimal	CODESYS (INT)	hexadecimal
0	0	0	0
1	3056	3056	16#0BF0
2	6128	6128	16#17F0
3	9184	9184	16#23E0
4	12256	12256	16#2FE0
5	15328	15328	16#3BE0
6	18384	18384	16#47D0
7	21456	21456	16#53D0
8	24528	24528	16#5FD0
9	27584	27584	16#6BC0
10	30656	30656	16#77C0
11	33728	-31808	16#83C0
12	36784	-28752	16#8FB0
13	39856	-25680	16#9BB0
14	42928	-22608	16#A7B0
15	45984	-19552	16#B3A0
16	49056	-16480	16#BFA0
17	52112	-13424	16#CB90
18	55184	-10352	16#D790
19	58256	-7280	16#E390
20	61312	-4224	16#EF80
20.5	62848	-2688	16#F580
...			
≥ 21.37	65520	-16	16#FFF0

Module control

The module provides you with various operational options.

To set up the module choose the options as appropriate and accept by setting control bit “SetOptions” to a rising edge. The module will confirm by returning “OptionsSet”.

There are various “module error” bits that the module uses to indicate errors. The states of the error bits are retained and also used for error indication by the “I/O” LED. To reset the error bits set control bit “ResetError” to a rising edge.

Error bits		
Variable	Data type	Explanation
SetOptions	BOOL	Rising edge → accepts module options
ResetError	BOOL	Rising edge → acknowledges error

Module options

The following options are available for module AI8-I:

Module options			
Variable	Data type		Explanation
Channel_n_0_20mA	BOOL	TRUE	Channel n to 0...20 mA
		FALSE	Channel n to 4...20 mA
Channel_n_On	BOOL		Enables channel n
Channel_n_Filter	USINT	0..255	Filter on channel n New values avail. in k/3 ms (k=0..255)
n		0 ... 7	Channel number

To set and accept options, see Module control

Module state

The following states are indicated:

Module state		
Variable	Data type	Explanation
Shortcut	BOOL	Short circuit
Undervoltage	BOOL	Low voltage (supplied power < 19.2 V)
Watchdog	BOOL	Internal watchdog of module
EtherCAT_Error	BOOL	Configuration error or watchdog control
Specific_Error	BOOL	Module-specific fault
OptionsSet	BOOL	Sent by module to acknowledge SetOptions

To reset the messages, see Module control

Module-specific messages

Apart from the module error messages, there is a set of messages containing details about the current state of the module:

Messages		
Variable	Data type	Explanation
Channel_n_Open	BOOL	4..20 mA mode: input current < 3.5 mA → Specific_Error = TRUE
Channel_n_Overcurrent	BOOL	Input current > 20.5 mA → Specific_Error = TRUE

These messages are automatically reset when the state concerned has returned to normal.

Conversion time

The analogue signals are converted one by one down every channel. Disabling one or several channels will shorten the entire A/D conversion cycle.

“Filter” in this case means to compute an average when the set filter time is over.

Analogue value conversion runs cyclically and is not synchronized with the receipt of EtherCAT telegrams.

The cycle consists of the analogue value conversion plus transmitting the values into the EtherCAT data area.

Conversion time			
Number of channels	Cycle time in ms	Number of channels	Cycle time in ms
1	0.40	5	0.92
2	0.53	6	1.06
3	0.66	7	1.19
4	0.79	8	1.32



If you are aiming for a high sampling frequency, the EtherCAT master should do the filtering (averaging) because it will normally have much more processing power.



Take the EtherCAT cycle into account to assess how much the values stored by the EtherCAT master are up-to-date. The module described in this section will accept the above times as the ideal EtherCAT cycle setup.

Quality of analogue values

The inputs connect to both active or passive current sensors.

The module provides terminals for the 24 V DC- supply to the transmitter of every channel.


Passive current sensors:

Interconnect the “-” and “0 V” terminals.

Active current sensors:

Use the power supplied by the module if at all possible.

If power to the current sensors is supplied by an external source, connect the 0 V terminal of that power source to the 0 V terminal of the module.

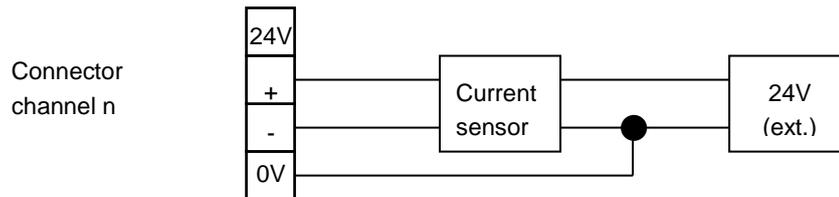


i NOTICE

Best results are obtained by connected the shield of the signal cables to operative earth.

7.2.4. Technical data

AI8-I	
Label	E-I/O AI8-I 12BIT
Part no.	204802700
Plug-in connector	18-pole 204800400 (not part of the module)
Analogue inputs	8 single ended
Resolution	12 Bit (5.2 μ A)
Measuring range	0 ... 20 mA, 4..20 mA (limit 21.3675 mA)
Temperature drift	< \pm 25 ppm/ $^{\circ}$ C regarding range limit
Critical frequency	typical 12.5 kHz
Burden	< 75 Ω
Sampling frequency	0.76 kHz (if all channels are enabled)
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	from coupler through E-bus connector
E-bus load	160 mA
UL approval	 <p> UL LISTED 59DM E242595 IND.CONT.EQ. </p>

7.3. Analogue inputs for current measurement AI4-I 12BIT CoE

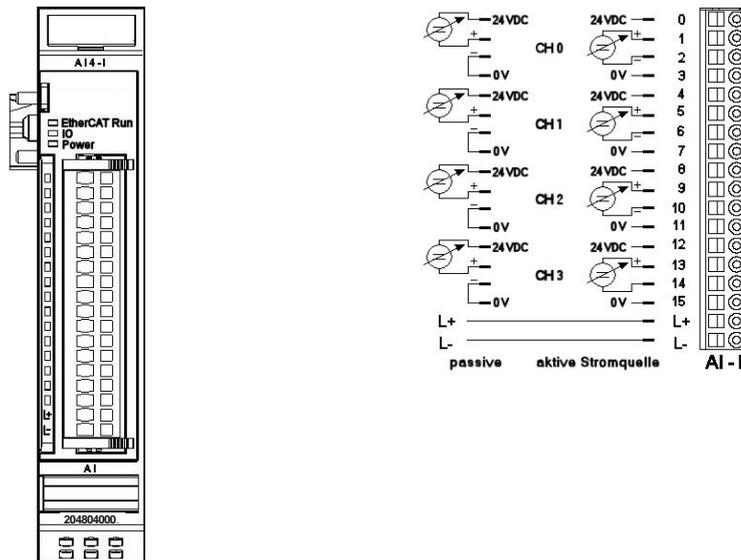

Front view of AI4-I 12BIT CoE I/O module I/O connection

NOTICE	<p>The AI4-I 12BIT CoE module is the successor module NOT compatible with the AI4-I module.</p> <p>Before replacing an AI4-I module with an AI4-I 12BIT CoE module, you must modify the EtherCAT master's control program.</p>
---------------	---

7.3.1. Terminals

The 24 V connector supplies power to the sensors. Power is supplied to the module through the E-bus connector.

Operative earth / shielding of analogue wires → section **3.1.1** Earth

7.3.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On
		Inoperative if E-bus LED = Off
	Red, 4x	EtherCAT watchdog control
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

The LED labeled "Power" indicates the state of the power supplied to the I/O module's I/O sensors.

Power		
State	LED flash code	Explanation
On	Green, on	24 V DC supply ok
Off	Off	24 V DC supply not ok

“Channel” LEDs

The "Channel" LEDs indicate the state of every channel.

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red, 1x	Current > 20.5 mA
	Red, 2x	Current < 3.5 mA (4...20 mA mode)

7.3.3. Function

The AI4-I 12BIT CoE module has 4 analogue current signal inputs. Their measuring range can be set separately for every channel, i.e. either to 0...20 mA or to 4...20 mA.

Analogue inputs

Check the following variable for the digitized input values:


Inputs		
Variable	Data type	Explanation
AnalogInputn	INT	Value measured on channel n (n= 0...3)

Measured value

0-20 mA current mode	
Current [mA]	Value [hex]
0	0x0
10	0x7FFF
20	0xFFFF

4-20 mA current mode	
Current [mA]	Value [hex]
4	0x0
12	0x7FFF
20	0xFFFF


Measured & variable values and state of AI4-I 12BIT CoE

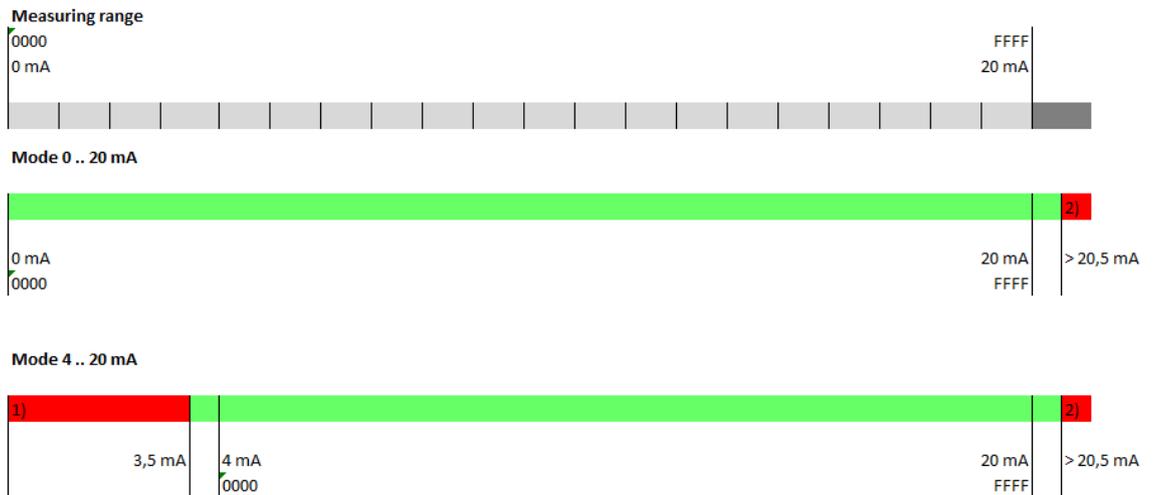


- 1) At a current of < 3.5 mA: EtherCat process image message "Input x low" and flash code at the input (red LED flashes 1x)
- 2) At a current of < 20.5 mA: EtherCat process image message "Input x high" and flash code at the input (red LED flashes 2x)

Module options

Conversion of the analogue values can be synchronized with DC (Distributed Clocks) or SM (Sync Manager).

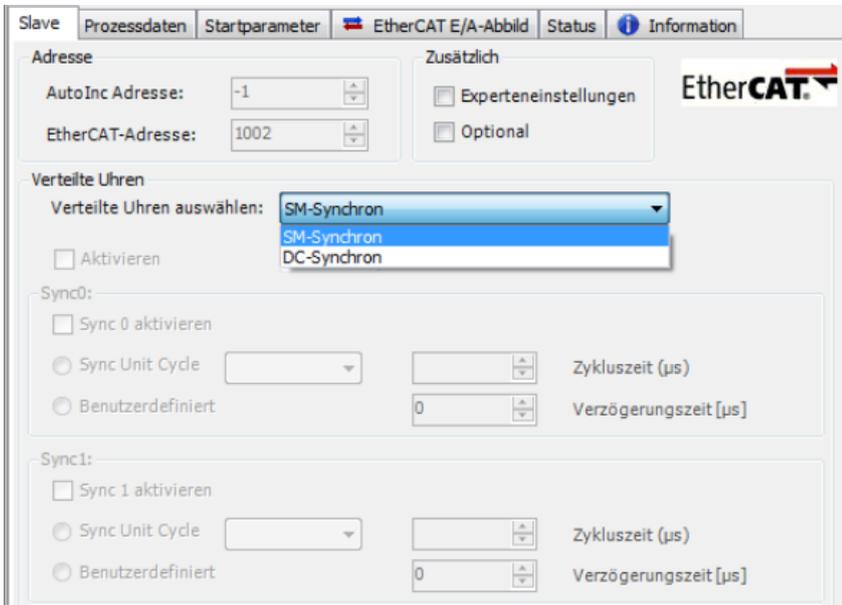

The process data objects stored as variables in the EtherCAT master's control program are used to access the input values and the module state.

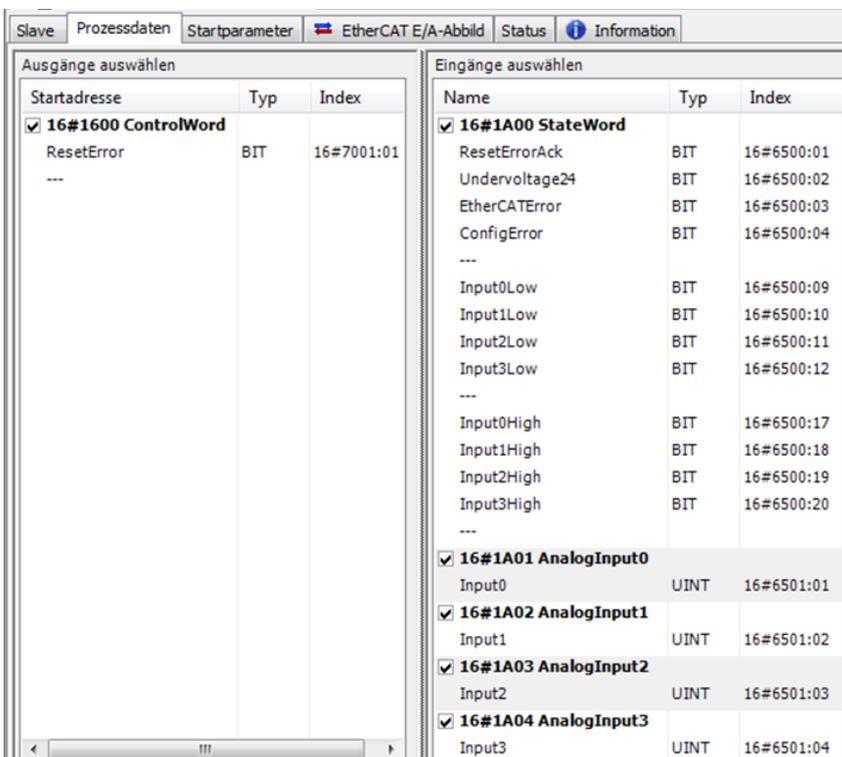


Service data objects (SDO) are available for details and settings.

You may run the configuration tool offline and choose the "Startup Parameters" to change some settings of AI4-I 12BIT CoE module (such as the properties of each of the inputs). The EtherCAT master will apply the settings when starting up the module.

You can also use the SDO transfer components available for the EtherCAT master to change settings at runtime.

Click/tap on "Add...", choose an object, and set the appropriate value.

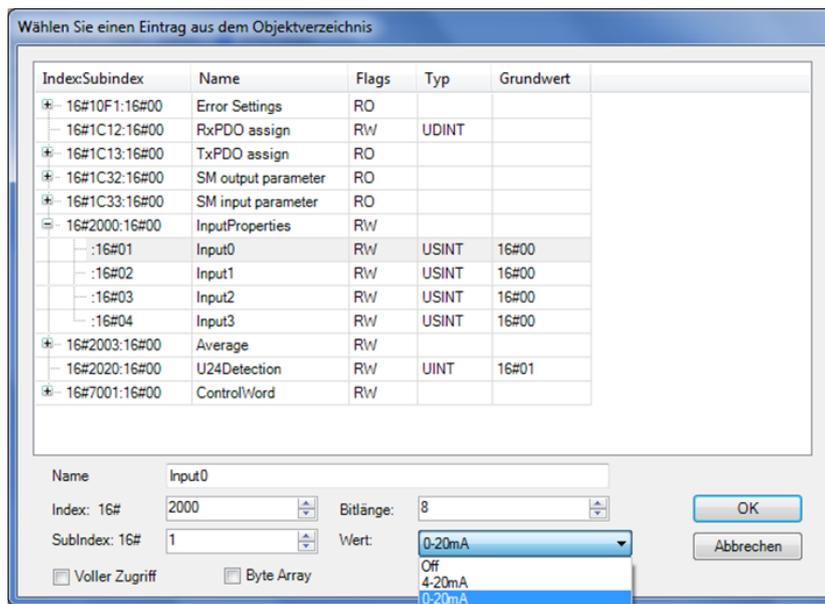

You can set up the following options for every channel:

Module options		
Name	Value	Explanation
InputProperties	0	Off (default)
	5	4-20 mA
	6	0-20 mA
Average	n=1...255	Inputn=average after n cycles (default=1)

StateWord

The state word (DWORD) is indicative of the module state:

StateWord		
Bit	Name	Explanation
0	ResetErrorAck	Acknowledges "Reset Error" in Module Control
1	Undervoltage24	Power to passive sensors < 19 V (no error, just info)
2	EtherCATError	Sync Manager Watchdog
3	ConfigError	Mismatch of Sync Manager's quantity structure
4-7		not used
8	Input0low	Current at 4-20 mA < 3.5 mA
9	Input1low	Current at 4-20 mA < 3.5 mA
10	Input2low	Current at 4-20 mA < 3.5 mA
11	Input3low	Current at 4-20 mA < 3.5 mA
12-15		not used
16	Input0high	Current > 20.5 mA
17	Input1high	Current > 20.5 mA
18	Input2high	Current > 20.5 mA
19	Input3high	Current > 20.5 mA
20-31	-	not used

Analogue inputs

Check the following variables for the digitized input values:

Inputs		
Variable	Data type	Explanation
Inputn	INT	Value of channel n (n = 0...3)

ControlWord

The control word contains a bit for acknowledging errors.

ControlWord		
Bit	Name	Explanation
0	ResetError	0 -> errors are retained, 1 -> errors cleared after removing their cause
1-15	-	not used

Object dictionary

Index	Name	Type	Default	Min Max	Access
1000	Device Type	UINT32	0x40191		RO
1001	Error Register	UINT8			RO
1008	Device Name	String	A14-I 12-Bit		RO
1009	Hardware Version	String	1.00		RO
100A	Software Version	String	1.00		RO
1018	Identity Object	Array			
1018, 0	Number of Entries	UINT8	4		RO
1018, 1	Vendor Id	UINT32	0x0048554B		RO
1018, 2	Product Code	UINT32	185339		RO
1018, 3	Revision Number	UINT32	1		RO
1018, 4	Serial Number	UINT32			RO
2000	Analog Input Properties	Array			
2000, 0	Number of Entries	UINT8	4		RO
2000, 1	Input 0	UINT8	Off	Off (0), 4-20mA (5), 0-20mA (6)	RW
2000, 2	Input 1	UINT8	Off	Off (0), 4-20mA (5), 0-20mA (6)	RW
2000, 3	Input 2	UINT8	Off	Off (0), 4-20mA (5), 0-20mA (6)	RW
2000, 4	Input 3	UINT8	Off	Off (0), 4-20mA (5), 0-20mA (6)	RW
2003	Input Average	Array			
2003, 0	Number of Entries	UINT8	4		RO
2003, 1	Input 0 Average	UINT8	1	1..255	RW
2003, 2	Input 1 Average	UINT8	1	1..255	RW
2003, 3	Input 2 Average	UINT8	1	1..255	RW
2003, 4	Input 3 Average	UINT8	1	1..255	RW
6401	Analogue input	Array			
6401, 0	Number of Entries	UINT8	4		RO
6401, 1	Analog Input 0	UINT16			RO P
6401, 2	Analog Input 1	UINT16			RO P
6401, 3	Analog Input 2	UINT16			RO P
6401, 4	Analog Input 3	UINT16			RO P
6500	StateWord	Array			
6500, 0	Number of Entries	UINT8	32		RO
6500, 1	ResetErrorAck	BOOL			RO P
6500, 2	Undervoltage24	BOOL			RO P
6500, 3	EtherCAT Error	BOOL			RO P
6500, 4	ConfigError	BOOL			RO P



Index	Name	Type	Default	Min Max	Access
6500, 5..8	-	BOOL			RO P
6500, 9	Input 0 low	BOOL			RO P
6500, 10	Input 1 low	BOOL			RO P
6500, 11	Input 2 low	BOOL			RO P
6500, 12	Input 3 low	BOOL			RO P
6500, 13..16	-	BOOL			RO P
6500, 17	Input 0 high	BOOL			RO P
6500, 18	Input 1 high	BOOL			RO P
6500, 19	Input 2 high	BOOL			RO P
6500, 20	Input 3 high	BOOL			RO P
6500, 21..32	-	BOOL			RO P
6500, 1	ResetErrorAck	BOOL			RO P
6500, 3	EtherCAT Error	BOOL			RO P
6500, 4	ConfigError	BOOL			RO P
7001	Module Control	Array			
7001, 0	Number of Entries	UINT8	1		RO
7001, 1	Reset Error	BOOL			RW P

RO=read-only, RW= read/write, P=process image

7.3.4. Technical data

AI4-I 12BIT CoE	
Label	E-I/O AI4-I 12BIT CoE
Part no.	204804000
Plug-in connector	18-pole 204800400 (not part of the module)
Analogue inputs	4
Resolution	12 bit
Measuring range	0 ... 20 mA, 4 ... 20 mA (final value: 20 mA)
Start AD conversion	synchronized with DC / SM
Conversion time	235 µs (if all channels are enabled)
Input filter cutoff frequency	100 kHz
Measuring error	< ±0,5 %, typ. < ±0,4 % of final value
Internal resistance	< 300 Ω
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20 % +25 %
E-bus load	190 mA
UL approval	

7.4. Analogue inputs for current measurement AI8-I 12BIT CoE

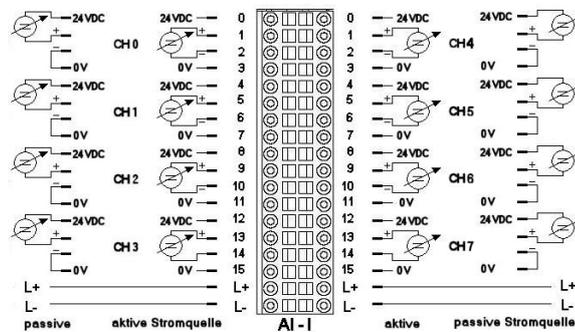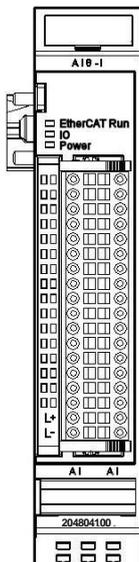

Front view of AI8-I 12BIT CoE I/O module I/O connection



The AI8-I 12BIT CoE module is the successor module NOT compatible with the AI8-I module.

Before replacing an AI8-I module with an AI8-I 12BIT CoE module, you must modify the EtherCAT master's control program.

7.4.1. Terminals

The 24 V connector supplies power to the sensors. Power is supplied to the module through the E-bus connector.

Operative earth / shielding of analogue wires → section **3.1.1** Earth

7.4.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On
		Inoperative if E-bus LED = Off
	Red, 4x	EtherCAT watchdog control
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

The LED labeled "Power" indicates the state of the power supplied to the I/O module's I/O sensors.

Power		
State	LED flash code	Explanation
On	Green, on	24 V DC supply ok
Off	Off	24 V DC supply not ok

“Channel” LEDs

The "Channel" LEDs indicate the state of every channel.

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red, 1x	Current > 20.5 mA
	Red, 2x	Current < 3.5 mA (4...20 mA mode)

7.4.3. Function

The AI8-I 12BIT CoE module has 8 analogue current signal inputs. Their measuring range can be set separately for every channel, i.e. either to 0...20 mA or to 4...20 mA.

Analogue inputs

Check the following variable for the digitized input values:


Inputs		
Variable	Data type	Explanation
AnalogInputn	INT	Value measured on channel n (n= 0...7)

Measured value

0-20 mA current mode	
Current [mA]	Value [hex]
0	0x0
10	0x7FFF
20	0xFFFF

4-20 mA current mode	
Current [mA]	Value [hex]
4	0x0
12	0x7FFF
20	0xFFFF


Measured & variable values and state of AI8-I 12BIT CoE

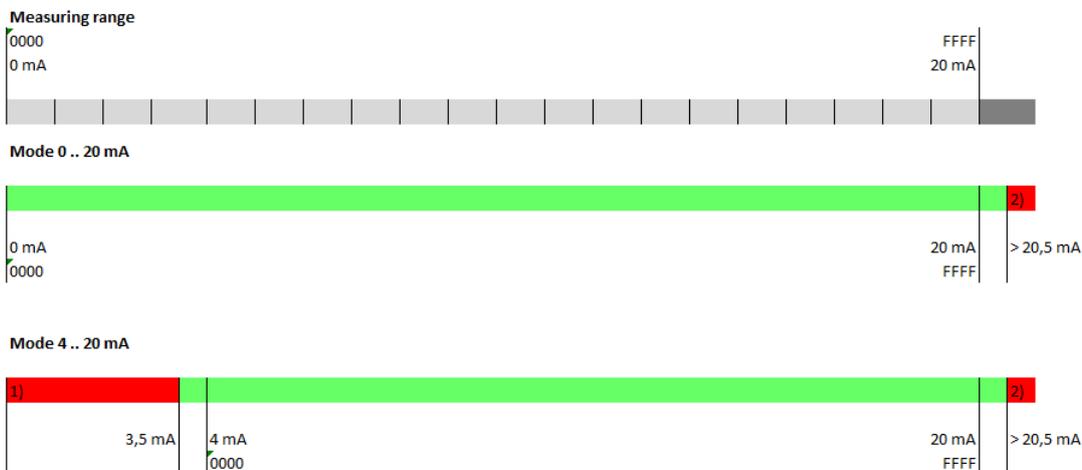


1) At a current of < 3.5 mA: EtherCat process image message "Input x low" and flash code at the input (red LED flashes 1x)
 2) At a current of < 20.5 mA: EtherCat process image message "Input x high" and flash code at the input (red LED flashes 2x)

Module options

Conversion of the analogue values can be synchronized with DC (Distributed Clocks) or SM (Sync Manager).

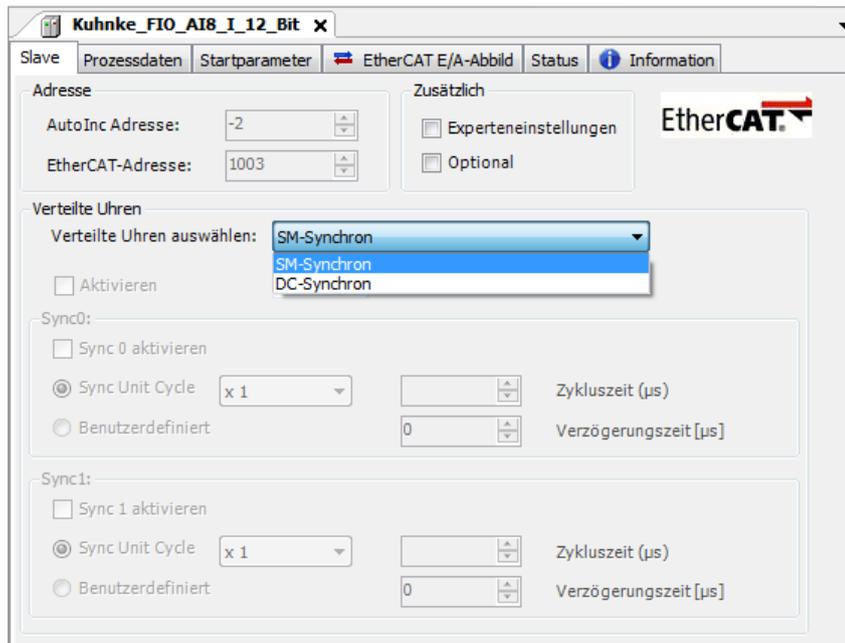

The process data objects stored as variables in the EtherCAT master's control program are used to access the input values and the module state.

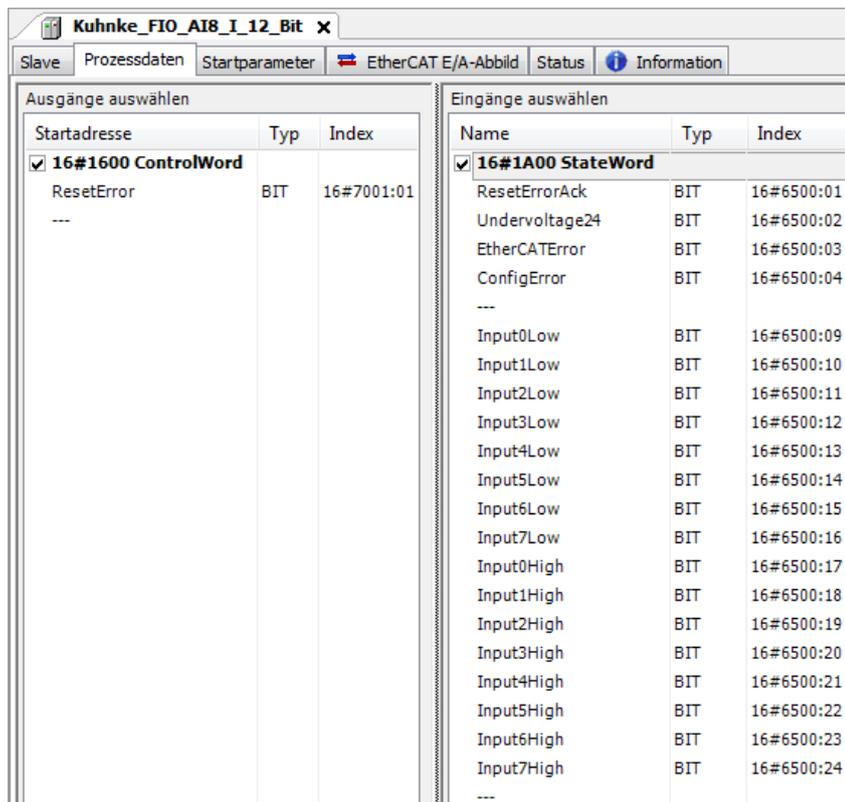


Service data objects (SDO) are available for details and settings.

You may run the configuration tool offline and choose the "Startup Parameters" to change some settings of AI8-I 12BIT CoE module (such as the properties of each of the inputs). The EtherCAT master will apply the settings when starting up the module.

You can also use the SDO transfer components available for the EtherCAT master to change settings at runtime.

Click/tap on "Add...", choose an object, and set the appropriate value.

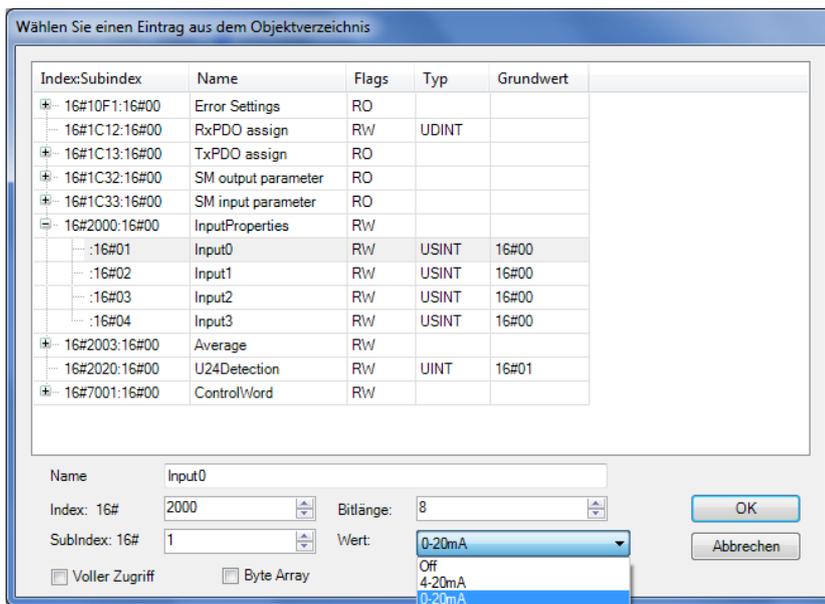

You can set up the following options for every channel:

Module options		
Name	Value	Explanation
InputProperties	0	Off (default)
	5	4-20 mA
	6	0-20 mA
Average	n=1...255	Inputn=average after n cycles (default=1)

StateWord

The state word (DWORD) is indicative of the module state:

StateWord		
Bit	Name	Explanation
0	ResetErrorAck	Acknowledges "Reset Error" in Module Control
1	Undervoltage24	Power to passive sensors < 19 V (no error, just info)
2	EtherCATError	Sync Manager Watchdog
3	ConfigError	Mismatch of Sync Manager's quantity structure
4-7		not used
8	Input0low	Current at 4-20 mA < 3.5 mA
9	Input1low	Current at 4-20 mA < 3.5 mA
10	Input2low	Current at 4-20 mA < 3.5 mA
11	Input3low	Current at 4-20 mA < 3.5 mA
12	Input4low	Current at 4-20 mA < 3.5 mA
13	Input5low	Current at 4-20 mA < 3.5 mA
14	Input6low	Current at 4-20 mA < 3.5 mA
15	Input7low	Current at 4-20 mA < 3.5 mA
16	Input0high	Current > 20.5 mA
17	Input1high	Current > 20.5 mA
18	Input2high	Current > 20.5 mA
19	Input3high	Current > 20.5 mA
20	Input4high	Current > 20.5 mA
21	Input5high	Current > 20.5 mA
22	Input6high	Current > 20.5 mA
23	Input7high	Current > 20.5 mA
24-31	-	not used

Analogue inputs

Check the following variables for the digitized input values:

Inputs		
Variable	Data type	Explanation
Inputn	INT	Value of channel n (n = 0...7)

ControlWord

The control word contains a bit for acknowledging errors.

ControlWord		
Bit	Name	Explanation
0	ResetError	0 -> errors are retained, 1 -> errors cleared after removing their cause
1-15	-	not used

Object dictionary

Index	Name	Type	Default	Min Max	Access
1000	Device Type	UINT32	0x40191		RO
1001	Error Register	UINT8			RO
1008	Device Name	String	A18-I 12-Bit		RO
1009	Hardware Version	String	1.00		RO
100A	Software Version	String	1.00		RO
1018	Identity Object	Array			
1018, 0	Number of Entries	UINT8	4		RO
1018, 1	Vendor Id	UINT32	0x0048554B		RO
1018, 2	Product Code	UINT32	185345		RO
1018, 3	Revision Number	UINT32	1		RO
1018, 4	Serial Number	UINT32			RO
2000	Analog Input Properties	Array			
2000, 0	Number of Entries	UINT8	8		RO
2000, 1	Input 0	UINT8	Off	Off (0), 4-20mA (5), 0-20mA (6)	RW
2000, 2	Input 1	UINT8	Off	Off (0), 4-20mA (5), 0-20mA (6)	RW
2000, 3	Input 2	UINT8	Off	Off (0), 4-20mA (5), 0-20mA (6)	RW
2000, 4	Input 3	UINT8	Off	Off (0), 4-20mA (5), 0-20mA (6)	RW
2000, 5	Input 4	UINT8	Off	Off (0), 4-20mA (5), 0-20mA (6)	RW
2000, 6	Input 5	UINT8	Off	Off (0), 4-20mA (5), 0-20mA (6)	RW
2000, 7	Input 6	UINT8	Off	Off (0), 4-20mA (5),	RW

Index	Name	Type	Default	Min Max	Access
2000, 8	Input 7	UINT8	Off	0-20mA (6) Off (0), 4-20mA (5), 0-20mA (6)	RW
2003	Input Average	Array			
2003, 0	Number of Entries	UINT8	8		RO
2003, 1	Input 0 Average	UINT8	1	1..255	RW
2003, 2	Input 1 Average	UINT8	1	1..255	RW
2003, 3	Input 2 Average	UINT8	1	1..255	RW
2003, 4	Input 3 Average	UINT8	1	1..255	RW
2003, 5	Input 4 Average	UINT8	1	1..255	RW
2003, 6	Input 5 Average	UINT8	1	1..255	RW
2003, 7	Input 6 Average	UINT8	1	1..255	RW
2003, 8	Input 7 Average	UINT8	1	1..255	RW
6401	Analogue input	Array			
6401, 0	Number of Entries	UINT8	8		RO
6401, 1	Analog Input 0	UINT16			RO P
6401, 2	Analog Input 1	UINT16			RO P
6401, 3	Analog Input 2	UINT16			RO P
6401, 4	Analog Input 3	UINT16			RO P
6401, 5	Analog Input 4	UINT16			RO P
6401, 6	Analog Input 5	UINT16			RO P
6401, 7	Analog Input 6	UINT16			RO P
6401, 8	Analog Input 7	UINT16			RO P
6500	StateWord	Array			
6500, 0	Number of Entries	UINT8	32		RO
6500, 1	ResetErrorAck	BOOL			RO P
6500, 2	Undervoltage24	BOOL			RO P
6500, 3	EtherCAT Error	BOOL			RO P
6500, 4	ConfigError	BOOL			RO P
6500, 5..8	-	BOOL			RO P
6500, 9	Input 0 low	BOOL			RO P
6500, 10	Input 1 low	BOOL			RO P
6500, 11	Input 2 low	BOOL			RO P
6500, 12	Input 3 low	BOOL			RO P
6500, 13	Input 4 low	BOOL			RO P
6500, 14	Input 5 low	BOOL			RO P
6500, 15	Input 6 low	BOOL			RO P
6500, 16	Input 7 low	BOOL			RO P
6500, 17	Input 0 high	BOOL			RO P
6500, 18	Input 1 high	BOOL			RO P
6500, 19	Input 2 high	BOOL			RO P
6500, 20	Input 3 high	BOOL			RO P
6500, 21	Input 4 high	BOOL			RO P
6500, 22	Input 5 high	BOOL			RO P


Index	Name	Type	Default	Min Max	Access
6500, 23	Input 6 high	BOOL			RO P
6500, 24	Input 7 high	BOOL			RO P
6500, 25..32	-	BOOL			RO P
6500, 1	ResetErrorAck	BOOL			RO P
6500, 3	EtherCAT Error	BOOL			RO P
6500, 4	ConfigError	BOOL			RO P
7001	Module Control	Array			
7001, 0	Number of Entries	UINT8	1		RO
7001, 1	Reset Error	BOOL			RW P

RO=read-only, RW= read/write, P=process image

7.4.4. Technical data

AI8-I 12BIT CoE	
Label	E-I/O AI8-I 12BIT CoE
Part no.	204804100
Plug-in connector	36-pole 204800300 (not part of the module)
Analogue inputs	8
Resolution	12 bit
Measuring range	0 ... 20 mA, 4 ... 20 mA (final value: 20 mA)
Start AD conversion	synchronized with DC / SM
Conversion time	290 µs (if all channels are enabled)
Input filter cutoff frequency	100 kHz
Measuring error	< ±0,5 %, typ. < ±0,4 % of final value
Internal resistance	< 300 Ω
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20 % +25 %
E-bus load	190 mA
UL approval	 LISTED 59DM E242595 IND.CONT.EQ.

7.5. Analogue inputs for voltage measurement AI4/8-U

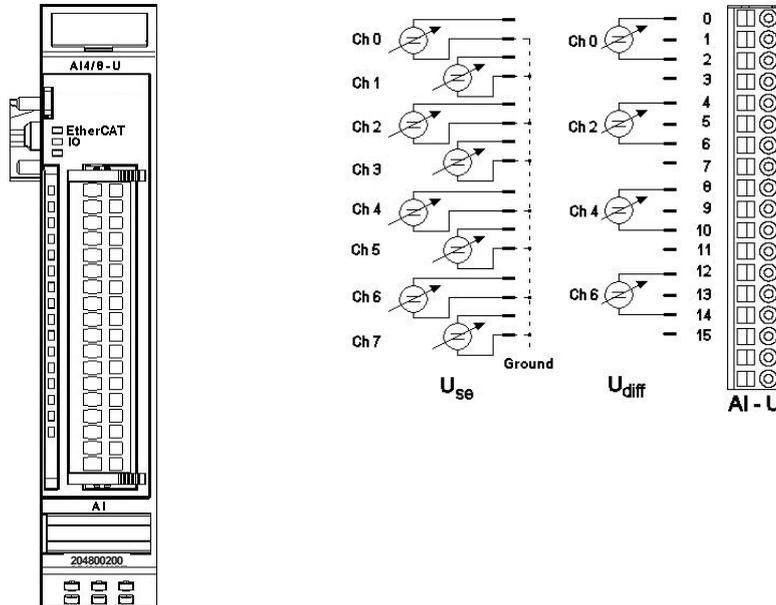

Front view of AI4/8-U I/O module I/O connection



The AI4/8-U module is no longer recommended for new projects. Please use the successive AI4/8-U 13BIT CoE module.

7.5.1. Terminals

The module needs no separate 24 V connector. Power is supplied to the module through the E-bus connector. Operative earth / shielding of analog wires → section 3.1.1 Earth

7.5.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On
		Inoperative if E-bus LED = Off
	Red, 4x	EtherCAT watchdog control
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

There is no LED labeled “Power” because a separate power feed is not required.

“Channel” LEDs

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled

7.5.3. Function

The AI4/8-U module has 8 analogue inputs. If signal lines are single-ended (measured against earth, L-), 8 channels are available. To measure differential signals, you will need 2 channels for every signal, i.e. you can pick up no more than 4 differential signals. Channels can be combined as follows: 0/1, 2/3, 4/5 and 6/7.

Analogue inputs

Check the following variable for the digitized input values:

Inputs		
Variable	Data type	Explanation
Channel_n	INT	Value measured on channel n (n= 0...7)

Analogue values voltage

Measuring	Variable value (for 16 bit)					
	bipolar			unipolar		
volt	decimal	CODESYS (INT)	hexadecimal	decimal	CODESYS (INT)	hexadecimal
-10	32768	-32768	16#8000			
-9	36044	-29492	16#8CCC			
-8	39321	-26215	16#9999			
-7	42598	-22938	16#A666			
-6	45875	-19661	16#B333			
-5	49152	-16384	16#C000			
-4	52428	-13108	16#CCCC			
-3	55705	-9831	16#D999			
-2	58982	-6554	16#E666			
-1	62244	-3292	16#F324			
0	0	0	0	0	0	0
1	3276	3276	16#0CCC	6553	6553	16#1999
2	6553	6553	16#1999	13107	13107	16#3332
3	9830	9830	16#2666	19660	19660	16#4CCC
4	13106	13106	16#3332	26214	26214	16#6665
5	16383	16383	16#3FFF	32767	32767	16#7FFF
6	19660	19660	16#4CCC	39320	-26216	16#9998
7	22936	22936	16#5998	45874	-19662	16#B332
8	26213	26213	16#6665	52427	-13109	16#CCCB
9	29490	29490	16#7332	58981	-6555	16#E665
10	32767	32767	16#7FFF	65534	-2	16#FFFE

Module control

The module provides you with various operational options.

To set up the module choose the options as appropriate and accept by setting control bit “SetOptions” to a rising edge. The module will confirm by returning “OptionsSet”.

There are various “module error” bits that the module uses to indicate errors. The states of the error bits are retained and also used for error indication by the “I/O” LED. To reset the error bits set control bit “ResetError” to a rising edge.

Error bits		
Variable	Data type	Explanation
SetOptions	BOOL	Rising edge → accepts module options
ResetError	BOOL	Rising edge → acknowledges error

Module options

The following options are available for module AI4/8-U:

Module options		
Variable	Data type	Explanation
Channel_n_n+1_Differential	BOOL	The difference in voltages of channel n and channel n+1 is measured and output to channel n.
Channel_n_On	BOOL	Enable channel n
Channel_n_Unipolar	BOOL	Change measuring range of channel n from bipolar +10 V ... -10 V to unipolar 0... 10 V (doubles the resolution)
Channel_n_Filter	USINT	Filter on channel n New values avail. in k/3 ms (k=0..255)
n		0 ... 7 Channel number

To set and accept options, see Module control

Module state

The following states are indicated:

Module state		
Variable	Data type	Explanation
Shortcut	BOOL	Not used
Undervoltage	BOOL	Not used
Watchdog	BOOL	Internal watchdog of module
EtherCAT_Error	BOOL	Configuration error or watchdog control
Specific_Error	BOOL	Module-specific fault
OptionsSet	BOOL	Sent by module to acknowledge SetOptions

To reset the messages, see Module control

Module-specific messages

There are no module-specific messages for this module.

Conversion time

The analogue signals are converted one by one down every channel. Disabling one or several channels will shorten the entire A/D conversion cycle.

“Filter” in this case means to compute an average when the set filter time is over.

Analogue value conversion runs cyclically and is not synchronized with the receipt of EtherCAT telegrams. The cycle consists of the analogue value conversion plus transmitting the values into the EtherCAT data area.

Conversion time			
Number of channels	Cycle time in ms (all filters=0)	Number of channels	Cycle time in ms (all filters=0)
1	270 µs	5	630 µs
2	360 µs	6	710 µs
3	450 µs	7	800 µs
4	540 µs	8	890 µs

NOTICE

If you are aiming for a high sampling frequency, the EtherCAT master should do the filtering (averaging) because it will normally have much more processing power.

NOTICE

Take the EtherCAT cycle into account to assess how much the values stored by the EtherCAT master are up-to-date. The module described in this section will accept the above times as the ideal EtherCAT cycle setup.

Quality of analogue values


NOTICE

- Best results are obtained by
- connecting the shield of the signal cables to operative earth
 - connecting unused single-ended lines to Ground
 - short-circuiting unused differential inputs

7.5.4. Technical data

AI4/8-U	
Label	E-I/O AI4/8-U 13BIT
Part no.	204800200
Plug-in connector	18-pole 204800400 (not part of the module)
Analogue inputs	8 single ended or 4 differential
Resolution	13 Bit (1.221 μ V unipolar, 2.442 μ V bipolar)
Measuring range	0 ... 10 V, \pm 10 V
Temperature drift	< -15 ppm/ $^{\circ}$ C regarding range limit
Critical frequency	typical 1 MHz
Input resistance	> 100 M Ω
Sampling frequency	1.12 kHz (if all channels are enabled)
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	from coupler through E-bus connector
E-bus load	190 mA
UL approval	

7.6. Analogue inputs for voltage measurement AI4/8-U 13BIT CoE

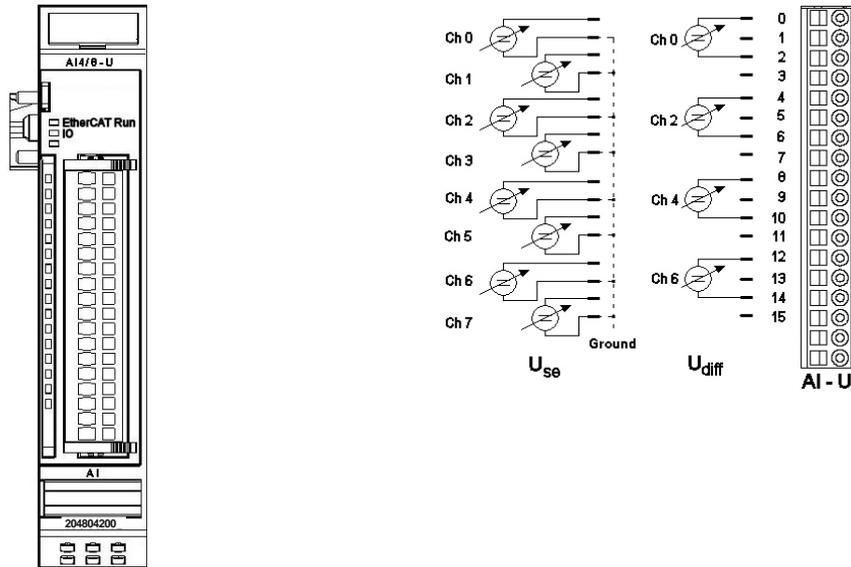

Front view of AI4/8-U 13BIT CoE I/O module I/O connection



The AI4/8-U 13BIT CoE module is the successor module **NOT** compatible with the AI8-I module.
Before replacing an AI4/8-U module with an AI4/8-U 13BIT CoE module, you must modify the EtherCAT master's control program.

7.6.1. Terminals

The module needs no separate 24 V connector. Power is supplied to the module through the E-bus connector.
Operative earth / shielding of analogue wires → section 3.1.1 Earth

7.6.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On
		Inoperative if E-bus LED = Off
	Red, 4x	EtherCAT watchdog control
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

There is no LED labeled “Power” because a separate power feed is not required.

“Channel” LEDs

The "Channel" LEDs indicate the state of every channel.

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled

7.6.3. Function

The AI4/8-U 13BIT CoE module has 8 analogue inputs. If signal lines are single-ended (measured against earth, L-), 8 channels are available. To measure differential signals, you will need 2 channels for every signal, i.e. you can pick up no more than 4 differential signals. Channels can be combined as follows: 0/1, 2/3, 4/5 and 6/7.

Analogue voltage values

Measured value			Variable value (@ 16 bits)			
±10 V	±5 V	±2,5 V	Bipolar		Unipolar [UINT*]	
Volt	Volt	Volt	Decimal	Hexadecimal	Decimal	Hexadecimal
-10	-5	-2.5	-32768	16#8000		
-9	-4.5	-2.25	-29492	16#8CCC		
-8	-4	-2	-26215	16#9999		
-7	-3.5	-1.75	-22938	16#A666		
-6	-3	-1.5	-19661	16#B333		
-5	-2.5	-1.25	-16384	16#C000		
-4	-2	-1	-13108	16#CCCC		
-3	-1.5	-0.75	-9831	16#D999		
-2	-1	-0.5	-6574	16#E666		
-1	-0.5	-0.25	-3292	16#F324		
0	0	0	0	0	0	0
1	0.5	0.25	3276	16#0CCC	6553	16#1999
2	1	0.5	6553	16#1999	13107	16#3332
3	1.5	0.75	9830	16#2666	19660	16#4CCC
4	2	1	13106	16#3332	26214	16#6665
5	2.5	1.25	16383	16#3FFF	32767	16#7FFF
6	3	1.5	19660	16#4CCC	39320	16#9998
7	3.5	1.75	22936	16#5998	45874	16#B332
8	4	2	26213	16#6665	52427	16#CCCB
9	4.5	2.25	29490	16#7332	58981	16#E665
10	5	2.5	32767	16#7FFF	65534	16#FFFE


*Data type conversion required




If the inputs are not used but switched on, the measured values displayed in the I / O image are floated. To prevent this, you should deactivate the measurement channel at the start parameters or set the input to ground (short-circuit when measuring differential signals).

Module options

Conversion of the analogue values can be synchronized with DC (Distributed Clocks) or SM (Sync Manager).

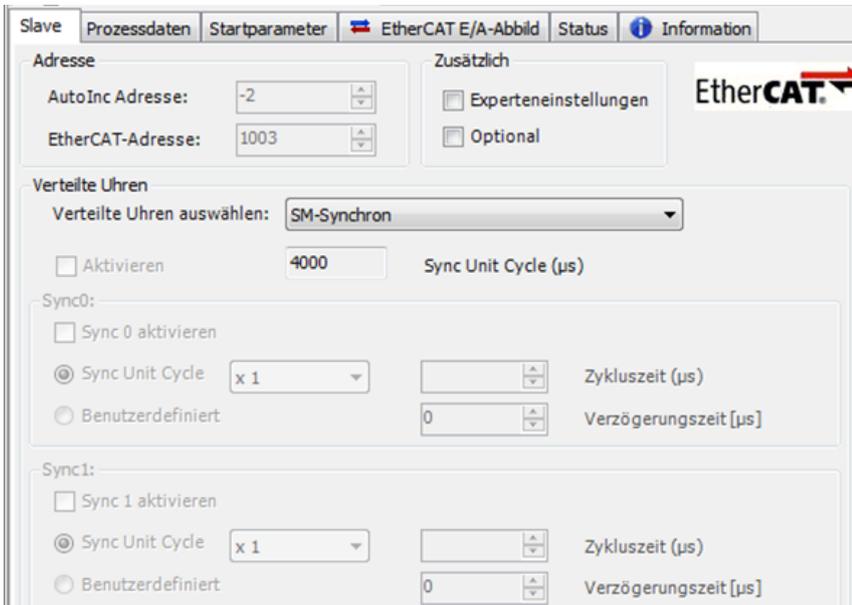

The process data objects stored as variables in the EtherCAT master's control program are used to access the input values and the module state.

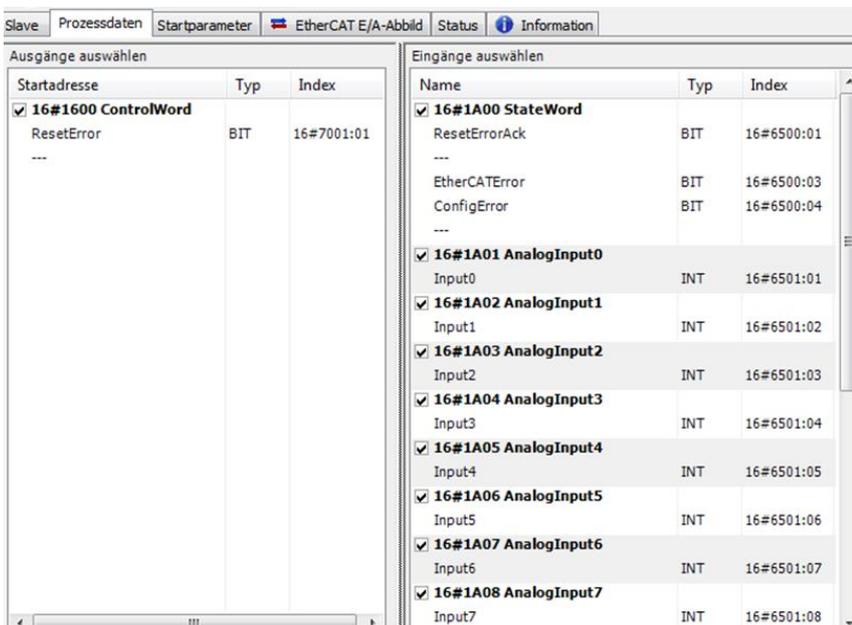


Service data objects (SDO) are available for details and settings.

You may run the configuration tool offline and choose the "Startup Parameters" to change some settings of AI4/8-U 13BIT CoE module (such as the properties of each of the inputs). The EtherCAT master will apply the settings when starting up the module.

You can also use the SDO transfer components available for the EtherCAT master to change settings at runtime.

Click/tap on "Add...", choose an object, and set the appropriate value.

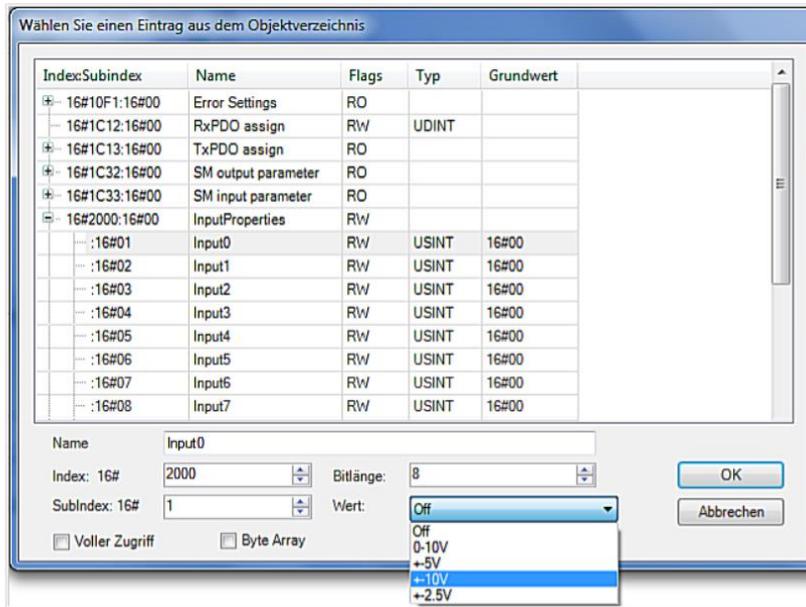

You can set up the following options:

Module options		
Name	Value	Explanation
InputProperties	0	Off (default)
	1	0-10 V
	2	±5 V
	3	±10 V
	4	±2.5 V
InputSwitch	0	Single-Ended (default)
	1	Differential
Average	n=1...255	Inputn=average after n cycles (default=1)

StateWord

The state word is indicative of the module state:

StateWord		
Bit	Name	Bedeutung
0	ResetErrorAck	Acknowledges "Reset Error" in Module Control
1		not used
2	EtherCATErrror	Sync Manager Watchdog
3	ConfigError	Mismatch of Sync Manager's quantity structure
4-15		not used

Analogue inputs

Check the following variables for the digitized input values:

Inputs		
Variable	Data type	Explanation
Inputn	INT	Value of channel n (n= 0...7)

ControlWord

The control word contains a bit for acknowledging errors.

ControlWord		
Bit	Name	Explanation
0	ResetError	0 -> errors are retained, 1 -> errors cleared after removing their cause
1-15	-	not used

Object dictionary

Index	Name	Type	Default	Min Max	Access
1000	Device Type	UINT32	0x40191		RO
1001	Error Register	UINT8			RO
1008	Device Name	String	A14/8-U 13-Bit		RO
1009	Hardware Version	String	1.00		RO
100A	Software Version	String	1.00		RO
1018	Identity Object	Array			
1018, 0	Number of Entries	UINT8	4		RO
1018, 1	Vendor Id	UINT32	0x0048554B		RO

Index	Name	Type	Default	Min Max	Access
1018, 2	Product Code	UINT32	185340		RO
1018, 3	Revision Number	UINT32	2		RO
1018, 4	Serial Number	UINT32	0		RO
2000	Analog Input Properties	Array			
2000, 0	Number of Entries	UINT8	8		RO
2000, 1	Input 0	UINT8	Off	Off (0), 0-10V (1), +-5V (2) +-10V (3) +-2.5V (4)	RW
2000, 2	Input 1	UINT8	Off	Off (0), 0-10V (1), +-5V (2) +-10V (3) +-2.5V (4)	RW
2000, 3	Input 2	UINT8	Off	Off (0), 0-10V (1), +-5V (2) +-10V (3) +-2.5V (4)	RW
2000, 4	Input 3	UINT8	Off	Off (0), 0-10V (1), +-5V (2) +-10V (3) +-2.5V (4)	RW
2000, 5	Input 4	UINT8	Off	Off (0), 0-10V (1), +-5V (2) +-10V (3) +-2.5V (4)	RW
2000, 6	Input 5	UINT8	Off	Off (0), 0-10V (1), +-5V (2) +-10V (3) +-2.5V (4)	RW
2000, 7	Input 6	UINT8	Off	Off (0), 0-10V (1), +-5V (2) +-10V (3) +-2.5V (4)	RW
2000, 8	Input 7	UINT8	Off	Off (0), 0-10V (1), +-5V (2) +-10V (3) +-2.5V (4)	RW
2001	Input Switch	Array			
2001, 0	Number of Entries	UINT8	4		RO
2001, 1	Input 0_1 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW


Index	Name	Type	Default	Min Max	Access
2001, 2	Input 2_3 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW
2001, 3	Input 4_5 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW
2001, 4	Input 6_7 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW
2003	Input Filter	Array			
2003, 0	Number of Entries	UINT8	8		RO
2003, 1	Input 0 Average	UINT8	1	1..255	RW
2003, 2	Input 1 Average	UINT8	1	1..255	RW
2003, 3	Input 2 Average	UINT8	1	1..255	RW
2003, 4	Input 3 Average	UINT8	1	1..255	RW
2003, 5	Input 4 Average	UINT8	1	1..255	RW
2003, 6	Input 5 Average	UINT8	1	1..255	RW
2003, 7	Input 6 Average	UINT8	1	1..255	RW
2003, 8	Input 7 Average	UINT8	1	1..255	RW
6401	Analogue input	Array			
6401, 0	Number of Entries	UINT8	8		RO
6401, 1	Analog Input 0	UINT16			RO P
6401, 2	Analog Input 1	UINT16			RO P
6401, 3	Analog Input 2	UINT16			RO P
6401, 4	Analog Input 3	UINT16			RO P
6401, 5	Analog Input 4	UINT16			RO P
6401, 6	Analog Input 5	UINT16			RO P
6401, 7	Analog Input 6	UINT16			RO P
6401, 8	Analog Input 7	UINT16			RO P
6500	StateWord	Array			
6500, 0	Number of Entries	UINT8	16		RO
6500, 1	ResetErrorAck	BOOL			RO P
6500, 3	EtherCAT Error	BOOL			RO P
6500, 4	ConfigError	BOOL			RO P
7001	Module Control	Array			
7001, 0	Number of Entries	UINT8	1		RO
7001, 1	Reset Error	BOOL			RW P

RO=read-only, RW= read/write, P=process image

7.6.4. Technical data

AI4/8-U 13BIT CoE	
Label	E-I/O AI4/8-U 13BIT CoE
Part no.	204804200
Plug-in connector	18-pole 204800400 (not part of the module)
Analogue inputs	8 single ended or 4 differential
Resolution	13 bit
Measuring range	0 ... 10 V, ± 5 V, ± 10 V, $\pm 2,5$ V
Start AD conversion	synchronized with DC / SM
Conversion time	464 μ s (if all channels are enabled)
Input filter cutoff frequency	typ. 1 kHz
Measuring error	$< \pm 0,4$ %, typ. $< \pm 0,2$ % of final value
Internal resistance	> 1 M Ω
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20 % +25 %
E-bus load	190 mA
UL approval	

7.7. Analogue inputs for voltage measurement AI8/16-U 13BIT CoE

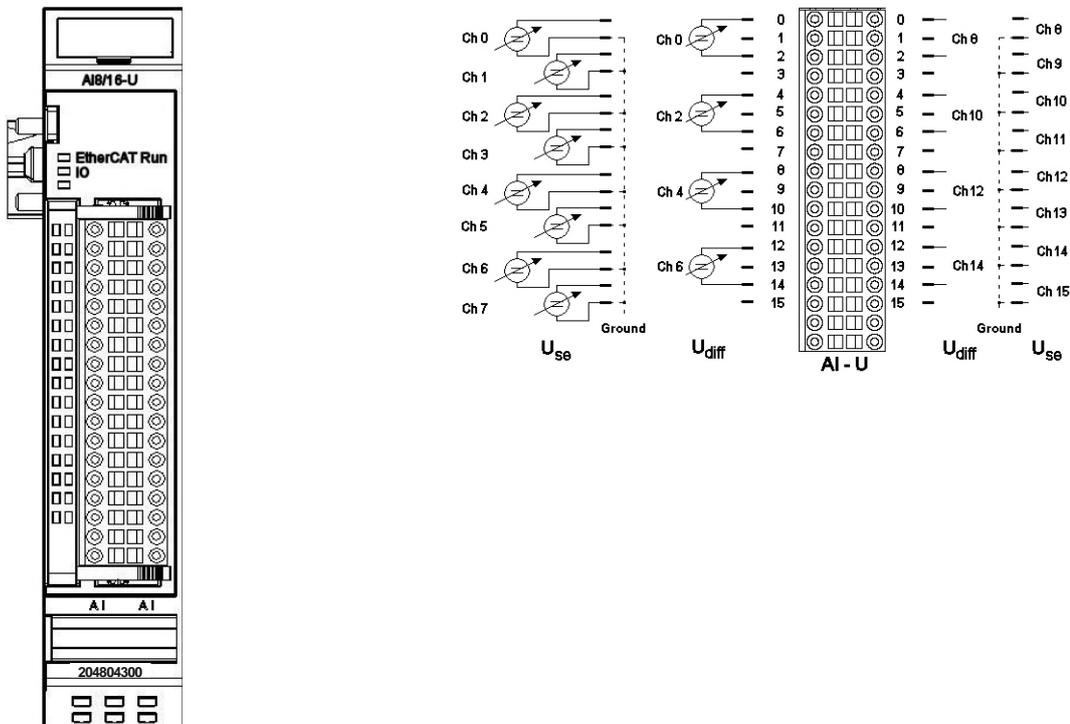

Front view of AI8/16-U 13BIT CoE I/O module I/O connection

7.7.1. Terminals

The module needs no separate 24 V connector. Power is supplied to the module through the E-bus connector. Operative earth / shielding of analogue wires → section 3.1.1 Earth

7.7.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On Inoperative if E-bus LED = Off
	Red, 4x	EtherCAT watchdog control
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

There is no LED labeled “Power” because a separate power feed is not required.

“Channel” LEDs

The "Channel" LEDs indicate the state of every channel.

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled

7.7.3. Function

The AI8/16-U 13BIT CoE module has 16 analogue inputs. If signal lines are single-ended (measured against earth, L-), 16 channels are available. To measure differential signals, you will need 2 channels for every signal, i.e. you can pick up no more than 8 differential signals. Channels can be combined as follows: 0/1, 2/3, 4/5, 6/7, 8/9, 10/11, 12/13 and 14/15.

Analogue voltage values

Measured value			Variable value (@ 16 bits)			
±10 V	±5 V	±2.5 V	Bipolar		Unipolar [UINT*]	
Volt	Volt	Volt	Decimal	Hexadecimal	Decimal	Hexadecimal
-10	-5	-2.5	-32768	16#8000		
-9	-4.5	-2.25	-29492	16#8CCC		
-8	-4	-2	-26215	16#9999		
-7	-3.5	-1.75	-22938	16#A666		
-6	-3	-1.5	-19661	16#B333		
-5	-2.5	-1.25	-16384	16#C000		
-4	-2	-1	-13108	16#CCCC		
-3	-1.5	-0.75	-9831	16#D999		
-2	-1	-0.5	-6574	16#E666		
-1	-0.5	-0.25	-3292	16#F324		
0	0	0	0	0	0	0
1	0.5	0.25	3276	16#0CCC	6553	16#1999
2	1	0.5	6553	16#1999	13107	16#3332
3	1.5	0.75	9830	16#2666	19660	16#4CCC
4	2	1	13106	16#3332	26214	16#6665
5	2.5	1.25	16383	16#3FFF	32767	16#7FFF
6	3	1.5	19660	16#4CCC	39320	16#9998
7	3.5	1.75	22936	16#5998	45874	16#B332
8	4	2	26213	16#6665	52427	16#CCCB
9	4.5	2.25	29490	16#7332	58981	16#E665
10	5	2.5	32767	16#7FFF	65534	16#FFFE

*Data type conversion required



If the inputs are not used but switched on, the measured values displayed in the I / O image are floated. To prevent this, you should deactivate the measurement channel at the start parameters or set the input to ground (short-circuit when measuring differential signals).

Module options

Conversion of the analogue values can be synchronized with DC (Distributed Clocks) or SM (Sync Manager).

The screenshot shows the 'Startparameter' tab of the EtherCAT E/A-Abbild configuration window. The 'Verteilte Uhren' section is active, with 'Verteilte Uhren auswählen' set to 'SM-Synchron'. The 'Aktivieren' checkbox is checked, and the 'Sync Unit Cycle (µs)' is set to 4000. Below this, there are two sections for 'Sync0' and 'Sync1'. Each section has a 'Sync 0/1 aktivieren' checkbox (unchecked), a 'Sync Unit Cycle' radio button (selected), a multiplier dropdown set to 'x 1', and input fields for 'Zykluszeit (µs)' and 'Verzögerungszeit [µs]' (set to 0).

The screenshot shows the 'Startparameter' tab of the EtherCAT E/A-Abbild configuration window. It displays two tables for selecting outputs and inputs.

Ausgänge auswählen		
Startadresse	Typ	Index
<input checked="" type="checkbox"/> 16#1600 ControlWord		
ResetError	BIT	16#7001:01

Eingänge auswählen		
Name	Typ	Index
<input checked="" type="checkbox"/> 16#1A00 StateWord		
ResetErrorAck	BIT	16#6500:01

EtherCATError	BIT	16#6500:03
ConfigError	BIT	16#6500:04

<input checked="" type="checkbox"/> 16#1A01 AnalogInput0		
Input0	INT	16#6501:01
<input checked="" type="checkbox"/> 16#1A02 AnalogInput1		
Input1	INT	16#6501:02
<input checked="" type="checkbox"/> 16#1A03 AnalogInput2		
Input2	INT	16#6501:03
<input checked="" type="checkbox"/> 16#1A04 AnalogInput3		
Input3	INT	16#6501:04
<input checked="" type="checkbox"/> 16#1A05 AnalogInput4		
Input4	INT	16#6501:05
<input checked="" type="checkbox"/> 16#1A06 AnalogInput5		
Input5	INT	16#6501:06
<input checked="" type="checkbox"/> 16#1A07 AnalogInput6		
Input6	INT	16#6501:07
<input checked="" type="checkbox"/> 16#1A08 AnalogInput7		
Input7	INT	16#6501:08


The process data objects stored as variables in the EtherCAT master's control program are used to access the input values and the module state.

Service data objects (SDO) are available for details and settings.

You may run the configuration tool offline and choose the "Startup Parameters" to change some settings of module AI8/16-U 13BIT CoE (such as the properties of each of the inputs). The EtherCAT master will apply the settings when starting up the module.

You can also use the SDO transfer components available for the EtherCAT master to change settings at runtime.

Click/tap on "Add...", choose an object, and set the appropriate value.

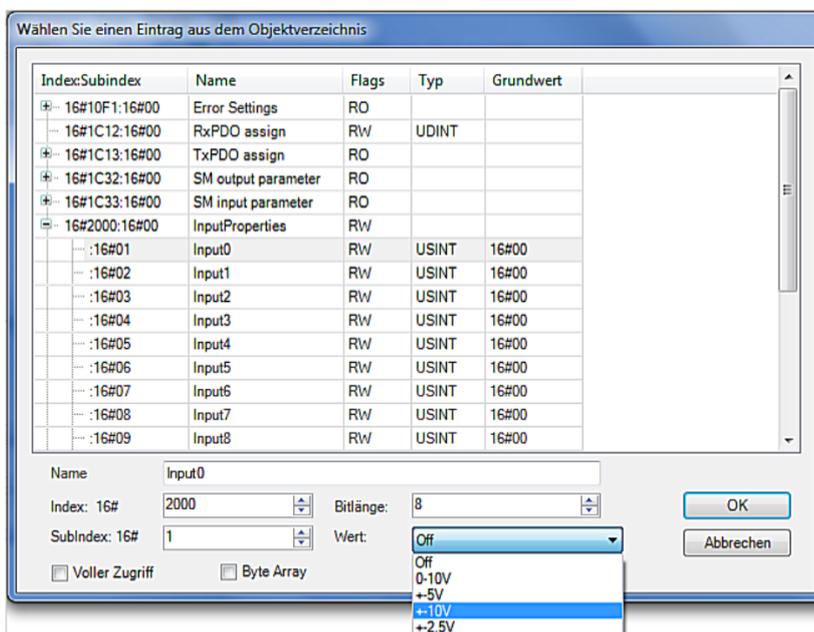

You can set up the following options for every channel:

Module options		
Name	Value	Explanation
InputProperties	0	Off (default)
	1	0-10 V
	2	±5 V
	3	±10 V
	4	±2.5 V
InputSwitch	0	Single-Ended (default)
	1	Differential
Average	n=1...255	Inputn=average after n cycles (default=1)

StateWord

The state word is indicative of the module state:

StateWord		
Bit	Name	Explanation
0	ResetErrorAck	Acknowledges "Reset Error" in Module Control
1		not used
2	EtherCATErrror	Sync Manager Watchdog
3	ConfigError	Mismatch of Sync Manager's quantity structure
4-15		not used

Analogue inputs

Check the following variables for the digitized input values:

Inputs		
Variable	Data type	Explanation
Inputn	INT	Value of channel n (n= 0...15)

ControlWord

The control word contains a bit for acknowledging errors.

ControlWord		
Bit	Name	Explanation
0	ResetError	0 -> errors are retained, 1 -> errors cleared after removing their cause
1-15	-	not used

Object dictionary

Index	Name	Type	Default	Min Max	Access
1000	Device Type	UINT32	0x40191		RO
1001	Error Register	UINT8			RO
1008	Device Name	String	A14/8-U 13-Bit		RO
1009	Hardware Version	String	1.00		RO
100A	Software Version	String	1.00		RO
1018	Identity Object	Array			
1018, 0	Number of Entries	UINT8	4		RO
1018, 1	Vendor Id	UINT32	0x0048554B		RO

Index	Name	Type	Default	Min Max	Access
1018, 2	Product Code	UINT32	185341		RO
1018, 3	Revision Number	UINT32	2		RO
1018, 4	Serial Number	UINT32	0		RO
2000	Analog Input Properties	Array			
2000, 0	Number of Entries	UINT8	16		RO
2000, 1	Input 0	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 2	Input 1	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 3	Input 2	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 4	Input 3	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 5	Input 4	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 6	Input 5	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 7	Input 6	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 8	Input 7	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 9	Input 8	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3)	RW

Index	Name	Type	Default	Min Max	Access
2000, 10	Input 9	UINT8	Off	+2.5V (4) Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 11	Input 10	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 12	Input 11	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 13	Input 12	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 14	Input 13	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 15	Input 14	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2000, 16	Input 15	UINT8	Off	Off (0), 0-10V (1), +5V (2) +10V (3) +2.5V (4)	RW
2001	Number of Entries	UINT8	8		RO
2001, 1	Input 0_1 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW
2001, 2	Input 2_3 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW
2001, 3	Input 4_5 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW
2001, 4	Input 6_7 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW
2001, 5	Input 8_9 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW
2001, 6	Input 10_11 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW

Index	Name	Type	Default	Min Max	Access
2001, 7	Input 12_13 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW
2001, 8	Input 14_15 Switch	UINT8	Single-ended	Single-ended (0) Differential (1)	RW
2003	Input Average	Array			
2003, 0	Number of Entries	UINT8	16		RO
2003, 1	Input 0 Average	UINT8	1	1..255	RW
2003, 2	Input 1 Average	UINT8	1	1..255	RW
2003, 3	Input 2 Average	UINT8	1	1..255	RW
2003, 4	Input 3 Average	UINT8	1	1..255	RW
2003, 5	Input 4 Average	UINT8	1	1..255	RW
2003, 6	Input 5 Average	UINT8	1	1..255	RW
2003, 7	Input 6 Average	UINT8	1	1..255	RW
2003, 8	Input 7 Average	UINT8	1	1..255	RW
2003, 9	Input 8 Average	UINT8	1	1..255	RW
2003, 10	Input 9 Average	UINT8	1	1..255	RW
2003, 11	Input 10 Average	UINT8	1	1..255	RW
2003, 12	Input 11 Average	UINT8	1	1..255	RW
2003, 13	Input 12 Average	UINT8	1	1..255	RW
2003, 14	Input 13 Average	UINT8	1	1..255	RW
2003, 15	Input 14 Average	UINT8	1	1..255	RW
2003, 16	Input 15 Average	UINT8	1	1..255	RW
6401	Analogue input	Array			
6401, 0	Number of Entries	UINT8	16		RO
6401, 1	Analog Input 0	UINT16			RO P
6401, 2	Analog Input 1	UINT16			RO P
6401, 3	Analog Input 2	UINT16			RO P
6401, 4	Analog Input 3	UINT16			RO P
6401, 5	Analog Input 4	UINT16			RO P
6401, 6	Analog Input 5	UINT16			RO P
6401, 7	Analog Input 6	UINT16			RO P
6401, 8	Analog Input 7	UINT16			RO P
6401, 9	Analog Input 8	UINT16			RO P
6401, 10	Analog Input 9	UINT16			RO P
6401, 11	Analog Input 10	UINT16			RO P
6401, 12	Analog Input 11	UINT16			RO P
6401, 13	Analog Input 12	UINT16			RO P
6401, 14	Analog Input 13	UINT16			RO P
6401, 15	Analog Input 14	UINT16			RO P
6401, 16	Analog Input 15	UINT16			RO P
6500	StateWord	Array			
6500, 0	Number of Entries	UINT8	16		RO
6500, 1	ResetErrorAck	BOOL			RO P
6500, 3	EtherCAT Error	BOOL			RO P
6500, 4	ConfigError	BOOL			RO P


Index	Name	Type	Default	Min Max	Access
7001	Module Control	Array			
7001, 0	Number of Entries	UINT8	1		RO
7001, 1	Reset Error	BOOL			RW P

RO=read-only, RW= read/write, P=process image

7.7.4. Technical data

AI8/16-U 13BIT CoE	
Label	E-I/O AI8/16-U 13BIT CoE
Part no.	204804300
Plug-in connector	36-pole 204800300 (not part of the module)
Analogue inputs	16 single ended or 8 differential
Resolution	13 bit
Measuring range	0 ... 10 V, ± 5 V, ± 10 V, ± 2.5 V
Start AD conversion	synchronized with DC / SM
Conversion time	580 μ s (if all channels are enabled)
Input filter cutoff frequency	typ. 1 kHz
Measuring error	$< \pm 0,4$ %, typ. $< \pm 0,2$ % of final value
Internal resistance	> 1 M Ω
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20 % +25 %
E-bus load	190 mA
UL approval	

7.8. Analogue outputs voltage / current AO4-U/I

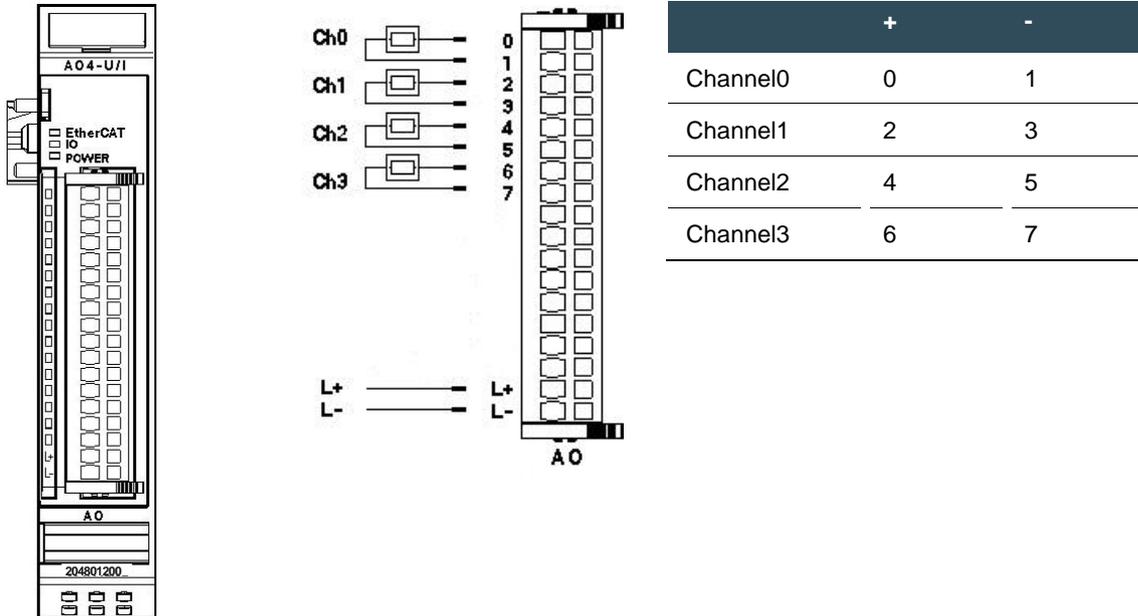

Front view of AO4-U/I I/O module I/O connection



The AO4-U/I module is no longer recommended for new projects. Please use the successive AO4-U/I 16BIT CoE module.

7.8.1. Terminals

Power supply to module I/Os

L+: 24 V DC
L-: 0 V

7.8.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On
		Inoperative if E-bus LED = Off
	Red, 1x	Short circuit
	Red, 2x	Low voltage
	Red, 4x	EtherCAT watchdog control
	Red, 6x	Module-specific fault
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

The LED labeled "Power" indicates the state of the I/O module's I/O power supply.

Power		
State	LED flash code	Explanation
On	Green, on	24 V DC supply ok
Off	Off	24 V DC supply not ok

“Channel” LEDs

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red, 1x	Short circuit
	Red, 3x	Broken wire
	Red, 5x	Excessive temp. of output drivers

7.8.3. Function

The AO4-U/I module has 4 analogue outputs. Every channel can be separately set to the unipolar or bipolar output of voltages or currents.

The letter 'n' in the tables below represents the channel number (n=0...3).

Analogue outputs

Write the output values into the following variables:

Outputs		
Variable	Data type	Explanation
Channel_n	INT	Output value for channel n (n=0...3)

Values voltage

see table page 86

Values current

0 ... 0xFFFF0 for 0... 20 mA

Module control

The module provides you with various operational options.

To set up the module choose the options as appropriate and accept by setting control bit "SetOptions" to a rising edge. The module will confirm by returning "OptionsSet".

There are various "module error" bits that the module uses to indicate errors. The states of the error bits are retained and also used for error indication by the "I/O" LED.

To reset the error bits set control bit "ResetError" to a rising edge.

Error bits		
Variable	Data type	Explanation
SetOptions	BOOL	Rising edge → accepts module options
ResetError	BOOL	Rising edge → acknowledges error

Module options

The following options are available for module AO4:

Module options		
Variable	Data type	Explanation
Channel_n_On	BOOL	Enables channel n (set to high impedance to disable)
Channel_n_Current	BOOL	Sets channel n to current output mode
Channel_n_n+1_Unipolar	BOOL	Sets channels 1 and 2 or 2 and 3 to unipolar mode
Outputs_Active_Shortcut	BOOL	Leave outputs unchanged after short circuit
Outputs_Active_Undervoltage	BOOL	Leave outputs unchanged after low voltage
Outputs_Active_Specific_Error	BOOL	Leave outputs unchanged after module-specific error
Outputs_Active_EtherCAT_Error	BOOL	Leave outputs unchanged after short circuit
n	0 ... 3	Channel number

To set and accept options, see section Module control

Module state

The following states are indicated:

Module state		
Variable	Data type	Explanation
Shortcut	BOOL	Short circuit (not used)
Undervoltage	BOOL	Low voltage (supplied power < 19.2 V)
Watchdog	BOOL	Internal watchdog of module
EtherCAT_Error	BOOL	Configuration error or watchdog control
Specific_Error	BOOL	Module-specific fault
OptionsSet	BOOL	Sent by module to acknowledge SetOptions

To reset the messages, see section Module control

Module-specific messages

Apart from the module error messages, there is a set of messages containing details about the current state of the module:

Messages		
Variable	Data type	Explanation
Channel_n_Overtemp	BOOL	Temperature of output driver of channel n > 140 °C (automatic switch-off) → Outputs_Active_Shortcut = TRUE
Undervoltage_24	BOOL	Power supplied to module > 19.2V → Outputs_Active_Undervoltage = TRUE
Channel_n_Open	BOOL	Current mode: channel n load is > 500Ω → Specific_Error = TRUE
Channel_n_Shortcut	BOOL	Voltage mode: channel n load is < 600 Ω → Specific_Error = TRUE

These messages are automatically reset when the state concerned has returned to normal.

These messages are summarized as “Specific_Error” in the module status and mapped as “Module-specific error” onto the I/O-LED.

Conversion time


The AO4-U/I module operates with a cycle time of 320µs which is independent of the number of the enabled channels (time from the acquisition of the output values to the start of the D/A converters).

7.8.4. Technical data

AO4-U/I	
Label	E-I/O AO4-U/I 12BIT
Part no.	204801200
Plug-in connector	18-pole 204800400 (not part of the module)
Analogue outputs	4
Resolution	16 bit, 12 bit
Measuring range	0 ... 10 V, ± 10 V, 0 ... +20 mA
Output frequency	3.125 kHz
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20% +25%
E-bus load	150 mA
UL approval	 <p> UL LISTED 59DM E242595 IND.CONT.EQ. </p>

i NOTICE	<p>Measuring range 0 ... +20 mA</p> <p>In order to use the current outputs, the "Channel_n_n + 1_Unipolar" variable of the corresponding outputs must be set to TRUE.</p> <p>See section Module options, short circuit undetectable.</p>
--	---

7.9. Analogue outputs voltage / current AO4-U/I 16BIT CoE

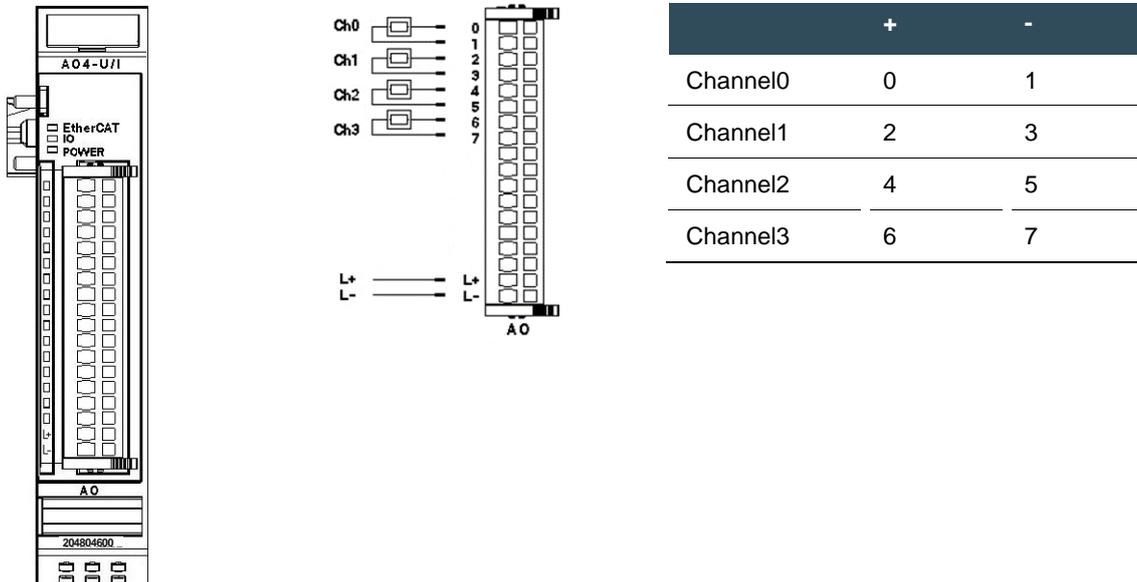

Front view of AO4-U/I 16BIT CoE I/O module

I/O connection



The AO4-U/I 16BIT CoE module is the successor module NOT compatible with the AO4-U/I 12BIT module.
Before replacing an AO4-U/I 12BIT module with an AO4-U/I 16BIT CoE module, you must modify the EtherCAT master's control program.

7.9.1. Terminals

Power supply to module I/Os

L+: 24 V DC

L-: 0 V

7.9.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On Inoperative if E-bus LED = Off
	Red, 1x	Short circuit
	Red, 2x	Low voltage
	Red, 4x	EtherCAT watchdog control
	Red, 6x	Module-specific fault
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
	Defective	Red, on

“Power” LED

The LED labeled "Power" indicates the state of the I/O module's I/O power supply.

Power		
State	LED flash code	Explanation
On	Green, on	24 V DC supply ok
Off	Off	24 V DC supply not ok

“Channel” LEDs

The "Channel" LEDs indicate the state of every channel.

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red, 1x	Short circuit
	Red, 3x	Broken wire
	Red, 5x	Excessive temp. of output drivers

7.9.3. Function

The AO4-U/I 16BIT CoE module has 4 analogue outputs. Every channel can be separately set to the unipolar or bipolar output of voltages or currents.

To output voltage or current readings (measured values) to the analogue outputs, verify that the associated output variables contain these values in the 2-byte two's complement format.

The letter 'n' in the tables below represents the channel number (n=0...3).

Analogue voltage/current values

Measured value				Variable value (@ 16 bits)			
±10/10	0...20	4...20	0...24	Bipolar [UINT]		Unipolar [UINT]	
Volt	mA	mA	mA	Decimal	Hexadecimal	Decimal	Hexadecimal
-10				32768	16#8000		
-9				36044	16#8CCC		
-8				39321	16#9999		
-7				42598	16#A666		
-6				45875	16#B333		
-5				49152	16#C000		
-4				52428	16#CCCC		
-3				55705	16#D999		
-2				58982	16#E666		
-1				62244	16#F324		
0	0	4	0	0	0	0	0
1	2	5.6	2.4	3276	16#0CCC	6553	16#1999
2	4	7.2	4.8	6553	16#1999	13107	16#3332
3	6	8.8	7.2	9830	16#2666	19660	16#4CCC
4	8	10.4	9.6	13106	16#3332	26214	16#6665
5	10	12.0	12.0	16383	16#3FFF	32767	16#7FFF
6	12	13.6	14.4	19660	16#4CCC	39320	16#9998
7	14	15.2	16.8	22936	16#5998	45874	16#B332
8	16	16.8	19.2	26213	16#6665	52427	16#CCCB
9	18	18.4	21.6	29490	16#7332	58981	16#E665
10	20	20.0	24.0	32767	16#7FFF	65534	16#FFFE

Please note the following differences:

E-I/O AO4-U/I 12BIT	E-I/O AO4-U/I 16BIT CoE
Current: 0...±20 mA	Current: 0...+20 mA
Short-circuit detectable	Short-circuit not detectable but outputs are short circuit-protected
Output not synchronized with EtherCAT	Output synchronized with SM or DC

Module options

Output of the analogue values can be synchronized with DC (Distributed Clocks) or SM (Sync Manager).

The screenshot shows the 'EtherCAT E/A-Abbild' configuration window. The 'Verteilte Uhren' section is active, with 'SM-Synchron' selected in the dropdown. The 'Aktivieren' checkbox is checked, and the 'Sync Unit Cycle (µs)' is set to 4000. Below, 'Sync0' and 'Sync1' sections are visible, each with 'Sync Unit Cycle' and 'Benutzerdefiniert' options and their respective cycle and delay time inputs.

The screenshot shows the 'Ausgänge auswählen' and 'Eingänge auswählen' sections of the configuration window. Both sections contain tables with columns for Name, Typ, and Index.

Startadresse	Typ	Index
<input checked="" type="checkbox"/> 16#1600 ControlWord		
ResetError	BIT	16#7001:01

<input checked="" type="checkbox"/> 16#1601 AnalogOutput0		
AnalogOutput0	UINT	16#6411:01
<input checked="" type="checkbox"/> 16#1602 AnalogOutput1		
AnalogOutput1	UINT	16#6411:02
<input checked="" type="checkbox"/> 16#1603 AnalogOutput2		
AnalogOutput2	UINT	16#6411:03
<input checked="" type="checkbox"/> 16#1604 AnalogOutput3		
AnalogOutput3	UINT	16#6411:04

Name	Typ	Index
<input checked="" type="checkbox"/> 16#1A00 StateWord		
ResetErrorAck	BIT	16#6500:01
Undervoltage	BIT	16#6500:02
EtherCATError	BIT	16#6500:03
ConfigError	BIT	16#6500:04


Output0Overtemp	BIT	16#6500:09
Output1Overtemp	BIT	16#6500:10
Output2Overtemp	BIT	16#6500:11
Output3Overtemp	BIT	16#6500:12
Output0Open	BIT	16#6500:13
Output1Open	BIT	16#6500:14
Output2Open	BIT	16#6500:15
Output3Open	BIT	16#6500:16

The process data objects stored as variables in the EtherCAT master's control program are used to access the output values and the module state.


Service data objects (SDO) are available for details and settings.

You may run the configuration tool offline to change some settings of module AO4-U/I 16BIT CoE (such as the properties of each of the outputs). The EtherCAT master will apply the settings when starting up the module.

You can also use the SDO transfer components available for the EtherCAT master to change settings at runtime.

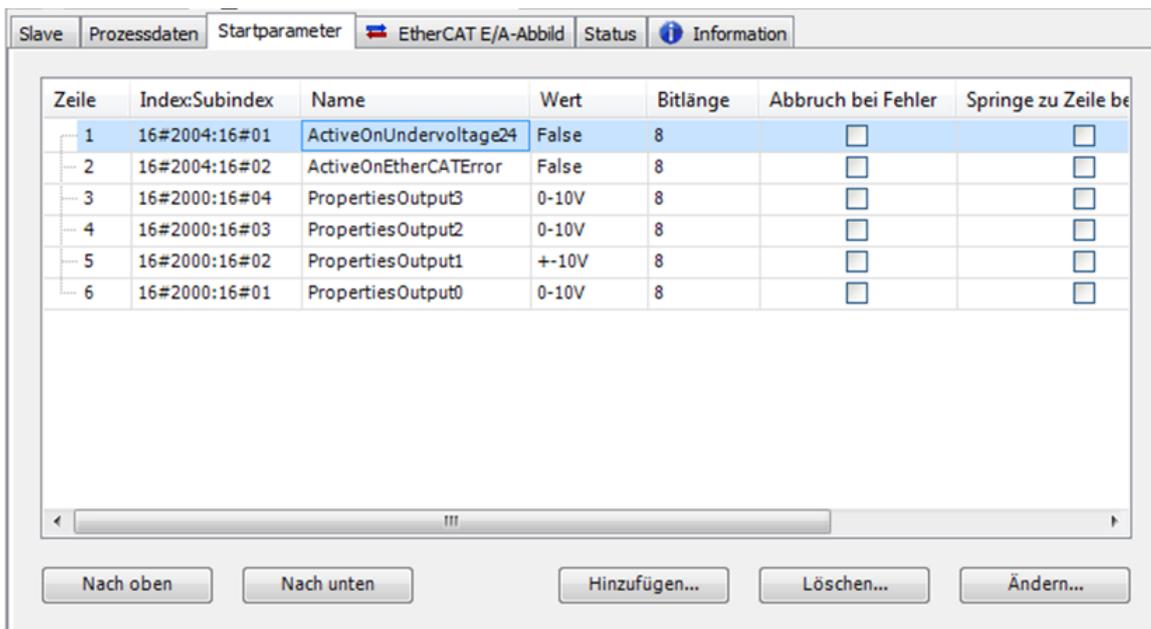

Click/tap on "Add...", choose an object, and set the appropriate value.

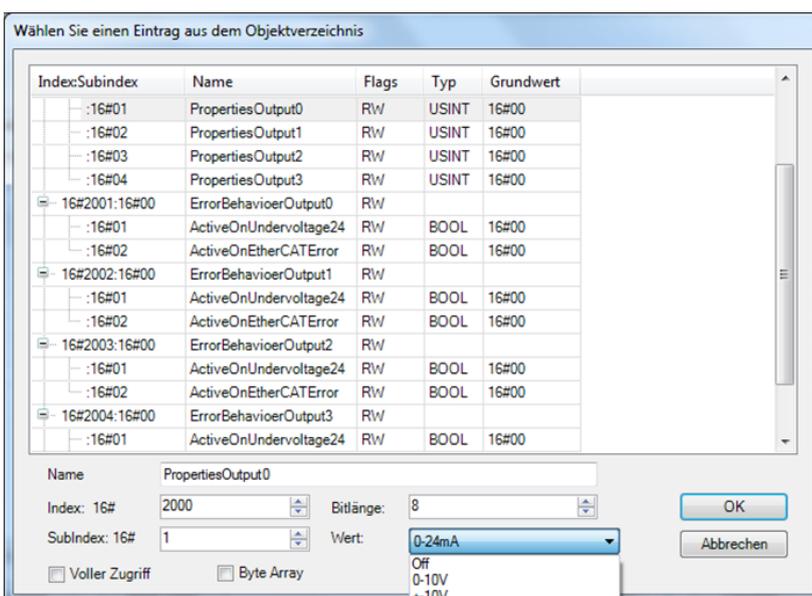

StateWord

The state word is indicative of the module state:

StateWord		
Bit	Name	Bedeutung
0	ResetErrorAck	Acknowledges "Reset Error" in Module Control
1	Undervoltage24	24 V supply low
2	EtherCATErrror	Sync Manager Watchdog
3	ConfigError	Mismatch of Sync Manager's quantity structure
4	-	
5	-	
6	-	
7	-	
8	Output 0 Overtemp	Over-temperature detected by output driver (automatic switch-off)
9	Output 1 Overtemp	Over-temperature detected by output driver (automatic switch-off)
10	Output 2 Overtemp	Over-temperature detected by output driver (automatic switch-off)
11	Output 3 Overtemp	Over-temperature detected by output driver (automatic switch-off)
12	Output 0 Open	If there is no current in Current mode
13	Output 1 Open	If there is no current in Current mode
14	Output 2 Open	If there is no current in Current mode
15	Output 3 Open	If there is no current in Current mode

Analogue outputs

Write the output values into the following variables:

Outputs		
Variable	Data type	Explanation
AnalogOutputn	UINT	Output value of channel n (n=0...3)

ControlWord

The control word contains a bit for acknowledging errors.

ControlWord		
Bit	Name	Explanation
0	ResetError	0 -> errors are retained, 1 -> errors cleared after removing their cause
1-15	-	not used

Object dictionary

Index	Name	Type	Default	Min Max	Access
1000	Device Type	UINT32	0xF0191		RO
1001	Error Register	UINT8			RO
1008	Device Name	String			RO
1009	Hardware Version	String	1.00		RO
100A	Software Version	String	1.00		RO
1018	Identity Object	ARRAY			
1018, 0	Number of Entries	UINT8	4		RO
1018, 1	Vendor Id	UINT32	0x0048554B		RO
1018, 2	Product Code	UINT32			RO
1018, 3	Revision Number	UINT32	2		RO
1018, 4	Serial Number	UINT32	0		RO
2000	Analogue Output Properties	Array			
2000, 0	Number of Entries	UINT8	4		RO
2000, 1	Properties Output 0	UINT8	0-10V	Off (0), 0-10V (1), +-10V (3), 0-20mA (6), 4-20mA (5), 0-24mA (7)	RW
2000, 2	Properties Output 1	UINT8	0-10V	Off, 0-10V, +-10V, 0-20mA, 4-20mA, 0-24mA	RW
2000, 3	Properties Output 2	UINT8	0-10V	Off, 0-10V, +-10V, 0-20mA, 4-20mA, 0-24mA	RW
2000, 4	Properties Output 3	UINT8	0-10V	Off, 0-10V, +-10V, 0-20mA, 4-20mA, 0-24mA	RW
2001	ErrorBehavior Output 0	Array			
2001, 0	Number of Entries	UINT8	2		RO
2001, 1	Active on Undervoltage 24	BOOL	FALSE		RW
2001, 1	Active on EtherCAT Watchdog Error	BOOL	FALSE		RW
2002	ErrorBehavior Output 1	Array			
2002, 0	Number of Entries	UINT8	2		RO
2002, 1	Active on Undervoltage 24	BOOL	FALSE		RW

Index	Name	Type	Default	Min Max	Access
2002, 1	Active on EtherCAT Watchdog Error	BOOL	FALSE		RW
2003	ErrorBehavior Output 2	Array			
2003, 0	Number of Entries	UINT8	2		RO
2003, 1	Active on Undervoltage 24	BOOL	FALSE		RW
2003, 1	Active on EtherCAT Watchdog Error	BOOL	FALSE		RW
2004	ErrorBehavior Output 3	Array			
2004, 0	Number of Entries	UINT8	2		RO
2004, 1	Active on Undervoltage 24	BOOL	FALSE		RW
2004, 1	Active on EtherCAT Watchdog Error	BOOL	FALSE		RW
6411	Analogue Outputs	Array			
6411, 0	Number of Entries	UINT8	4		RO
6411, 1	Analogue Output 0	UINT16			RW P
6411, 2	Analogue Output 1	UINT16			RW P
6411, 3	Analogue Output 2	UINT16			RW P
6411, 4	Analogue Output 3	UINT16			RW P
6500	State Word	Array			
6500, 0	Number of Entries	UINT8	16		RO
6500, 1	Reset Error Ack	BOOL			RO P
6500, 2	Undervoltage24	BOOL			RO P
6500, 3	EtherCAT Error	BOOL			RO P
6500, 4	ConfigError	BOOL			RO P
6500, 5	-	BOOL			RO P
6500, 6	-	BOOL			RO P
6500, 7	-	BOOL			RO P
6500, 8	-	BOOL			RO P
6500, 9	Output 0 Overtemp	BOOL			RO P
6500, 10	Output 1 Overtemp	BOOL			RO P
6500, 11	Output 2 Overtemp	BOOL			RO P
6500, 12	Output 3 Overtemp	BOOL			RO P
6500, 13	Output 0 Open	BOOL			RO P
6500, 14	Output 1 Open	BOOL			RO P
6500, 15	Output 2 Open	BOOL			RO P
6500, 16	Output 3 Open	BOOL			RO P
7001	Control Word	Array			
7001, 0	Number of Entries	UINT8	1		RO
7001, 1	Reset Error	BOOL			RW P

RO=read-only, RW= read/write, P=process image


7.9.4. Technical data

AO4-U/I 16BIT CoE	
Label	E-I/O AO4-U/I 16BIT CoE
Part no.	204804600
Plug-in connector	18-pole 204800400 (not part of the module)
Analogue outputs	4
Resolution	16 Bit
Output frequency	Synchronized with SM / DC
Intrinsic error	±0,2 %
Temperature error	±0,005 %/K
Destruction limit (external voltages)	15 V
Voltage	
Measuring range	0 ... 10 V, ±10 V
Short circuit protection	Yes
Short circuit current	max. 30 mA
Load resistance	min. 1 kΩ
Settling time	0 → 10 V: ≤ 22 μs at 2 kΩ/<200 pF
Current	
Measuring range	0...20 mA, 4...20 mA, 0...24 mA
Load resistance	max. 500 Ω, max. 1 mH (inductive)
Settling time	0 → 16 V: ≤ 25 μs at 300 Ω/<1 mH
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20 % +25 %
E-bus load	150 mA
UL approval	 <p> UL LISTED 59DM E242595 IND.CONT.EQ. </p>

Blank page

8. Temperature modules

8.1. Analogue temperature inputs AI4-PT/Ni100, AI4-PT/Ni1000

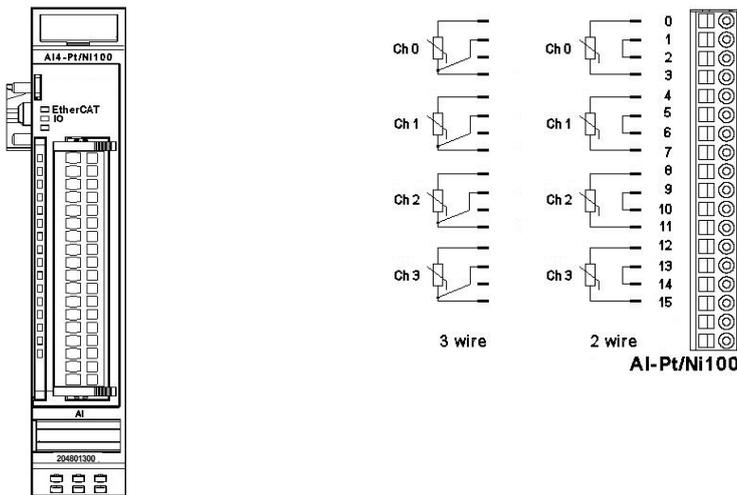

Front view of AI4-PT/Ni100 I/O module I/O connection



The AI4-PT/Ni100 module and the AI4-PT/Ni1000 module are no longer recommended for new projects. Please use the successive AI4-PT/Ni/THERMO 16BIT CoE module.

8.1.1. Terminals

The module needs no separate 24 V connector. Power is supplied to the module through the E-bus connector. Operative earth / shielding of analog wires → section 3.1.1 Earth

8.1.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On Inoperative if E-bus LED = Off
	Red, 4x	EtherCAT watchdog control
	Red, 6x	Module-specific fault
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
	Defective	Red, on

“Power” LED

There is no LED labeled “Power” because a separate power feed is not required.

“Channel” LEDs

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red	Short circuit, broken wire

8.1.3. Function

Module AI4-PT/NI100 has 4 analogue inputs for PT100 or NI100 temperature sensors. It can also measure resistances between 70 and 330 Ω.

Module AI4-PT/NI1000 has 4 analogue inputs for PT1000 or NI1000 temperature sensors. It can also measure resistances between 700 and 3000 Ω.

The letter 'n' in the tables below represents the channel number (n=0...3).

Analogue inputs

Check the following variable for the digitized input values:

Inputs		
Variable	Data type	Explanation
Channel_n	INT	Value measured on channel n (n= 0...3)
		Default in 1/10 °C
		ResMode PT100 in 1/100 Ω
		PT1000 in 1/10 Ω

Module control

The module provides you with various operational options.

To set up the module choose the options as appropriate and accept by setting control bit “SetOptions” to a rising edge. The module will confirm by returning “OptionsSet”.

There are various “module error” bits that the module uses to indicate errors. The states of the error bits are retained and also used for error indication by the “I/O” LED.

To reset the error bits set control bit “ResetError” to a rising edge.

Error bits		
Variable	Data type	Explanation
SetOptions	BOOL	Rising edge → accepts module options
ResetError	BOOL	Rising edge → acknowledges error

Module options

The following options are available for module AI4-PT/NI100 or 1000:

Module options		
Variable	Data type	Explanation
Channel_n_Ni	BOOL	Set channel n to NI100 sensor
Channel_n_On	BOOL	Enables channel n
Channel_n_ResMode	BOOL	Set channel n to resistance mode
Channel_n_Filter	USINT	Set filter for channel n The arithmetic mean is output after n+1 conversions.
n		0 ... 3 Channel number

To set and accept options, see Module control

Module state

The following module states are indicated:

Module state		
Variable	Data type	Explanation
Shortcut	BOOL	Not used
Undervoltage	BOOL	Not used
Watchdog	BOOL	Internal watchdog of module
EtherCAT_Error	BOOL	Configuration error or watchdog control
Specific_Error	BOOL	Module-specific fault
OptionsSet	BOOL	Sent by module to acknowledge SetOptions

To reset the messages, see Module control

Module-specific messages

Apart from the module error messages, there is a set of messages containing details about the current state of the module:

Messages		
Variable	Data type	Explanation
Channel_n_Open	BOOL	- Channel n load > maximum - Broken wire of connector 0 * - Broken wire of connector 3 * - Broken wire of connector 0/3 * → Specific_Error = TRUE
Channel_n_Shortcut	BOOL	- Channel n load < minimum - Short circuit of connector 0-3 * - Broken wire of connector 1 * → Specific_Error = TRUE

* The causes of 'Short circuit' and 'Broken wire 0..3' are shown for channel 0 (equivalent applies to other channels).

These messages are automatically reset when the state concerned has returned to normal. They are combined into a single "Specific_Error" state of the module and output to the I/O LED as "module-specific error".

Conversion time

The analogue signals are converted one by one down every channel. Disabling one or several channels will shorten the entire A/D conversion cycle.

'Filter' in this case means to compute an average when the set filter time is over. Analogue value conversion runs cyclically and is not synchronized with the receipt of EtherCAT telegrams. The cycle consists of the analogue value conversion plus transmitting the values into the EtherCAT data area.

Channel	
Number of channels	Cycle time in ms (all filters=0)
1	32
2	65
3	97
4	129

NOTICE

If you are aiming for a high sampling frequency, the EtherCAT master should do the filtering (averaging) because it will normally have much more processing power.

NOTICE

Take the EtherCAT cycle into account to assess how much the values stored by the EtherCAT master are up-to-date. The module described in this section will accept the above times as the ideal EtherCAT cycle setup.

Quality of analogue values

NOTICE

Best results are obtained by connecting the shield of the signal cables to operative earth.


8.1.4. Technical data AI4-PT/Ni100

AI4-PT/Ni100	
Label	E-I/O AI4-PT/Ni100 16BIT
Part no.	204801300
Plug-in connector	18-pole 204800400 (not part of the module)
Analogue inputs	4
Resolution	16 bit (resistance 0.01 Ω , temperature 0.1°C)
Pt100 measuring range	- 75°C...+ 670°C
Ni100 measuring range	- 60°C...+ 250°C
Resistance	70...330 Ω
Temperature drift	< \pm 50 ppm/°C regarding range limit
Critical frequency	typical 2 Hz
Measurement current	< 0.50 mA
Sampling frequency	> 7.75 Hz (if all channels are enabled)
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20% +25%
E-bus load	150 mA
UL approval	

8.1.5. Technical data AI4-PT/NI1000

AI4-PT/NI1000	
Label	E-I/O AI4-PT/NI1000 16BIT
Part no.	204802800
Plug-in connector	18-pole 204800400 (not part of the module)
Analogue inputs	4
Resolution	16 bit (resistance 0.1 Ω , temperature 0.1°C)
Pt100 measuring range	- 75°C...+ 570°C
Ni100 measuring range	- 60°C...+ 250°C
Resistance	700...3000 Ω
Temperature drift	< \pm 60 ppm/°C regarding range limit
Critical frequency	typical 2 Hz
Measurement current	< 0.12 mA
Sampling frequency	> 7.75 Hz (if all channels are enabled)
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20% +25%
E-bus load	150 mA
UL approval	

8.2. Analogue temperature inputs AI8-PT/Ni100

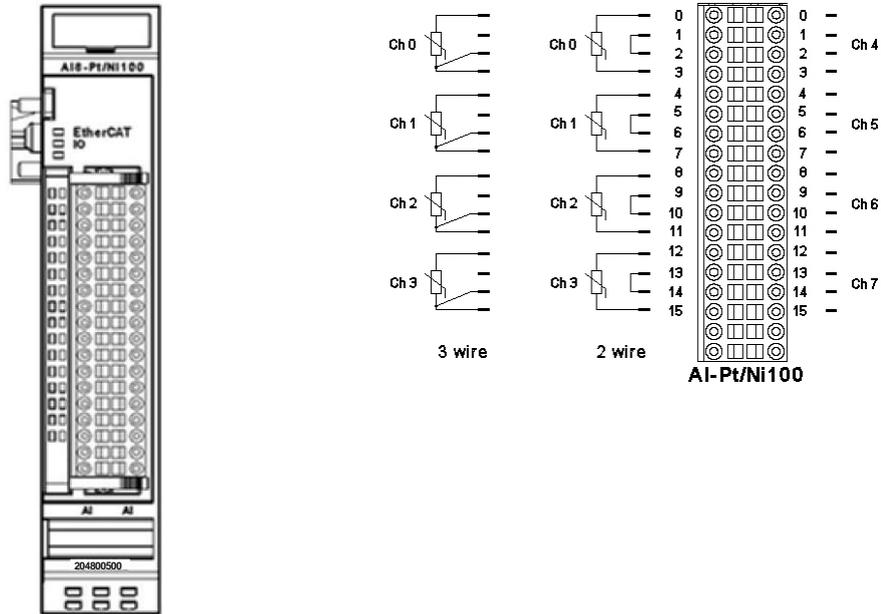

Front view of AI8-PT/Ni100 I/O module I/O connection



The AI8-PT/Ni100 module is no longer recommended for new projects. Please use the successive AI8-PT/Ni/THERMO 16BIT CoE module.

8.2.1. Terminals

The module needs no separate 24 V connector. Power is supplied to the module through the E-bus connector. Operative earth / shielding of analog wires → section 3.1.1 Earth

8.2.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On
		Inoperative if E-bus LED = Off
	Red, 4x	EtherCAT watchdog control
	Red, 6x	Module-specific fault
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

There is no LED labeled “Power” because a separate power feed is not required.

“Channel” LEDs

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red	Short circuit, broken wire

8.2.3. Function

Module AI8-PT/NI100 has 8 analogue inputs for PT100 or NI100 temperature sensors. It can also measure resistances between 70 and 330 Ω.

The letter 'n' in the tables below represents the channel number (n=0...7).

Analogue inputs

Check the following variable for the digitized input values:

Inputs			
Variable	Data type	Explanation	
Channel_n	INT	Value measured on channel n (n= 0...7)	
		Default	in 1/10 °C
		ResMode	PT100 in 1/100 Ω

Module control

The module provides you with various operational options.

To set up the module choose the options as appropriate and accept by setting control bit “SetOptions” to a rising edge. The module will confirm by returning “OptionsSet”.

There are various “module error” bits that the module uses to indicate errors. The states of the error bits are retained and also used for error indication by the “I/O” LED.

To reset the error bits set control bit “ResetError” to a rising edge.

Error bits		
Variable	Data type	Explanation
SetOptions	BOOL	Rising edge → accepts module options
ResetError	BOOL	Rising edge → acknowledges error

Module options

The following options are available for module AI8-PT/NI100:

Module options			
Variable	Data type	Explanation	
Channel_n_Ni	BOOL	Set channel n to NI100 sensor	
Channel_n_On	BOOL	Enables channel n	
Channel_n_ResMode	BOOL	Set channel n to resistance mode	
Channel_n_Filter	USINT	Set filter for channel n The arithmetic mean is output after n+1 conversions.	
n		0 ... 7	Channel number

To set and accept options, see Module control

Module state

The following module states are indicated:

Module state		
Variable	Data type	Explanation
Shortcut	BOOL	Not used
Undervoltage	BOOL	Not used
Watchdog	BOOL	Internal watchdog of module
EtherCAT_Error	BOOL	Configuration error or watchdog control
Specific_Error	BOOL	Module-specific fault
OptionsSet	BOOL	Sent by module to acknowledge SetOptions

To reset the messages, see Module control

Module-specific messages

Apart from the module error messages, there is a set of messages containing details about the current state of the module:

Messages		
Variable	Data type	Explanation
Channel_n_Open	BOOL	<ul style="list-style-type: none"> - Channel n load > maximum - Broken wire of connector 0 * - Broken wire of connector 3 * - Broken wire of connector 0/3 * → Specific_Error = TRUE
Channel_n_Shortcut	BOOL	<ul style="list-style-type: none"> - Channel n load < minimum - Short circuit of connector 0-3 * - Broken wire of connector 1 * → Specific_Error = TRUE

* The causes of 'Short circuit' and 'Broken wire 0..3' are shown for channel 0 (equivalent applies to other channels).

These messages are automatically reset when the state concerned has returned to normal.

They are combined into a single "Specific_Error" state of the module and output to the I/O LED as "module-specific error".

Conversion time

The analogue signals are converted one by one down every channel. Disabling one or several channels will shorten the entire A/D conversion cycle.

'Filter' in this case means to compute an average when the set filter time is over.

Analogue value conversion runs cyclically and is not synchronized with the receipt of EtherCAT telegrams.

The cycle consists of the analogue value conversion plus transmitting the values into the EtherCAT data area.

Channel			
Number of channels	Cycle time in ms (all filters=0)	Number of channels	Cycle time in ms (all filters=0)
1	34	5	162
2	66	6	194
3	98	7	226
4	130	8	258



If you are aiming for a high sampling frequency, the EtherCAT master should do the filtering (averaging) because it will normally have much more processing power.



Take the EtherCAT cycle into account to assess how much the values stored by the EtherCAT master are up-to-date. The module described in this section will accept the above times as the ideal EtherCAT cycle setup.

Quality of analogue values




Best results are obtained by connecting the shield of the signal cables to operative earth.

8.2.4. Technical data AI8-PT/NI100

AI8-PT/NI100	
Label	E-I/O AI8-PT/NI100 16BIT
Part no.	204800500
Plug-in connector	36-pole 204800300 (not part of the module)
Analogue inputs	8
Resolution	16 bit (resistance 0.01 Ω , temperature 0.1°C)
Pt100 measuring range	- 75°C...+ 670°C
Ni100 measuring range	- 60°C...+ 250°C
Resistance	70...330 Ω
Temperature drift	< \pm 50 ppm/°C regarding range limit
Critical frequency	typical 2 Hz
Measurement current	< 0.50 mA
Sampling frequency	> 3.88 Hz (if all channels are enabled)
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20% +25%
E-bus load	170 mA
UL approval	 <p>UL LISTED 59DM E242595 IND.CONT.EQ.</p>

8.3. Analogue temperature inputs AI4-THERMO 16BIT

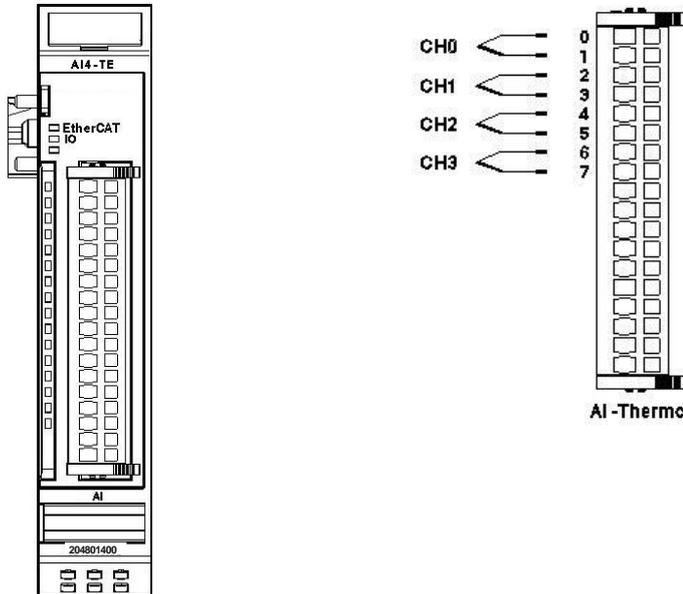

Front view of AI4-THERMO I/O module I/O connection



The AI4-THERMO module is no longer recommended for new projects. Please use the successive AI4-PT/NI/THERMO 16BIT CoE module.

8.3.1. Terminals

The module needs no separate 24 V connector. Power is supplied to the module through the E-bus connector. Operative earth / shielding of analog wires → section 3.1.1 Earth

8.3.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On
		Inoperative if E-bus LED = Off
	Red, 4x	EtherCAT watchdog control
	Red, 6x	Module-specific fault
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

There is no LED labeled “Power” because a separate power feed is not required.

“Channel” LEDs

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red	Measuring value is out of range

8.3.3. Function

Module AI4-THERMO has 4 analogue inputs for thermo-element sensors. It can also measure mV-voltages.

The letter 'n' in the tables below represents the channel number (n=0...3).

Analogue inputs

Check the following variable for the digitized input values:

Inputs			
Variable	Data type	Explanation	
Channel_n	INT	Measuring value of channel n (n = 0...3)	
		mV-Mode	in μV resp. 2 μV
		Default	in 1/10 °C

Module control

The module provides you with various operational options.

To set up the module choose the options as appropriate and accept by setting control bit “SetOptions” to a rising edge. The module will confirm by returning “OptionsSet”.

There are various “module error” bits that the module uses to indicate errors. The states of the error bits are retained and also used for error indication by the “I/O” LED.

To reset the error bits set control bit “ResetError” to a rising edge.

Error bits		
Variable	Data type	Explanation
SetOptions	BOOL	Rising edge → accepts module options
ResetError	BOOL	Rising edge → acknowledges error

Module options

The following options are available for module AI4-THERMO:

Module options			
Variable	Data type	Explanation	
Channel_n_SensorType	USINT	Sensor type	
		16#00	mV: not used
		16#10	mV: -40 ..+65 mV, values in 2 µV
		16#04	Type K: not used
		16#14	Type K: -200°C .. +1372°C in 0.1°C
Channel_n_On	BOOL	Enable channel n	
Channel_n_Filter	USINT	Set filter for channel n The arithmetic mean is output after n+1 conversions.	
n	0 ... 3	Channel number	

To set and accept options, see Module control

Module state

The following module states are indicated:

Module state		
Variable	Data type	Explanation
Shortcut	BOOL	Not used
Undervoltage	BOOL	Not used
Watchdog	BOOL	Internal watchdog of module
EtherCAT_Error	BOOL	Configuration error or watchdog control
Specific_Error	BOOL	Module-specific fault
OptionsSet	BOOL	Sent by module to acknowledge SetOptions

To reset the messages, see Module control

Module-specific messages

Apart from the module error messages, there is a set of messages containing details about the current state of the module:

Messages		
Variable	Data type	Explanation
Channel_n_Out_of_Range	BOOL	Measuring value is out of range.

These messages are automatically reset when the state concerned has returned to normal.

They are combined into a single “Specific_Error” state of the module and output to the I/O LED as “module-specific error”.

Conversion time

The analogue signals are converted one by one down every channel. Disabling one or several channels will shorten the entire A/D conversion cycle.

'Filter' in this case means to compute an average when the set filter time is over.

Analogue value conversion runs cyclically and is not synchronized with the receipt of EtherCAT telegrams.

The cycle consists of the analogue value conversion plus transmitting the values into the EtherCAT data area.

Channel	
Number of channels	Cycle time in ms (all filters=0)
1	35
2	67
3	99
4	131



If you are aiming for a high sampling frequency, the EtherCAT master should do the filtering (averaging) because it will normally have much more processing power.



Take the EtherCAT cycle into account to assess how much the values stored by the EtherCAT master are up-to-date. The module described in this section will accept the above times as the ideal EtherCAT cycle setup.

Quality of analogue values




Best results are obtained by connecting the shield of the signal cables to operative earth.

8.3.4. Technical data

AI4-THERMO	
Label	E-I/O AI4-THERMO 16BIT
Part no.	204801400
Plug-in connector	18-pole 204800400 (not part of the module)
Analogue inputs	4
Resolution	16 bit
mV measuring range	mV: -40 ..+65 mV, values in 2 µV
Type K measuring range	Typ K: -200°C .. +1372°C in 0.1°C
Measurement failure 25°C	< ± 0.4% regarding range limit
Less measurement failure	on demand
Cold junction compensation	yes
Critical frequency	typical 0.33 Hz
Sampling frequency	> 7.63 Hz (if all channels are enabled)
Controller	ASIC ET1200
Baud rate	100 Mbit/s
E-bus port	10-pin system plug in side wall
Term. module	not required
Power supply	24 V DC -20% +25%
E-bus load	150 mA
UL approval	

8.4. Analogue temperature inputs AI4-PT/NI/THERMO 16BIT CoE

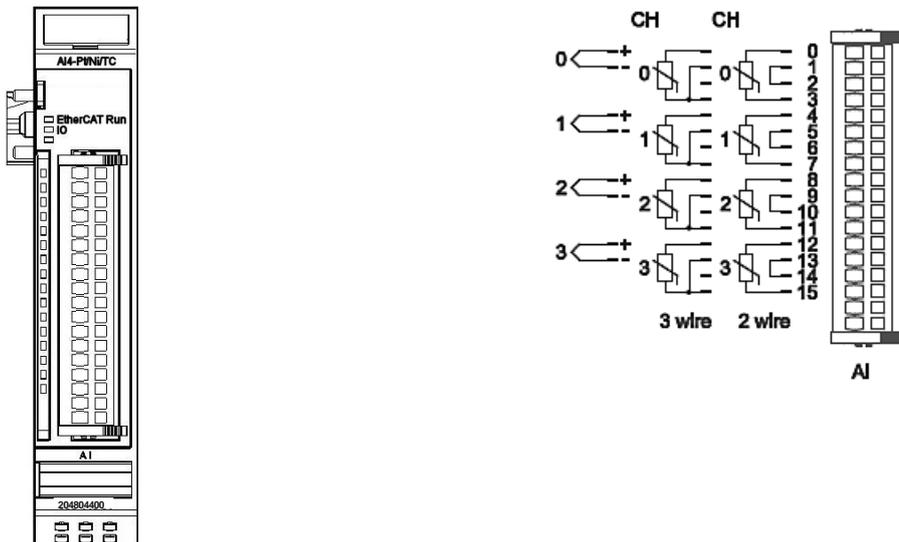

Front view of AI4-PT/NI/THERMO 16BIT CoE I/O module I/O connection



Module AI4-PT/NI/THERMO 16BIT CoE is the incompatible successor to the modules AI4-PT/NI100, AI4-PT/NI1000 and AI4-THERMO.
Before replacing an AI4-PT/NI100 or AI4-PT/NI1000 or AI4-THERMO with an AI4-PT/NI/THERMO 16BIT CoE module, you must modify the EtherCAT master's control program.

8.4.1. Terminals

The module needs no separate 24 V connector. Power is supplied to the module through the E-bus connector. Operative earth / shielding of analog wires → section 3.1.1 Earth

8.4.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On Inoperative if E-bus LED = Off
	Red, 4x	EtherCAT watchdog control
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

There is no LED labeled “Power” because a separate power feed is not required.

“Channel” LEDs

The "Channel" LEDs indicate the state of every channel.

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red 1x	Sensor low
	Red 2x	Sensor high

NOTICE

Note on PT100/NI100 mode
 Error "input high" is not shown in the PT100 and NI100 modes, unless a temperature sensor is connected. Check that your wiring is correct (jumped 2-wire or 3-wire connection) to ensure that all error are detected/shown properly.

NOTICE

Note on thermocouple mode
 Errors input low and input high are just indicative of the temperature being out of the set range.
 A short circuit (input low) is not detected in thermocouple mode (types J,K) because the thermal voltage is too small for a short circuit to be relevant to the measured result.
 Since a broken wire is not detected, the floating module values may provoke an indication of error input high or input low.

8.4.3. Function


Module AI4-PT/NI/THERMO 16BIT CoE features 4 analogue inputs for temperature sensors. Every channel can be separately set to one of the following sensor types: millivolt, PT100, PT1000, NI100, NI1000 (DIN 43760) or thermocouple.

Measured value


Readings are shown in 0.1 °C steps (default). Or you can choose to show them as Ohm/Volt or raw data.

Module options

Conversion of the analogue values can be synchronized with DC (Distributed Clocks) or SM (Sync Manager).

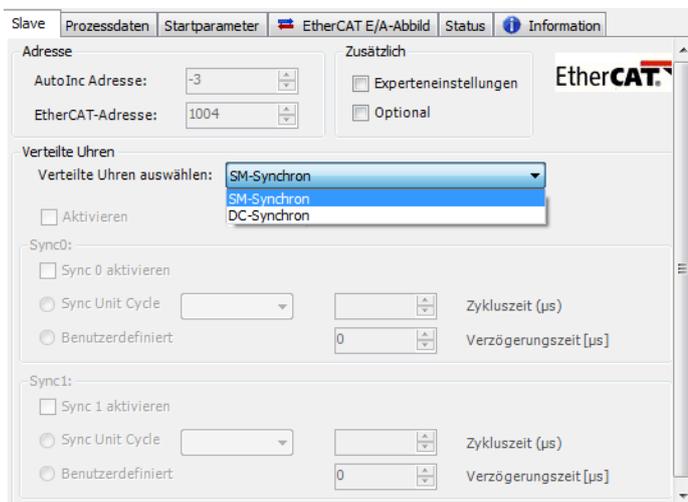

The process data objects stored as variables in the EtherCAT master's control program are used to access the input values and the module state.

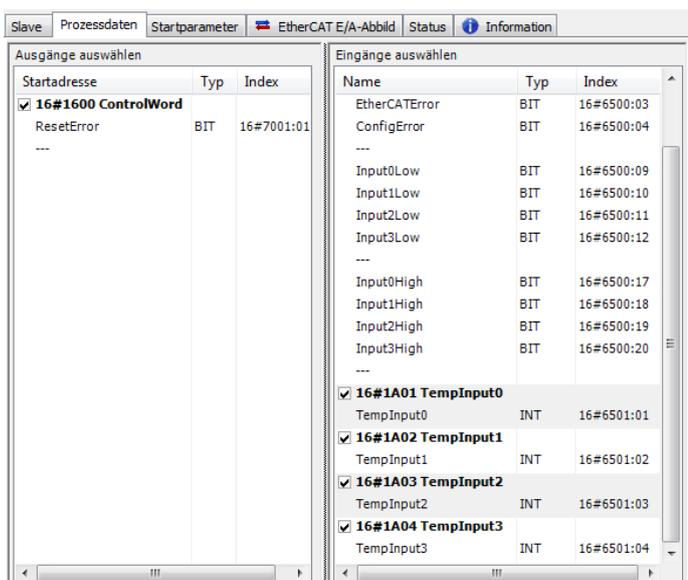


Service data objects (SDO) are available for details and settings.

You may run the configuration tool offline and choose the "Startup Parameters" to change some settings of module AI4-Pt/Ni/TC (such as the properties of each of the inputs). The EtherCAT master will apply the settings when starting up the module.

You can also use the SDO transfer components available for the EtherCAT master to change settings at runtime.

Click/tap on "Add...", choose an object, and set the appropriate value.

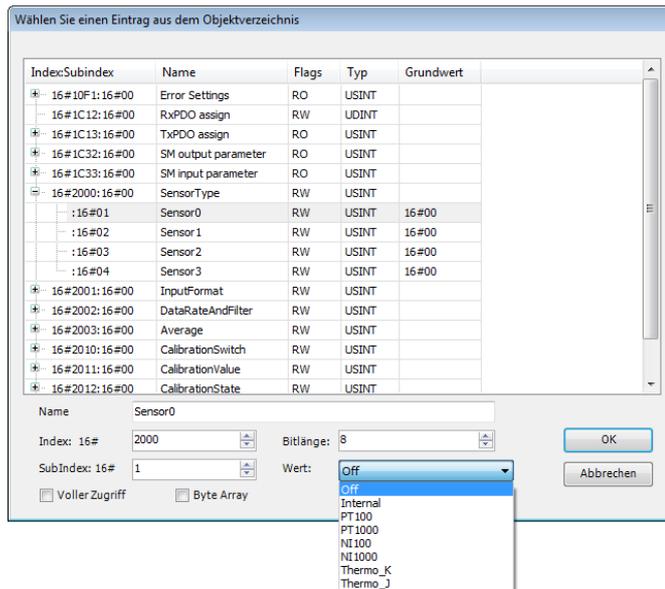

You can set up the following options for every channel:

Module options		
Name	Value	Explanation
SensorType	0	Off (default)
	1	Internal (mV)
	2	PT100
	3	PT1000
	4	NI100
	5	NI1000 (DIN43760)
	6	Thermo K
	7	Thermo J
InputFormat	0	0.1 °C
	1	Ω / V
	2	Raw (raw data)

Data rate und Filter	0	1000 readings per second
	1	600 readings per second
	2	330 readings per second
	3	175 readings per second
	4	90 readings per second
	5	45 readings per second
	6	20 readings per second
	7	20 readings per second plus 50 & 60 Hz filter
	8	20 readings per second plus 50 Hz filter
	9	20 readings per second plus 60 Hz filter
Average	n=1...255	Inputn=average after n cycles (default=1)

StateWord

The state word (DWORD) is indicative of the module state:

StateWord		
Bit	Name	Explanation
0	ResetErrorAck	Acknowledges "Reset Error" in Module Control
1	-	not used
2	EtherCATError	Sync Manager Watchdog
3	ConfigError	Mismatch of Sync Manager's quantity structure
4-7	-	not used
8	Input0low	Incorrect range of connected reading
9	Input1low	Incorrect range of connected reading
10	Input2low	Incorrect range of connected reading
11	Input3low	Incorrect range of connected reading
12-15	-	not used
16	Input0high	Incorrect range of connected reading
17	Input1high	Incorrect range of connected reading
18	Input2high	Incorrect range of connected reading
19	Input3high	Incorrect range of connected reading
20-31	-	not used

Analogue inputs

Check the following variables for the digitized input values:

Inputs		
Variable	Data type	Explanation
TempInputn	INT	Value of channel n (n=0...3) in 0.1 °C, Ω or 2 μV

ControlWord

The control word contains a bit for acknowledging errors.

ControlWord		
Bit	Name	Explanation
0	ResetError	0 -> errors are retained, 1 -> errors cleared after removing their cause
1-15	-	not used

Cold point compensation

Cold points are automatically compensated if thermocouples are used. Temperature readings are taken immediately at the plug near the connections.

Calibration

This module need not be calibrated by the end user because it is calibrated after fabrication.

It can only be calibrated once because the calibration values are kept on memory.

The calibration objects (2010:n; 2011:n and 2012:n) in the “Startup Parameters” are intended for internal use only.

Object dictionary

Index	Name	Type	Default	Min Max	Access
1000	Device Type	UINT32	0x40191		RO
1001	Error Register	UINT8			RO
1008	Device Name	String	AI4_Pt/Ni/Thermo		RO
1009	Hardware Version	String	1.00		RO
100A	Software Version	String	1.00		RO
1018	Identity Object	Array			
1018, 0	Number of Entries	UINT8	4		RO
1018, 1	Vendor Id	UINT32	0x0048554B		RO
1018, 2	Product Code	UINT32	185345		RO
1018, 3	Revision Number	UINT32	1		RO
1018, 4	Serial Number	UINT32			RO
2000	Sensor Type	Array			
2000, 0	Number of Entries	UINT8	4		RO
2000, 1	Sensor0	UINT8	Off	Off (0), Internal (1), PT100 (2), PT1000 (3), NI100 (4), NI1000 (5), Thermo_K (6), Thermo_J (7),	RW
2000, 2	Sensor1	UINT8	Off	Off, Internal, PT100, PT1000, NI100, NI1000, Thermo_K, Thermo_J,	RW
2000, 3	Sensor2	UINT8	Off	Off, Internal, PT100, PT1000, NI100, NI1000, Thermo_K, Thermo_J,	RW
2000, 4	Sensor3	UINT8	Off	Off, Internal, PT100, PT1000, NI100, NI1000, Thermo_K, Thermo_J,	RW

Index	Name	Type	Default	Min Max	Access
2001	Input Format	Array			
2001, 0	Number of Entries	UINT8	4		RO
2001, 1	Input0Format	UINT8	0.1°C	0.1°C (0), Ω / V (1) Raw (2)	RW
2001, 2	Input1Format	UINT8	0.1°C	0.1°C, Ω / V Raw	RW
2001, 3	Input2Format	UINT8	0.1°C	0.1°C, Ω / V Raw	RW
2001, 4	Input3Format	UINT8	0.1°C	0.1°C, Ω / V Raw	RW
2002	Data RateAndFilter	Array			
2002, 0	Number of Entries	UINT8	4		
2002, 1	Input0DataRateAnd Filter	UINT8	20 PLC	1000 PLC (0) 600 PLC (1) 330 PLC (2) 175 PLC (3) 90 PLC (4) 45 PLC (5) 20 PLC (6) 20 PLC+50&60Hz (7) 20 PLC + 50Hz (8) 20 PLC + 60Hz (9)	RO
2002, 2	Input1DataRateAndFilter	UINT8	20 PLC	1000 PLC 600 PLC 330 PLC 175 PLC 90 PLC 45 PLC 20 PLC 20 PLC+50&60Hz 20 PLC + 50Hz 20 PLC + 60Hz	RO
2002, 3	Input2DataRateAndFilter	UINT8	20 PLC	1000 PLC 600 PLC 330 PLC 175 PLC 90 PLC 45 PLC 20 PLC 20 PLC+50&60Hz 20 PLC + 50Hz 20 PLC + 60Hz	RO
2002, 4	Input3DataRateAndFilter	UINT8	20 PLC	1000 PLC 600 PLC 330 PLC	RO

Index	Name	Type	Default	Min Max	Access
				175 PLC	
				90 PLC	
				45 PLC	
				20 PLC	
				20 PLC+50&60Hz	
				20 PLC + 50Hz	
				20 PLC + 60Hz	
2003	Average	Array			
2003, 0	Number of Entries	UINT8	4		RO
2003, 1	Input 0 Average	UINT8	1	1..255	RW
2003, 2	Input 1 Average	UINT8	1	1..255	RW
2003, 3	Input 2 Average	UINT8	1	1..255	RW
2003, 4	Input 3 Average	UINT8	1	1..255	RW
6401	Analogue input	Array			
6401, 0	Number of Entries	UINT8	4		RO
6401, 1	Analog Input 0	UINT16			RO P
6401, 2	Analog Input 1	UINT16			RO P
6401, 3	Analog Input 2	UINT16			RO P
6500	StateWord	Array			RO P
6500, 0	Number of Entries	UINT8	32		RO P
6500, 1	ResetErrorAck	BOOL			RO P
6500, 2	-	BOOL			RO P
6500, 3	EtherCAT Error	BOOL			RO P
6500, 4	ConfigError	BOOL			RO P
6500,	-	BOOL			RO P
5..8					
6500, 9	Input 0 low	BOOL			RO P
6500, 10	Input 1 low	BOOL			RO P
6500, 11	Input 2 low	BOOL			RO P
6500, 12	Input 3 low	BOOL			RO P
6500,	-	BOOL			RO P
13..16					
6500, 17	Input 0 high	BOOL			RO P
6500, 18	Input 1 high	BOOL			RO P
6500, 19	Input 2 high	BOOL			RO P
6500, 20	Input 3 high	BOOL			RO P
6500,	-	BOOL			RO P
21..32					
7001	Module Control	Array			
7001, 0	Number of Entries	UINT8	1		RO
7001, 1	Reset Error	BOOL			RW P

RO=read-only, RW= read/write, P=process image

8.4.4. Technical data

AI4-PT/NI/THERMO 16BIT CoE	
Label	E-I/O AI4-PT/NI/THERMO 16BIT CoE
Part no.	204804400
Analogue inputs	4
Resolution	16 bit
Input filter cutoff frequency	0.33 Hz (typ.)
Conversion time	50 ms (adjustable)
Measuring error	< $\pm 0,54$ % (of final measuring range value)
Temperature drift	< ± 50 ppm (of final measuring range value)
Thermocouple	
Sensor types	J,K, mV (internal)
Cold point compensation	Yes
Measuring range Type K	-200 °C...+1372 °C
Measuring range Type J	-50 °C...+760 °C
Measuring range mV	-40 ... +65 mV
PT100 / NI100	
Measuring range PT	-75 °C...+670 °C
Measuring range NI	-60 °C...+250 °C
Input resistance	70...320 Ω
Measuring current	1 mA (typ.)
PT1000 / NI1000DIN43760	
Measuring range PT	-75 °C...+670 °C
Measuring range NI	-60 °C...+250 °C
Input resistance	700...3200 Ω
Measuring current	0.1 mA (typ.)
General	
Baud rate	100 Mbit/s
Controller	ASIC ET1200
E-bus port	10-pin system plug in side wall
Term. module	not required
Plug-in connector	18-pole 204800400 (not part of the module)

AI4-PT/NI/THERMO 16BIT CoE


Power supply	None
--------------	------

E-bus load	170 mA
------------	--------

UL approval	
-------------	---



8.5. Analogue temperature inputs AI8-PT/NI/THERMO 16BIT CoE

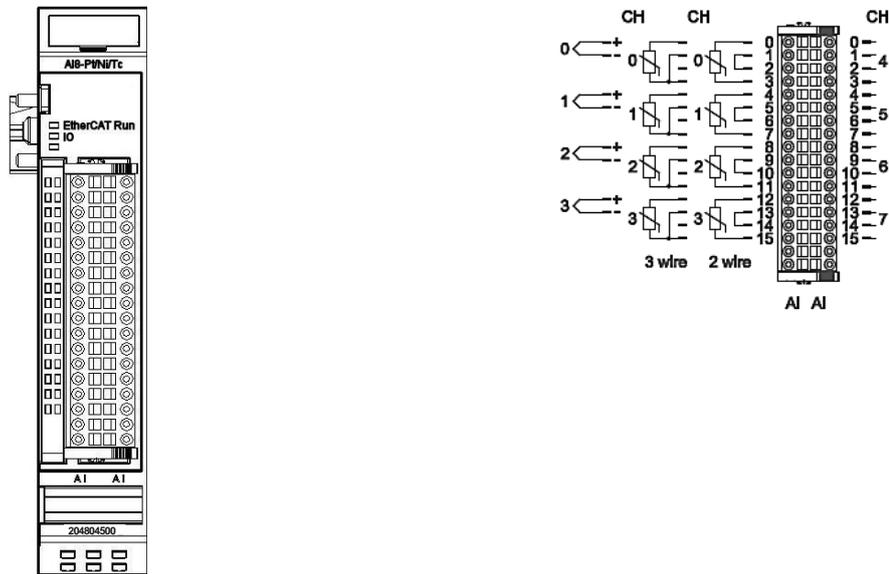

Front view of AI8-PT/NI/THERMO 16BIT CoE I/O module I/O connection



Module AI8-PT/NI/THERMO 16BIT CoE is the incompatible successor to the module AI8-PT/NI100.
Before replacing an AI8-PT/NI100 with an AI8-PT/NI/THERMO 16BIT CoE module, you must modify the EtherCAT master's control program.

8.5.1. Terminals

The module needs no separate 24 V connector. Power is supplied to the module through the E-bus connector. Operative earth / shielding of analog wires → section 3.1.1 Earth

8.5.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On
		Inoperative if E-bus LED = Off
	Red, 4x	EtherCAT watchdog control
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

There is no LED labeled “Power” because a separate power feed is not required.

“Channel” LEDs

The "Channel" LEDs indicate the state of every channel.

Channel		
State	LED flash code	Explanation
On	Green, on	Channel enabled
Off	Off	Channel disabled
Error	Red 1x	Sensor low
	Red 2x	Sensor high

NOTICE**Note on PT100/NI100 mode**

Error "input high" is not shown in the PT100 and NI100 modes, unless a temperature sensor is connected. Check that your wiring is correct (jumped 2-wire or 3-wire connection) to ensure that all error are detected/shown properly.

NOTICE**Note on thermocouple mode**

Errors input low and input high are just indicative of the temperature being out of the set range.

A short circuit (input low) is not detected in thermocouple mode (types J,K) because the thermal voltage is too small for a short circuit to be relevant to the measured result.

Since a broken wire is not detected, the floating module values may provoke an indication of error input high or input low.

8.5.3. Function


The AI8-PT/NI/THERMO 16BIT CoE module has 8 analogue temperature sensor inputs. Every channel can be separately set to one of the following sensor types: millivolt, PT100, PT1000, NI100, NI1000 (DIN 43760) or thermocouple.

Measured value


Readings are shown in 0.1 °C steps (default). Or you can choose to show them as Ohm/Volt or raw data.

Module options

Conversion of the analogue values can be synchronized with DC (Distributed Clocks) or SM (Sync Manager).

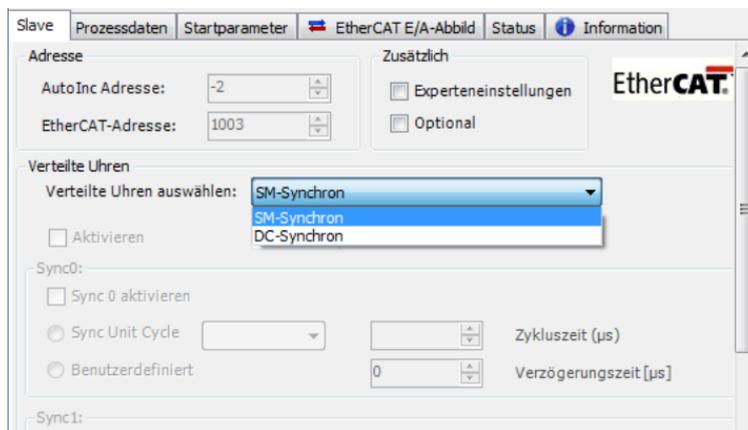

The process data objects stored as variables in the EtherCAT master's control program are used to access the input values and the module state.

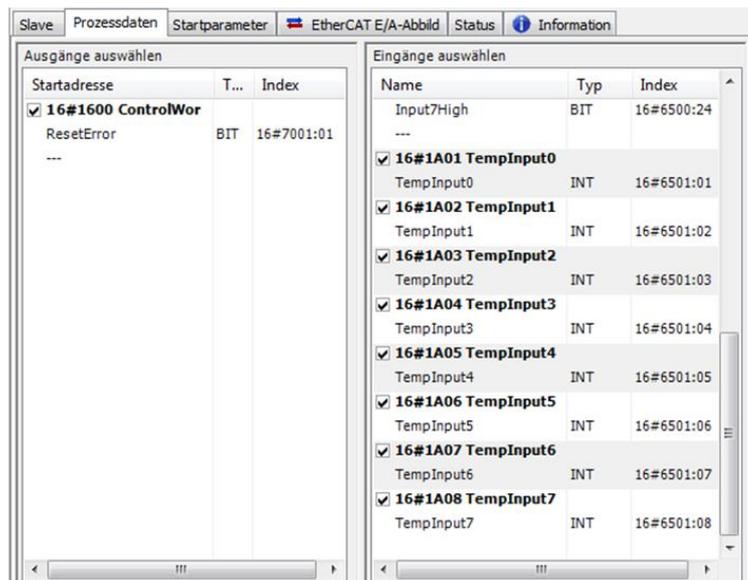


Service data objects (SDO) are available for details and settings.

You may run the configuration tool offline and choose the "Startup Parameters" to change some settings of module AI8-PT/NI/THERMO 16BIT CoE (such as the properties of each of the inputs). The EtherCAT master will apply the settings when starting up the module.

You can also use the SDO transfer components available for the EtherCAT master to change settings at runtime.

Click/tap on "Add...", choose an object, and set the appropriate value.

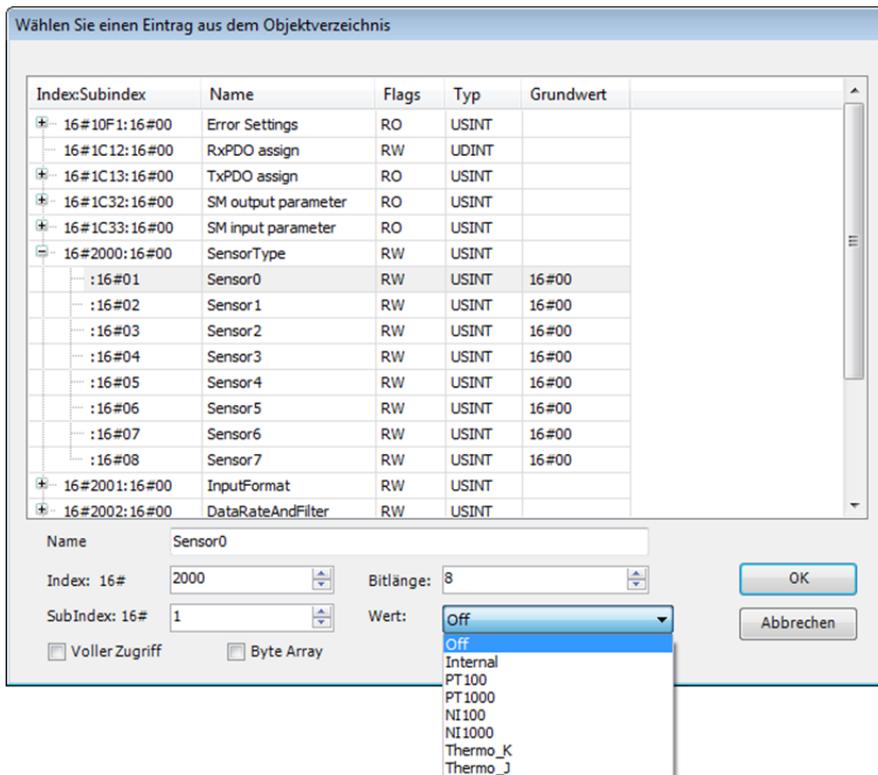

You can set up the following options for every channel:

Module options		
Name	Value	Explanation
SensorType	0	Off (default)
	1	Internal (mV)
	2	PT100
	3	PT1000
	4	NI100
	5	NI1000 (DIN43760)
	6	Thermo K
	7	Thermo J
InputFormat	0	0.1 °C
	1	Ω / V
	2	Raw (raw data)
Data rate and filter	0	1000 readings per second
	1	600 readings per second
	2	330 readings per second
	3	175 readings per second
	4	90 readings per second
	5	45 readings per second
	6	20 readings per second
	7	20 readings per second plus 50 & 60 Hz filter
	8	20 readings per second plus 50 Hz filter
	9	20 readings per second plus 60 Hz filter
Average	n=1...255	Input=average after n cycles (default=1)

StateWord

The state word (DWORD) is indicative of the module state:

StateWord		
Bit	Name	Explanation
0	ResetErrorAck	Acknowledges "Reset Error" in Module Control
1	-	not used
2	EtherCATErrror	Sync Manager Watchdog
3	ConfigError	Mismatch of Sync Manager's quantity structure
4-7	-	not used
8	Input0low	Incorrect range of connected reading
9	Input1low	Incorrect range of connected reading
10	Input2low	Incorrect range of connected reading
11	Input3low	Incorrect range of connected reading
12	Input4low	Incorrect range of connected reading
13	Input5low	Incorrect range of connected reading
14	Input6low	Incorrect range of connected reading
15	Input7low	Incorrect range of connected reading
16	Input0high	Incorrect range of connected reading
17	Input1high	Incorrect range of connected reading
18	Input2high	Incorrect range of connected reading
19	Input3high	Incorrect range of connected reading
20	Input4high	Incorrect range of connected reading
21	Input5high	Incorrect range of connected reading
22	Input6high	Incorrect range of connected reading
23	Input7high	Incorrect range of connected reading
24-31	-	not used

Analogue inputs

Check the following variables for the digitized input values:

Inputs		
Variable	Data type	Explanation
TempInputn	INT	Value of channel n (n=0...7) in 0.1 °C, Ω or 2 μV

ControlWord

The control word contains a bit for acknowledging errors.

ControlWord		
Bit	Name	Explanation
0	ResetError	0 -> errors are retained, 1 -> errors cleared after removing their cause
1-15	-	not used

Cold point compensation

Cold points are automatically compensated if thermocouples are used. Temperature readings are taken immediately at the plug near the connections.

Calibration

This module need not be calibrated by the end user because it is calibrated after fabrication.

It can only be calibrated once because the calibration values are kept on memory.

The calibration objects (2010:n; 2011:n and 2012:n) in the “Startup Parameters” are intended for internal use only.

Object dictionary

Index	Name	Type	Default	Min Max	Access
1000	Device Type	UINT32	0x40191		RO
1001	Error Register	UINT8			RO
1008	Device Name	String	AI8_Pt/Ni/Thermo		RO
1009	Hardware Version	String	1.00		RO
100A	Software Version	String	1.00		RO
1018	Identity Object	Array			
1018, 0	Number of Entries	UINT8	4		RO
1018, 1	Vendor Id	UINT32	0x0048554B		RO
1018, 2	Product Code	UINT32	185346		RO
1018, 3	Revision Number	UINT32	1		RO
1018, 4	Serial Number	UINT32			RO
2000	Sensor Type	Array			
2000, 0	Number of Entries	UINT8	8		RO
2000, 1	Sensor0	UINT8	Off	Off (0), Internal (1), PT100 (2), PT1000 (3), NI100 (4), NI1000 (5), Thermo_K (6), Thermo_J (7),	RW
2000, 2	Sensor1	UINT8	Off	Off, Internal, PT100, PT1000, NI100, NI1000, Thermo_K, Thermo_J,	RW
2000, 3	Sensor2	UINT8	Off	Off, Internal, PT100, PT1000, NI100, NI1000, Thermo_K, Thermo_J,	RW
2000, 4	Sensor3	UINT8	Off	Off, Internal, PT100, PT1000, NI100, NI1000, Thermo_K, Thermo_J,	RW
2000, 5	Sensor4	UINT8	Off	Off,	RW

Index	Name	Type	Default	Min Max	Access
				Internal, PT100, PT1000, NI100, NI1000, Thermo_K, Thermo_J,	
2000, 6	Sensor5	UINT8	Off	Off, Internal, PT100, PT1000, NI100, NI1000, Thermo_K, Thermo_J,	RW
2000, 7	Sensor6	UINT8	Off	Off, Internal, PT100, PT1000, NI100, NI1000, Thermo_K, Thermo_J,	RW
2000, 8	Sensor7	UINT8	Off	Off, Internal, PT100, PT1000, NI100, NI1000, Thermo_K, Thermo_J,	RW
2001	Input Format	Array			
2001, 0	Number of Entries	UINT8	8		RO
2001, 1	Input0Format	UINT8	0.1°C	0.1°C (0), Ω / V (1) Raw (2)	RW
2001, 2	Input1Format	UINT8	0.1°C	0.1°C, Ω / V Raw	RW
2001, 3	Input2Format	UINT8	0.1°C	0.1°C, Ω / V Raw	RW
2001, 4	Input3Format	UINT8	0.1°C	0.1°C, Ω / V Raw	RW
2001, 5	Input4Format	UINT8	0.1°C	0.1°C, Ω / V Raw	RW
2001, 6	Input5Format	UINT8	0.1°C	0.1°C,	RW

Index	Name	Type	Default	Min Max	Access
				Ω / V Raw	
2001, 7	Input6Format	UINT8	0.1°C	0.1°C, Ω / V Raw	RW
2001, 8	Input Format	UINT8	0.1°C	0.1°C, Ω / V Raw	RW
2002	Data RateAndFilter	Array			
2002, 0	Number of Entries	UINT8	8		
2002, 1	Input0DataRateAnd Filter	UINT8	20 PLC	1000 PLC (0) 600 PLC (1) 330 PLC (2) 175 PLC (3) 90 PLC (4) 45 PLC (5) 20 PLC (6) 20 PLC+50&60Hz (7) 20 PLC + 50Hz (8) 20 PLC + 60Hz (9)	RO
2002, 2	Input1DataRateAndFilter	UINT8	20 PLC	1000 PLC 600 PLC 330 PLC 175 PLC 90 PLC 45 PLC 20 PLC 20 PLC+50&60Hz 20 PLC + 50Hz 20 PLC + 60Hz	RO
2002, 3	Input2DataRateAndFilter	UINT8	20 PLC	1000 PLC 600 PLC 330 PLC 175 PLC 90 PLC 45 PLC 20 PLC 20 PLC+50&60Hz 20 PLC + 50Hz 20 PLC + 60Hz	RO
2002, 4	Input3DataRateAndFilter	UINT8	20 PLC	1000 PLC 600 PLC 330 PLC 175 PLC 90 PLC 45 PLC 20 PLC 20 PLC+50&60Hz 20 PLC + 50Hz	RO

Index	Name	Type	Default	Min Max	Access
2002, 5	Input4DataRateAndFilter	UINT8	20 PLC	20 PLC + 60Hz 1000 PLC 600 PLC 330 PLC 175 PLC 90 PLC 45 PLC 20 PLC 20 PLC+50&60Hz 20 PLC + 50Hz 20 PLC + 60Hz	RO
2002, 6	Input5DataRateAnd Filter	UINT8	20 PLC	1000 PLC 600 PLC 330 PLC 175 PLC 90 PLC 45 PLC 20 PLC 20 PLC+50&60Hz 20 PLC + 50Hz 20 PLC + 60Hz	RO
2002, 7	Input6DataRateAndFilter	UINT8	20 PLC	1000 PLC 600 PLC 330 PLC 175 PLC 90 PLC 45 PLC 20 PLC 20 PLC+50&60Hz 20 PLC + 50Hz 20 PLC + 60Hz	RO
2002, 8	Input7DataRateandFilter	UINT8	20 PLC	1000 PLC 600 PLC 330 PLC 175 PLC 90 PLC 45 PLC 20 PLC 20 PLC+50&60Hz 20 PLC + 50Hz 20 PLC + 60Hz	RO
2003	Average	Array			
2003, 0	Number of Entries	UINT8	8		RO
2003, 1	Input 0 Average	UINT8	1	1..255	RW
2003, 2	Input 1 Average	UINT8	1	1..255	RW
2003, 3	Input 2 Average	UINT8	1	1..255	RW
2003, 4	Input 3 Average	UINT8	1	1..255	RW
2003, 5	Input 4 Average	UINT8	1	1..255	RW
2003, 6	Input 5 Average	UINT8	1	1..255	RW

Index	Name	Type	Default	Min Max	Access
2003, 7	Input 6 Average	UINT8	1	1..255	RW
2003, 8	Input 7 Average	UINT8	1	1..255	RW
6401	Analogue input	Array			
6401, 0	Number of Entries	UINT8	8		RO
6401, 1	Analog Input 0	UINT16			RO P
6401, 2	Analog Input 1	UINT16			RO P
6401, 3	Analog Input 2	UINT16			RO P
6401, 4	Analog Input 3	UINT16			RO P
6401, 5	Analog Input 4	UINT16			RO P
6401, 6	Analog Input 5	UINT16			RO P
6401, 7	Analog Input 6	UINT16			RO P
6401, 8	Analog Input 7	UINT16			RO P
6500	StateWord	Array			
6500, 0	Number of Entries	UINT8	32		RO
6500, 1	ResetErrorAck	BOOL			RO P
6500, 2	-	BOOL			RO P
6500, 3	EtherCAT Error	BOOL			RO P
6500, 4	ConfigError	BOOL			RO P
6500, 5...8	-	BOOL			RO P
6500, 9	Input 0 low	BOOL			RO P
6500, 10	Input 1 low	BOOL			RO P
6500, 11	Input 2 low	BOOL			RO P
6500, 12	Input 3 low	BOOL			RO P
6500, 13	Input 4 low	BOOL			RO P
6500, 14	Input 5 low	BOOL			RO P
6500, 15	Input 6 low	BOOL			RO P
6500, 16	Input 7 low	BOOL			RO P
6500, 17	Input 0 high	BOOL			RO P
6500, 18	Input 1 high	BOOL			RO P
6500, 19	Input 2 high	BOOL			RO P
6500, 20	Input 3 high	BOOL			RO P
6500, 21	Input 4 high	BOOL			RO P
6500, 22	Input 5 high	BOOL			RO P
6500, 23	Input 6 high	BOOL			RO P
6500, 24	Input 7 high	BOOL			RO P
6500, 25..32	ResetErrorAck	BOOL			RO P
6500, 1	EtherCAT Error	BOOL			RO P
6500, 3	ConfigError	BOOL			RO P
6500, 4	Module Control	Array			
7001	Number of Entries	UINT8	1		RO
7001, 0	Reset Error	BOOL			RW P
7001, 1					

RO=read-only, RW= read/write, P=process image

8.5.4. Technical data

AI8-PT/NI/THERMO 16BIT CoE	
Label	E-I/O AI8-PT/NI/THERMO 16BIT CoE
Part no.	204804500
Analogue inputs	8
Resolution	16 bit
Input filter cutoff frequency	0.33 Hz (typ.)
Conversion time	50 ms (adjustable)
Measuring error	< $\pm 0,54$ % (of final measuring range value)
Temperature drift	< ± 50 ppm (of final measuring range value)
Thermocouple	
Sensor types	J,K, mV (internal)
Cold point compensation	Yes
Measuring range Type K	-200 °C...+1372 °C
Measuring range Type J	-50 °C...+760 °C
Measuring range mV	-40 ... +65 mV
PT100 / NI100	
Measuring range PT	-75 °C...+670 °C
Measuring range NI	-60 °C...+250 °C
Input resistance	70...320 Ω
Measuring current	1 mA (typ.)
PT1000 / NI1000DIN43760	
Measuring range PT	-75 °C...+670 °C
Measuring range NI	-60 °C...+250 °C
Input resistance	700...3200 Ω
Measuring current	0.1 mA (typ.)
General	
Baud rate	100 Mbit/s
Controller	ASIC ET1200
E-bus port	10-pin system plug in side wall
Term. module	not required
Plug-in connector	36-pole 204800300 (not part of the module)

AI8-PT/NI/THERMO 16BIT CoE

Power supply	None
--------------	------

E-bus load	170 mA
------------	--------


UL approval	
-------------	---



Blank page

9. Counter modules

9.1. Counters with analogues outputs COUNTER/POSI2 5V

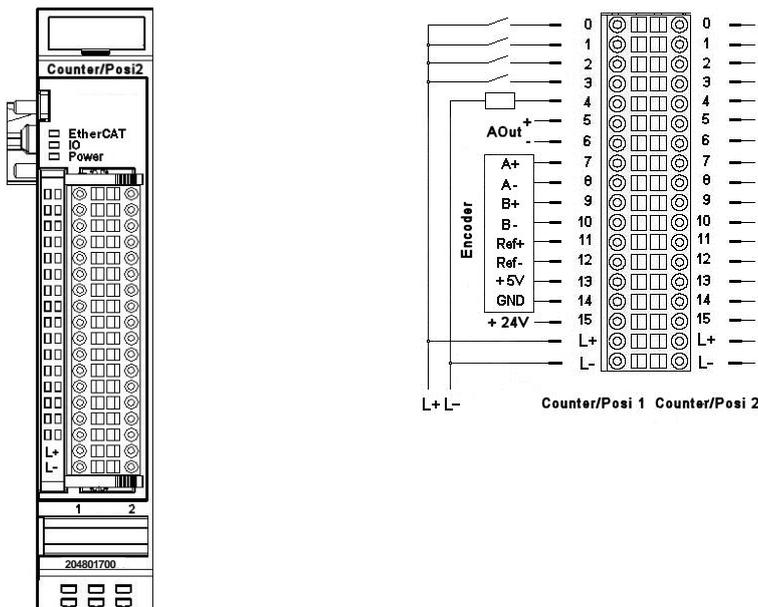

Front view of COUNTER/POSI2 5V I/O module Pinning COUNTER/POSI2

9.1.1. Terminals

COUNTER/POSI2		
Pin	Signal	Explanation
0..3	In_0..3	Digital inputs
4	Out_0	Digital output
5..6	A_Out	Analogue output (COUNTER/POSI2 only)
7..12	A, B, Ref	Encoder signals
13..14	5 V	Encoder supply 5 V (0.2 A fuse)
15	+24 V	Initiator supply +24 V (0.2 A fuse)
16..17	24 V	Module supply

Operative earth / shielding of analog wires → section 3.1.1 Earth

9.1.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“I/O” LED

The LED labeled “I/O” indicates the state of the module's I/Os.

I/O		
State	LED flash code	Explanation
Ok	Green, on	No error
Error	Off	Malfunction of module if E-bus LED = On Inoperative if E-bus LED = Off
	Red, 2x	Low voltage
	Red, 3x	Watchdog internal
	Red, 4x	EtherCAT watchdog control
	Red, 7x	Configuration error (E-bus pre-operational), no. of process data differs from that in the module
Defective	Red, on	Module defective

“Power” LED

The LED labeled "Power" indicates the state of the I/O module's I/O power supply.

Power		
State	LED flash code	Explanation
On	Green, on	24 V DC supply ok
Off	Off	24 V DC supply not ok

Status LEDs of the I/Os


The Status LEDs of the several I/Os indicate the state of the individual digital I/Os.

Status			
Pin	Voltage	LED	Explanation
0..3	24 V	Green	Digital inputs
4	24 V	Green	Digital output
7, 9, 11	5 V	Green	Encoder signals A, B, Ref

9.1.3. Function

Each channel has terminals for one encoder and 4 digital inputs and 1 digital output.

The COUNTER/POSI2 module has 1 additional analogue output.

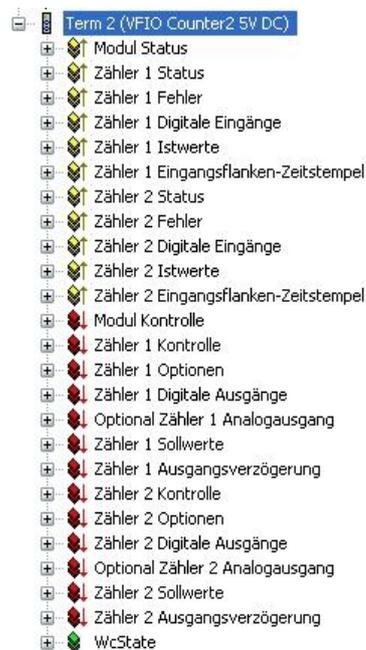

There are structured groups of variables for.

- Controlling and watching the entire module: Modul Kontrolle/Modul Status (Module control/Module status)
- Controlling and watching of Counter 1 resp. 2: Optionen/Kontrolle/Status/Fehler (Options/Control/Status/Errors)
- Counter values of Counter 1 resp. 2: Sollwerte/Istwerte (Set values/Current values)
- State of the digital I/Os of Counter 1 resp. 2: Digitale Ausgänge/Digitale Eingänge/Eingangsflanken-Zeitstempel/Ausgangsverzögerung (Digital outputs/Digital inputs/Input change time stamp/ Output delay)
- State of the analogue outputs of Counter 1 resp. 2: Optional Analogausgang (Analogue output, Function with module COUNTER/POSI2 only)

Principle of control (controller) and status

If a control bit is set (=TRUE), the module will operate the corresponding function due to the rising edge of the bit.

The module indicates the execution of the function by setting the corresponding status bit (=TRUE). When the control bit is reset (=FALSE) the module will also reset the status bit (=FALSE).



In the following the functions of the counter module are described by Counter/Posi 1. For Counter/Posi 2 the data are valid accordingly.

Frame- or DC- synchronous mode

Dependent on whether Distributed Clocks (DC) are used or not, the module adjusts itself independently on the suitable mode of operation.

The module is preset on Frame synchronous mode. With the receipt of the first DC telegram the module is changed over to DC-synchronous mode and maintains this mode of operation up to next switching off.

Frame-synchronous

The EtherCAT master sends EtherCAT frames with the output data for the module. With the arrival of such frame the output data are taken over and processed by the module. The module places its input data into the EtherCAT frame, so that the master can receive it.

DC-synchronous

If the module is adjusted to DC-synchronous mode, it produces interrupts according to the rules of the Distributed Clocks DC.

The EtherCAT master sends also here EtherCAT Frames away with the output data for the module. With the arrival of such frames the output data of the module are taken over however then processed only if a DC interrupt has occurred. With the DC interrupt the module places its input data into a buffer, from which they are transported with the next EtherCAT Frame to the master.

With this method time-synchronous functions for digital inputs and digital outputs for several modules in one EtherCAT network are possible.

9.1.4. Controlling and watching the entire module

The module control is carried out with the variables from the group “Modul Kontrolle”. The status of the settings having been carried out becomes shown in the variables of the group “Modul Status”.

Modulkontrolle (Module Control)

The module does not have any options at present.

The module reports faults with different “Modul Status” bits. These bits are stored. They can be reset only then if the fault is not there any more. Send a rising edge to “ResetError” to reset the “Modul Status” bits.

Error bits		
Variable	Data type	Explanation
ResetError	BOOL	Rising edge → acknowledges error

Modulstatus (Module Status)

The following module status bits are indicated:

Module status		
Variable	Data type	Explanation
LowSupplyVoltage	BOOL	Low voltage
Watchdog	BOOL	Module internal Watchdog
EtherCAT_Error	BOOL	Configuration error or watchdog control

Acknowledgement see Module control

9.1.5. Controlling / Watching Counter 1

The setting of the functions of the counter is carried out with the variables from the group “Zähler 1 Optionen”.

The module control is carried out with the variables from the group “Zähler 1 Kontrolle”.

The status of the settings is indicated in the variables of the group “Zähler 1 Status”.



The use of the counter module in a variety of different applications is possible by use of the variables from the groups of Zähler 1-Optionen, -Kontrolle and -Status.

Zähler 1 Optionen (Counter 1 Options)

The module offers you different options for the operation of Counter 1. The options are set in the module with the help of the control bit “SetOptions_1” (see also

Zähler 1 **Kontrolle**) and then valid up to the next setting procedure.

- At first select the options, please. For taking over send a rising edge to the control bit “SetOptions_1”.
- The module indicates the execution by “OptionsSet_1=TRUE”.
- When “SetOptions_1” becomes FALSE again, the module responses by “OptionsSet_1=FALSE”. So the module is ready for the next setting process.

Counter 1 Options			
Variable	Data type	Value	Explanation
Enable_Compare_1	BOOL	0	Deactivate compare function
		1	Activate compare function
SelectEncoder_1	BOOL	0	A, B, Ref with detection of direction
		1	Event counter at A
			B=0 down B=1 up
SetResolution_1	BOOL		Only if SelectEncoder=1 (Event counter)
		0	Rising and falling edges
		1	Only rising edges
ControlOutput_1	BOOL	0	Output_0_0 is a regular digital output
		1	Output_0_0 is controlled by the compare function.

Zähler 1 Kontrolle (Counter 1 Control)

Enabling and disabling of counting and referencing are determined by the state of the control variables. Set and Reset functions are activated by setting of the appropriate variable. The execution is indicated in the corresponding status variable. If the control variable is reset, the counter module also resets the corresponding status variable.

Counter 1 Control			
Variable	Data type	Value	Explanation
SetOptions_1	BOOL	0/1	Take over "Zähler 1 Optionen"
ResetReferenced_1	BOOL	0/1	Reset of status bit "Referenced_1"
ResetCompared_1	BOOL	0/1	Reset of status bit "Compared_1"
ResetCaptured_1	BOOL	0/1	Reset of status bit "Captured_1"
EnableCounter_1	BOOL	0	Disable counter
		1	Enable counter
EnableReferencing_1	BOOL	0	Disable Referencing
		1	Enable Referencing
SetCounter_1	BOOL	0/1	Set counter to preset value
SetCompare_1	BOOL	0/1	Set compare value register
SetPreset_1	BOOL	0/1	Set preset value register
SetMax_1	BOOL	0/1	Set maximum value register

Zähler 1 Status (Counter 1 State)

The status variables indicate the status of the counter. This concerns the appearance of events and the indication of the execution of settings.

Counter 1 Status		
Variable	Data type	Explanation
Counting_1	BOOL	Counter is enabled
Referenced_1	BOOL	Reference function was executed, reset by ResetReferenced_1
Clockwise_1	BOOL	Counter counts up
Compared_1	BOOL	Compare function was executed, reset by ResetCompared_1
Captured_1	BOOL	Capture function was executed, reset by ResetCaptured_1
CounterSet_1	BOOL	Counter is set to preset value
CompareSet_1	BOOL	Compare value is set
PresetSet_1	BOOL	Preset value is set
MaxSet_1	BOOL	Maximum value is set
OptionsSet_1	BOOL	Options of counter 1 are set.

Zähler 1 Fehler (Counter 1 Errors)

The variables are provided for the indication of error states.

Counter 1 Errors		
Variable	Data type	Explanation
Err_Reserved_1_x	BOOL	Reserved error bits

9.1.6. Counter values of Zähler 1 (Counter 1)

Zähler 1 Sollwerte (Counter 1 Set Values)

The counter can be preset with different set values. That is done by help of the variable "SetValue_1". After setting the following control bits from the group "Zähler 1 Kontrolle" the content of "SetValue_1" will be copied as set value in the corresponding registers.

Counter 1 Set Values	
Variable	Explanation
SetCounter_1	Copy "SetValue_1" to the current counter value
SetCompare_1	Copy "SetValue_1" to the compare value register
SetPreset_1	Copy "SetValue_1" to the preset value register
SetMax_1	Copy "SetValue_1" to the maximum value register

The current set values can be read in the variable "SelectedValue" from the "Zähleristwerte" (Counter current values) group.

Select by the variable "Select_1", which value you want to see in the variable "SelectedValue".

SelectedValue			
Variable	Data type	Explanation	
Select_1	USINT	Selection which value of counter1 shall be displayed in the variable "SelectedValue".	
		0	none
		1	Vergleichswert (Compare value)
		2	Vorwahlwert (Preset value)
		3	Endwert (Max value)
		4	Fangwert (Capture value)
		5	Counter pulses/second
		6	Revolutions per minute
	128	Version info	
SetValue_1	DINT	Set value of counter 1 (source) to copy (operated by a control bit) into a set value register (target).	

Zähler 1 Istwerte (Counter 1 Actual Values)

These variables display the current counter value and the current set values. The set values are represented multiplexedly in the variable “SelectedValue” (Selection by Select_1).

Counter 1 Actual Values		
Variable	Data type	Explanation
Counter_1	DINT	Current value of counter 1
Selected_1	USINT	Selection of that value of counter 1, which is displayed in the variable SelectedValue (value of Select_1 read from the module).
		0 none
		1 Vergleichswert (Compare value)
		2 Vorwahlwert (Preset value)
		3 Endwert (Max value)
		4 Fangwert (Capture value)
		5 Counter pulses/second
		6 Revolutions per minute
128 Version info		
SelectedValue	DINT	Selected current value of counter 1

Version Info				
Byte	3	2	1	0
Explanation	Version #	Release	Level	Type code
Example	0x02	0x00	0x00	0x53
	2	0	0	S

9.1.7. Digital I/Os

Zähler 1 (Counter 1) Digital inputs

The variables indicate the status of the digital inputs.

Digital inputs		
Variable	Data type	Explanation
Input_0_0	BOOL	Digital input 0
Input_0_1	BOOL	Digital input 1
Input_0_2	BOOL	Digital input 2
Input_0_3	BOOL	Digital input 3
In_Output_0_0	BOOL	Status of digital output 0 (reads the status)

Zähler 1 (Counter 1) Input edge timestamp

The variables indicate the time, on which the status of the digital input has changed.

When the time measurement is started depends on the mode of operation (see also section 9.1.3 Frame-synchronous, DC-synchronous).


Input edge timestamp		
Variable	Data type	Explanation
Input_0_0_TS	UINT	Time stamp for digital input 0 (Hardware Capture)
Input_0_1_TS	UINT	Time stamp for digital input 1 (Software Polling)
Input_0_2_TS	UINT	Time stamp for digital input 2 (Software Polling)
Input_0_3_TS	UINT	Time stamp for digital input 3 (Software Polling)



The time stamp is metered between frame- or DC-interrupts and signal changes on the input in μs .
 The value of the time stamp becomes to 0xFFFF, when no signal change takes place between two frame- or DC-interrupts.

In frame-synchronous mode


The time from the last frame-interrupt to the status change of the input is stored in the time stamp and sent in the following frame to the EtherCAT Master.

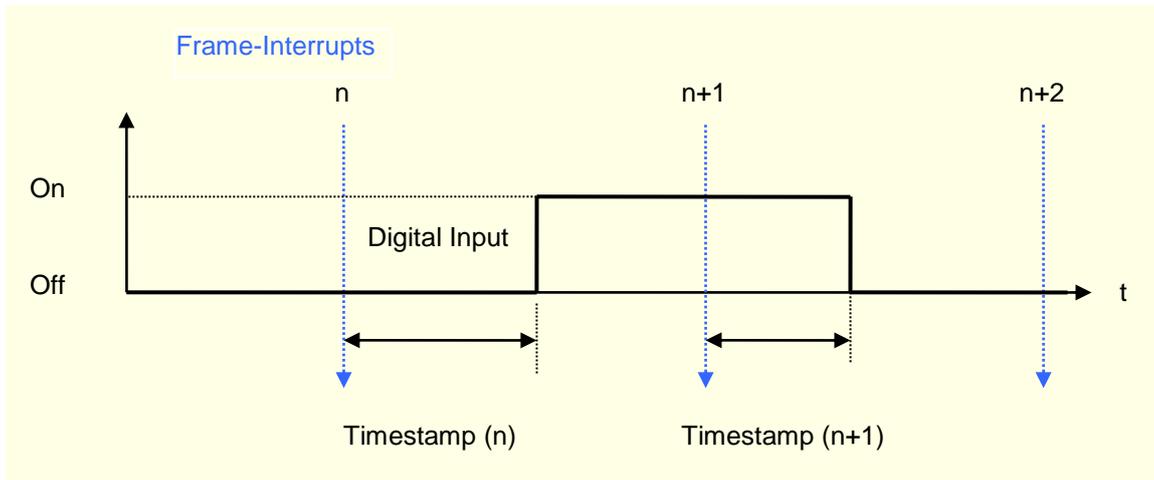

Frame-synchronous		
Frame	Digital Input	
	Variable	Time stamp
n+1	TRUE	Time stamp (n)
n+2	FALSE	Time stamp (n+1)

In DC-synchronous mode

The time from the last DC-interrupt to the status change of the input is stored in the time stamp and sent in the following frame to the EtherCAT Master.

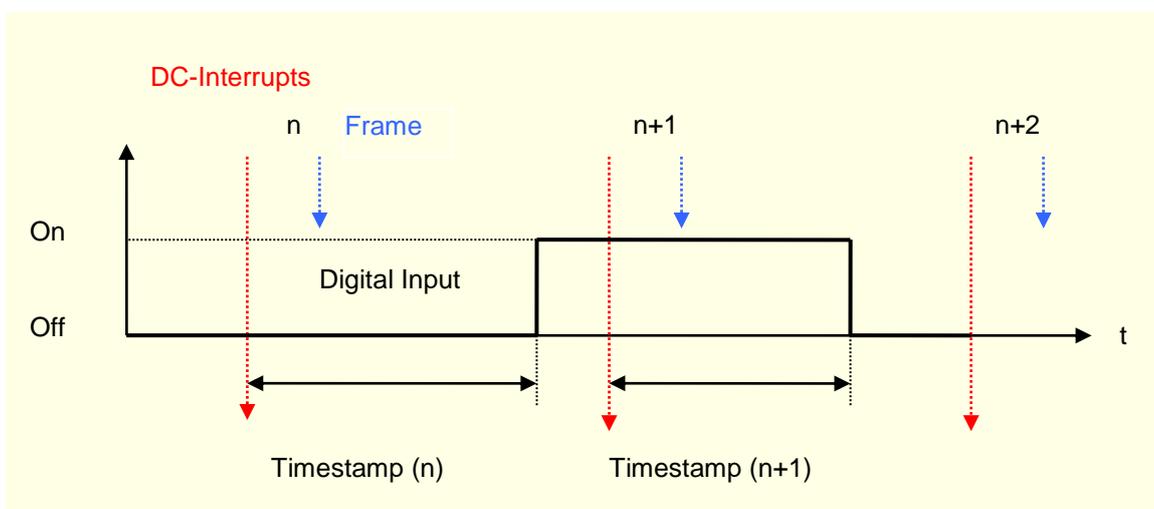

DC-synchronous		
Frame	Digital Input	
	Variable	Time stamp
n+1	TRUE	Time stamp (n)
n+2	FALSE	Time stamp (n+1)

Digital outputs

The variables indicate the status of the digital outputs.


Digital outputs		
Variable	Data type	Explanation
Output_0_0	BOOL	Digital output 0

Output set delay (in preparation)

This variable defines the time, when the output is set.


Output set delay		
Variable	Data type	Explanation
Output_0_0_Del	UINT	Output set delay in μ s

In frame-synchronous mode

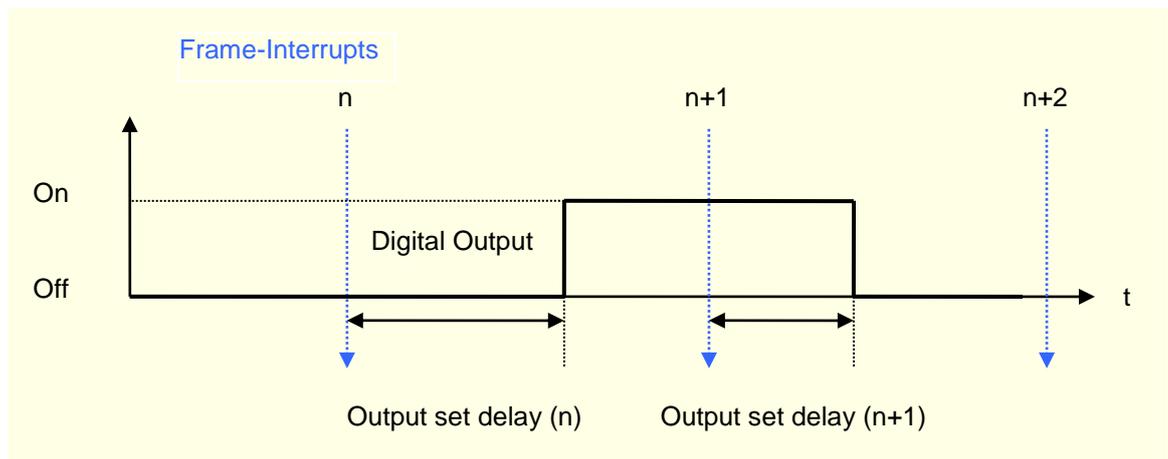

Frame-synchronous		
Frame	Digital Output	
	Variable	Output set delay
n	TRUE	Output set delay (n)
n+1	FALSE	Output set delay (n+1)

In DC-synchronous mode

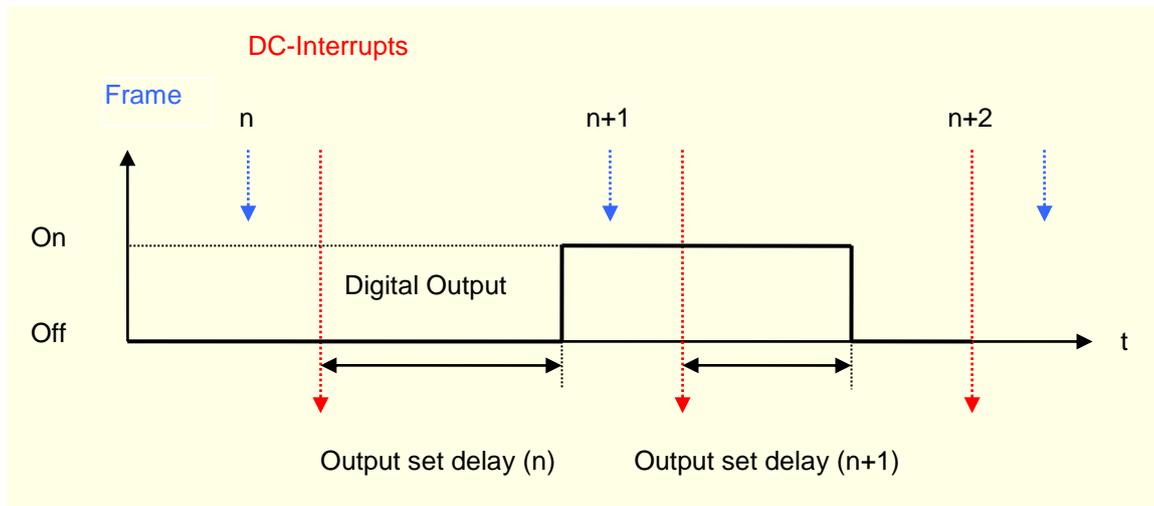

DC-synchronous		
Frame	Digital Output	
	Variable	Output set delay
n	TRUE	Output set delay (n)
n+1	FALSE	Output set delay (n+1)

9.1.8. Analogue outputs (COUNTER/POS12 5V only)

The variables define the voltage of the analogue outputs.

Analogue outputs		
Variable	Data type	Explanation
AnalogOutput_1	UINT	Analogue output 1

Output values see table voltage, page 86

9.1.9. Examples

Enable Counter

The counter is active, when the variable "EnableCounter_1" is TRUE.

```
Term2_EnableCounter_1:=TRUE; (*Release of the counter *)
Term2_Counting_1;           (*TRUE, if counter is enabled *)
Term2_Clockwise_1;         (*Count direction, TRUE, when up *)
```

Counter set/clear

Copying the contents of "SetValue_1" into the current value is executed by a rising edge to "SetCounter_1". Execution is indicated by "CounterSet_1=TRUE".

If "SetCounter_1" is reset (FALSE) again, "CounterSet_1" also becomes FALSE again.

```
Term2_SetValue_1:=diCounterValue ;    (*Copy a number into the source var*)
                                       (* 0 = Clear*)
Term2_SetCounter_1:=TRUE;             (*and copy to the counter current
                                       value*)
Term2_CounterSet_1;                   (*TRUE, if set*)
```

Set compare value

Configuration settings set in "Zähler 1 Optionen" are activated by the rising edge of the control bit "SetOptions_1". The successful take-over of the options is confirmed with the status bit "OptionsSet_1" (e.g. Set compare function).

```
PROGRAM Initialisierung (Initialization)
VAR
    bInit: BOOL := TRUE;
    Step: USINT;
END_VAR
-----
-
IF bInit THEN
CASE Step OF
(*Select options, activate them by a rising edge to "Set_Options"*)
0:   Term2_EnableCounter_1:=TRUE; (*Release counter *)
      Term2_EnableCompare_1:=TRUE; (*Activate compare function *)
      Term2_ControlOutput_1:=TRUE; (*Compare function controls output *)
      Term2_SetValue_1:=10000;     (*Set value = 10000..*)
      Term2_SetCompare_1:=TRUE;    (*..use as compare value *)
      Term2_SetOptions_1:=TRUE;   (*Activate selected options *)
      Step:= 1;
(* Wait for confirmations "OptionsSet" and "CompareSet"*)
1:   IF Term2_OptionsSet_1 AND Term2_CompareSet_1 THEN
          Step:= 2;
      END_IF
(* Set "Set_Options" and "SetCompare" in the starting position*)
```

```

2:   Term2_SetOptions_1:=FALSE;
      Term2_SetCompare_1:=FALSE;
      Step:=0;
      bInit:=FALSE;
END_CASE
END_IF

```

Set preset value

Copying the value of “SetValue_1” into the preset value is executed by a rising edge to “SetPreset_1”. The execution is indicated by “PresetSet_1=TRUE”.

If “SetPreset_1” is reset (FALSE) again, “PresetSet_1” also becomes FALSE again.

```

Term2_SetValue_1:=diPresetValue ; (*Copy a number into the source var*)
Term2_SetPreset_1:=TRUE;          (*and copy to the preset value*)
Term2_PresetSet_1;                (*TRUE, if set*)

```

Set maximum value

Copying the value of “SetValue_1” into the maximum value is executed by a rising edge to “SetMax_1”. The execution is indicated by “MaxSet_1=TRUE”.

If “SetMax_1” is reset (FALSE) again, “MaxSet_1” also becomes FALSE again.

```

Term2_SetValue_1:=diMaxValue ;   (*Copy a number into the source var*)
Term2_SetMax_1:=TRUE;            (*and copy to the maximum value*)
Term2_MaxSet_1;                  (*TRUE, if set*)

```

Digital output

see also page 173 Zähler 1 Optionen

The digital output can be controlled optionally by the variable "Output_o_o" or the compare function. Decision is done by the variable "ControlOutput_1" (Set options see also page 182).

The current status of the output is read from the module and displayed in “In_Output_o_o”.

```

Term2_ControlOutput_1:=FALSE;    (*Term2_Output_0_0 controls output*)
Term2_ControlOutput_1:=TRUE;    (*Compare function controls output*)
Term2_In_Output_0_0;            (*Status of the output*)

```

Operating as A-B-Ref-Counter or Event Counter

see also page 173 Zähler 1 Optionen

The counter can be operated as A, B, Ref -Counter with self detection of the direction or as event counter. The selection is done by the variable “SelectEncoder_1” (Set options see also page 182).

```

Term2_SelectEncoder_1:=FALSE;    (*A, B, Ref with self detection of the
                                   direction*)
Term2_SelectEncoder_1:=TRUE;    (*Event counter at A*)
                                   (*B=FALSE:down, B=TRUE:up*)

```

Single and multiple counting

This option is valid in the event counter mode only (see also page 173 Zähler 1 Optionen).

The counter can count edges (all rising and falling edges) or pulses (only the rising edges).

The selection is done by the variable "SetResolution_1" (Set options see also page 182).

```
Term2_SetResolution_1:=FALSE;    (*All edges*)
Term2_SetResolution_1:=TRUE;     (*Pulses*)
```

Referencing

The counter can be set to preset value when a pulse occurs at the Ref input. The preset value can be 0, but also any other 32-bit number.

Task

An encoder with 500 pulses provides 2000 increments per turn in 4-fold mode.

Every Ref pulse shall set the counter to the preset value 2000. It shall be counted down to 0 within 1 turn.

(The counting direction is determined by the turning direction of the encoder.)

```
PROGRAM Referenzierung (Referencing)
```

```
VAR
```

```
  bInit: BOOL := TRUE;
  StepInit: USINT;
  bInitReady: BOOL;
  Step: USINT;
```

```
END_VAR
```

```
-----
-
```

```
(*1. Initializing: Enabling of the counter and setting of the preset value*)
```

```
IF bInit THEN
```

```
  CASE StepInit OF
```

```
(*Selecting of the options and setting them by a rising edge of "Set_Options"*)
```

```
  0:  Term2_EnableCounter_1:=TRUE;
      Term2_SetValue_1:=2000;
      Term2_SetPreset_1:=TRUE;
      Term2_SetOptions_1:=TRUE;
      StepInit:=1;
```

```
(*Wait for confirmations "OptionsSet" and "PresetSet"*)
```

```
  1:  IF Term2_OptionsSet_1 AND Term2_PresetSet_1 THEN
      StepInit:=2;
    END_IF
```

```
(*Reset "Set_Options" und "Set_Preset" into the start position*)
```

```
  2:  Term2_SetOptions_1:=FALSE;
      Term2_SetPreset_1:=FALSE;
      StepInit:=0;
      bInit:=FALSE;
      bInitReady:=TRUE;
```

```
  END_CASE
```

```
END_IF
```

```

(*2. Controlling of the referencing*)
IF bInitReady THEN
  CASE Step OF
    (*Switch on the referencing mode*)
    0:  Term2_EnableReferencing_1:=TRUE;
        Step:=1;
    (*Wait for a referencing pulse*)
    1:  IF Term2_Referenced_1 THEN
        Step:=2;
      END_IF
    (*Reset of the referencing message*)
    2:  Term2_ResetReferenced_1:=TRUE;
        Step:=3;
    3:  IF NOT Term2_Referenced_1 THEN
    (*Exit reset of the referencing message*)
        Term2_ResetReferenced_1:=FALSE;
    (*Switch off the referencing mode*)
        Term2_EnableReferencing_1:=FALSE;
        Step:=0; (*reference in the next turn again*)
      END_IF
    END_CASE
  END_IF

```

Capture

A falling edge at the digital input 1 can be used as trigger in order to save the current counter value (capture). You get a message in the status bit “Captured_1” that a capture event has appeared. You have to reset “Captured_1” by “ResetCaptured_1” that the next capture event can be indicated.

```

Term2_Input_0_1;      (*Status of input 1*)
Term2_Select_1:=4;   (*Copy capture register to Term2_SelectedValue_1*)
Term2_Selected_1;    (* =4, if capture value in Term2_SelectedValue_1*)
Term2_SelectedValue_1; (*Here you can read the capture value.*)
Term2_Captured_1;    (*A capture event has appeared.*)
Term2_ResetCaptured_1; (*Reset of Term2_Captured_1*)

```

Digital inputs (Input_o_x)

The statuses of the digital inputs are indicated in the variables “Input_o_x”.

Permanent additional function: The current counter value is saved in the capture register when a falling edge appears at Input_o_1.

```

Term2_Input_0_0;      (*Status of input 0*)
Term2_Input_0_1;      (*Status of input 1*)
Term2_Input_0_2;      (*Status of input 2*)
Term2_Input_0_3;      (*Status of input 3*)

```

Analogue outputs (COUNTER/POS12 5V only)

The output values of the analogue outputs are written into the variables “AnalogOutput_x”.

```
Term2_ AnalogOutput_1:= 16#7FFF; (*Set AnalogOutput_1 to +10V*)
Term2_ AnalogOutput_2:= 16#8000; (*Set AnalogOutput_2 to -10V*)
```

Output values see table “AI4/8-U, Analogue values voltage”.

9.1.10. Technical data

COUNTER/POS12 5V	
Label	E-I/O COUNTER/POS12 5V
Part no.	204801700
Plug-in connector	36-pole 204800300 (not part of the module)
Encoder	2 A, B, Ref
Encoder type	RS422, 5 V, 24 VDC
Count rate	RS422: 200 kHz 24 V: 200 kHz
Digital inputs	8
Input delay	1 ms
Signal level	Off: -3 ... 5 V, On: 15 V ... 30 V (EN 61131-3, Type1)
Digital outputs	2
Max. current	2 A per output
Fieldbus	EtherCAT 100 Mbit/s
EtherCAT file	Berghof EIO Modules.xml
WxHxD	25x120x90 mm
Mounting	35 mm DIN top hat rail
Controller	ASIC ET1200
E-bus port	10-pole system plug at the side wall
Term. module	not required
E-bus load	300 mA
Analogue outputs	2
Voltage	-10 V ...+10 V
Resolution	12 bit

COUNTER/POS12 5V**Power supply**

Logic	by EtherCAT coupler via E-bus plug
Power	24 V DC -20% +25%
Galvanic separation	Separated from one another and versus the bus
Storage temperature	-25 °C...+70 °C
Operating temperature	0°C...+55°C
Relative humidity	5%...95% without dewing
Protection	IP20
Interference immunity	Zone B
UL approval	 <p> UL LISTED 59DM E242595 IND.CONT.EQ. </p>

NOTICE**Encoder:**


Unused encoder signals must be connected to +5 V.

The unused encoder signals must always be connected to +5 V now, independent of frequency.

Blank page

10. EXTENDER

10.1. EXTENDER 2 PORT

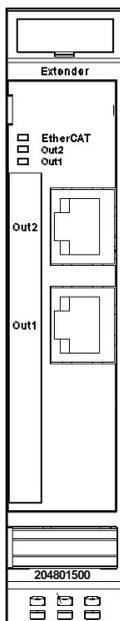


The purpose of the CANtrol E-I/O EXTENDER is the extension of a CANtrol E-I/O block or an EC1000 by EtherCAT slaves, which have a standard 100 base TX connection.

The EXTENDER module changes the transmitting physics of LVDS (E-bus) on twisted pair. The module is usually arranged thereby at the end of the block.

In addition, the EXTENDER can be used in arbitrary place behind the bus coupler and/or the EC1000 PLC controller. Thus EtherCAT slaves can also be connected in star topology.

E-I/O EXTENDER 2 PORT

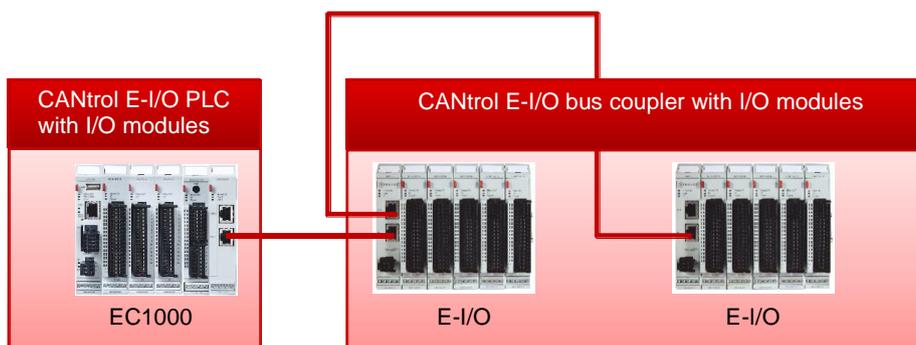

2VF100531DG00.cdr

10.1.1. Terminals

Supply of the module

via E-bus

EtherCAT (RJ45 socket)

OUT1: Output port (to the next EtherCAT device)

OUT2: Output port (to the next EtherCAT device)

10.1.2. Status LEDs

“EtherCAT” LED

The LED labeled “EtherCAT” indicates the state of the EtherCAT ASIC.

EtherCAT		
State	LED flash code	Explanation
Init	Red, on	Initializing, no data exchange
Pre-Op	Red/green, 1:1	Pre-operational, no data exchange
Safe-Op	Red/green, 5:1	Safe operation, inputs readable
Op	Green, on	Operational, unrestricted data exchange

“Out2” LED/“Out1” LED

The “Out2” LED and the “Out1” LED indicate the physical state of the Ethernet port they are allocated to.

Out2 / Out1		
State	LED flash code	Explanation
Not connected	Off	No Ethernet connection
Connected	Green, on	Connected to Ethernet
Traffic	Green, flashing light	Exchanging telegrams

10.1.3. Function

The EXTENDER 2 PORT module has actually 4 ports. Name 2 PORT module was chosen because of the 2 standard 100 base TX (OUT1, OUT2) RJ45 connections. Another 2 ports are covered by the E-bus.

It is important to the configuration in which sequence the connections are operated, i.e. which way the EtherCAT frame runs.

Function		
Port	Connection	Sequence
Port A	E-Bus In	1
Port B	Out 1	3
Port C	Out 2	4
Port D	E-Bus Out	2


10.1.4. Technical data

EXTENDER 2 PORT	
Label	E-I/O EXTENDER 2 PORT
Part no.	204801500
Function	Extension of a CANtrol E-I/O block resp. of an EC1000 Transformation of transmission physics from LVDS (E-bus) to 100Base-TX
Controller	ASIC ET1100
Baud rate	100 Mbit/s
Cable	CAT5
Cable length	max. 100 m
EtherCAT Connection	2 x RJ45
Power supply	via E-bus
E-bus load	160 mA for Out1 / 210 mA for Out1 + Out2
UL approval	 <p> UL LISTED 59DM E242595 IND.CONT.EQ. </p>

Blank page

11. Supplement

11.1. POTENTIALVERTEILER 2x16 (Potential distributor)

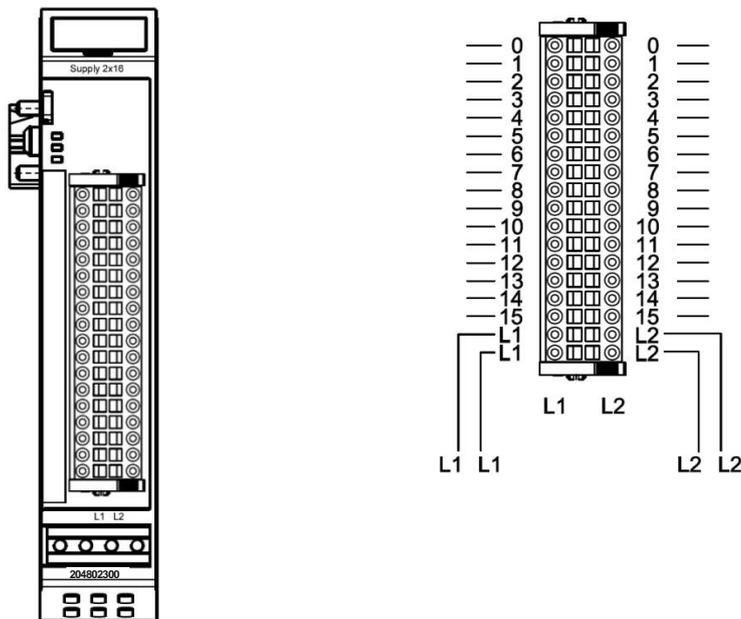

Front view of POTENTIALVERTEILER 2x16 Connections

11.1.1. Terminals

The module POTENTIALVERTEILER 2x16 has 2 separate potential lines.

It distributes the potential (optional 0 V DC or 24 V DC) attached at the pins L1 or L2 on the pins 0 to 15 of the same row.

The E-bus is passed on from the previous one to the next module.

11.1.2. Status LEDs

The module has no status LEDs.


11.1.3. Function

2-wire or 3-wire terminals for digital I/O modules

11.1.4. Technical data

Potential distributor	
Label	POTENTIALVERTEILER 2x16
Part no.	204802300
Plug-in connector	36-pole 204800300 (not part of the module)
E-bus port	10-pin system plug in side wall
E-bus load	none
UL approval	

11.2. SCHIRMANSCHLUSSKLEMME (Shield connection terminal block)

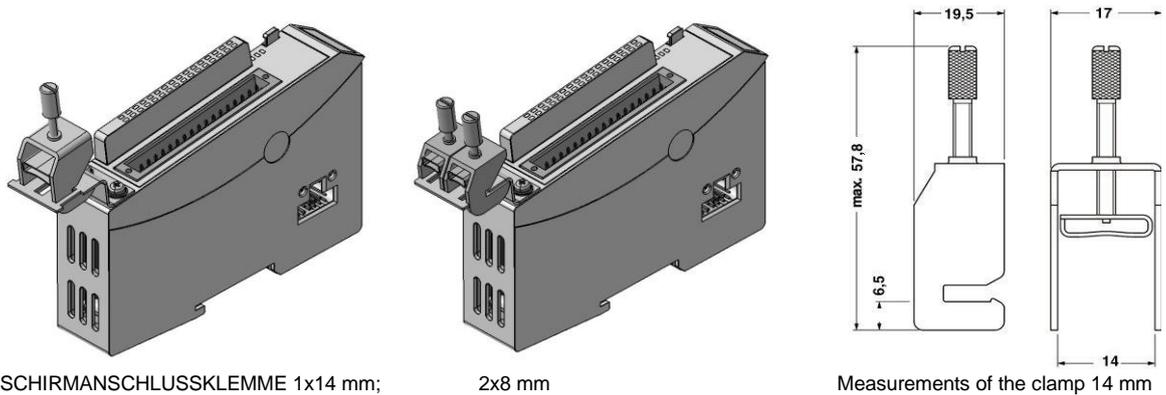

11.2.1. Terminals

The shield connection terminal block consists of the shield clamp, the clamp holder, 2 screws M3x5, 2 washers and 2 spring washers. Fasten the clamp holder with the 2 screws by using the washers and spring washers on the housing of the CANtrol E-I/O module. Use the two tapped holes on the front side below. They are provided for it.



SCHIRMANSCHLUSSKLEMME 14 mm

11.2.2. Function

The shield connection terminal block makes it easy to apply the cable shield. The shield connection terminal block conducts the potential of the cable screen on the DIN top hat rail on which the CANtrol E-I/O module is picked up.



The mounting rail must have a suitable earth connection.

The shield connection terminal blocks may not be used as strain relief. See also section 3.1.1 Earth.

11.2.3. Technical data

Shield connection terminal block

Label	SCHIRMANSCHLUSSKLEMME 2x8 mm
Part no.	204802400

Blank page

12. Annex

12.1. Environmental Protection

12.1.1. Emission

When used correctly, our modules do not produce any harmful emissions.

12.1.2. Disposal

At the end of their service life, modules may be returned to the manufacturer against payment of an all-inclusive charge to cover costs. The manufacturer will then arrange for the modules to be recycled.

12.2. Maintenance/Upkeep



Do not insert, apply, detach or touch connections while in operation – risk of destruction or malfunction.

Disconnect all incoming power supplies before working on our modules; this also applies to connected peripheral equipment such as externally powered sensors, programming devices, etc. All ventilation openings must always be kept free of any obstruction.

- The modules are maintenance-free when used correctly.
- Clean only with a dry, non-fluffing cloth.
- Do not use detergents!

12.3. Repairs/Service



Repair work may only be carried out by the manufacturer or its authorised service engineers.


12.3.1. Warranty

Sold under statutory warranty conditions. Warranty lapses in the event of unauthorised attempts to repair the equipment and/or product, or in the event of any other form of intervention.

12.4. Product identification

The product identification is on the front part and on the side part.

Product identification descriptions (example)

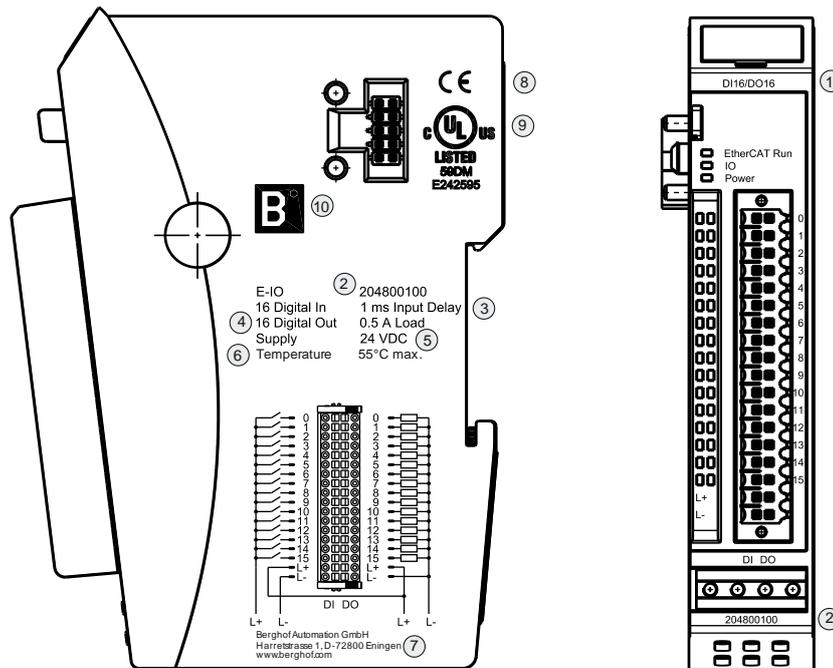

2VF100670DG00.cdr

- ① Designation of device type
- ② Item no.
- ③ Input delay
- ④ Max. current
- ⑤ Power supply
- ⑥ Temperature
- ⑦ Manufacturer's address
- ⑧ CE marking
- ⑨ UL approval
- ⑩ Brand of the manufacturer (trademark)

12.5. Addresses and Bibliography / Standards

12.5.1. Addresses

CAN in Automation; international manufacturers and users organisation for CAN users in the field of automation: → [CiA](#)

CAN in Automation e.V. (CiA)
Am Weichselgarten 26
D-91058 Erlangen / Germany
headquarters@can-cia.de
www.can-cia.de

EtherCAT Technology Group → [ETG](#)
ETG Headquarters
Ostendstraße 196
D-90482 Nuremberg / Germany
info@ethercat.org
www.ethercat.org

Beuth Verlag GmbH, 10772 Berlin → [DIN-EN Standards](#)
or

VDE-Verlag GmbH, 10625 Berlin

VDE Verlag GmbH, 10625 Berlin → [IEC Standards](#)
or

Internet search: www.iec.ch

12.5.2. Bibliography / Standards

Standard	Label
IEC61131-1 / EN61131-1	Programmable controllers Part 1: General information
IEC61131-2 / EN61131-2	Programmable controllers Part 2: Equipment requirements and tests
IEC61131-3 / EN61131-3	Programmable controllers Part 3: Programming languages
IEC61131-4 / EN61131BI1	Programmable logic controllers Supplementary Sheet 1: User guidelines
IEC61000-6-4 / EN61000-6-4	German EMC Standard: Emitted interference
IEC61000-6-2 / EN61000-6-2	German EMC Standard: Noise immunity
ISO/DIS 11898	Draft International Standard: Road vehicles - Interchange of digital information - Controller Area Network (CAN) for high-speed communication
DIN EN ISO 13849-1	Safety of machinery: Safety-related parts of control systems (Part 1)
UL 508:2013-10	Industrial Control Equipment 17th Edition / 1999-01-28

Notice: Our Technical Support team will be glad to provide other literature references on request.